

### **⚠ CAUTION**

Be sure to attach the protective cover and fix with the screws.

If the protective cover is not attached, this unit will not turn on.

### **⚠ ATTENTION**

Veillez à placer le cache de protection et à fixer avec les vis.

Si le couvercle de protection n'est pas installé, cet appareil ne s'allume pas.

### **⚠ ACHTUNG**

Bringen Sie unbedingt die Schutzabdeckung an und befestigen Sie sie mit den Schrauben.

Wenn die Schutzabdeckung nicht angebracht ist, lässt sich das Gerät nicht einschalten.

### **⚠ LET OP**

Zorg ervoor dat u de beschermkap bevestigd en vastmaakt met de schroeven.

Als de beschermkap niet is bevestigd, zal deze unit niet ingeschakeld worden.

### **⚠ ATTENZIONE**

Assicurarsi di applicare il coperchio di protezione e di fissarlo con le viti.

Se il coperchio di protezione non è applicato, questa unità non si accenderà.

### **⚠ PRECAUCIÓN**

Asegúrese de colocar la cubierta protectora y fijarla con los tornillos.

Si la cubierta protectora no está colocada, esta unidad no se encenderá.

### **⚠ ATENÇÃO**

Certifique-se de que monta a tampa de proteção e a fixa com os parafusos.

Se a tampa de proteção não estiver colocada, esta unidade não se liga.

### **⚠ ОСТОРОЖНО!**

Обязательно установите защитную крышку и закрепите ее винтами.

Если защитная крышка не установлена, устройство не включится.

### **⚠ UWAGA**

Pamiętaj, aby założyć pokrywę ochronną i zamocować ją śrubami.

Bez założenia pokrywy ochronnej włączenie tego urządzenia będzie niemożliwe.

### **⚠ POZOR**

Nezapomeňte nasadit ochranný kryt a přišroubovat jej.

Pokud ochranný kryt nenasadíte a nepřipevníte, jednotka se nezapne.

### **⚠ VIGYÁZAT**

Mindenképpen helyezze fel a védőburkolatot, és rögzítse a csavarokkal.


Ha a védőburkolatot nem helyezte fel, a készülék nem kapcsol be.

### **⚠ UPOZORNENIE**

Nezabudnite pripojiť ochranný kryt a upevniť ho pomocou skrutiek.

Ak sa ochranný kryt nepripojí, táto jednotka sa nezapne.

Protective cover  
Couvercle de protection  
Schutzabdeckung  
Beschermkap  
Coperchio di protezione  
Cubierta protectora

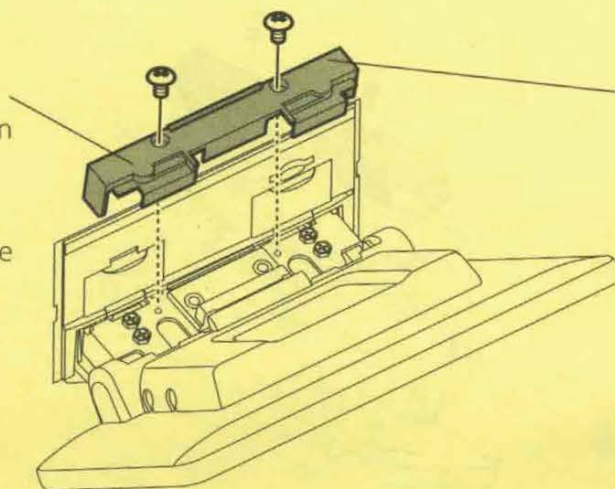

Tampa de proteção  
Защитная крышка  
Pokrywa ochronna  
Ochranný kryt  
Védőburkolat  
Ochranný kryt



# KW-Z1000W

## MONITOR WITH RECEIVER INSTRUCTION MANUAL

JVCKENWOOD Corporation


- Updated information (the latest Instruction Manual, system updates, new functions, etc.) is available from <<https://www.jvc.net/cs/car/>>.



android  
auto



Hi-Res Audio logo and Hi-Res Audio Wireless logo are used under license from Japan Audio Society.

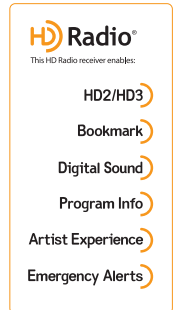

# Contents

## **Before Use 4**

Precautions.....	4
How to read this manual .....	4

## **Basic Operations 5**

Functions of the Buttons on the Front Panel ...	5
Turning on the Unit .....	6
Initial Settings.....	6
Adjusting the volume .....	9
Touch screen operations .....	9
Popup menu .....	10
HOME screen descriptions.....	11
Source selection screen description.....	12
Source control screen descriptions .....	14
List screen .....	14
Alert Message .....	15

## **Widget 16**

Widget Basic Operation .....	16
Importing Image Files.....	17

## **APPS 18**

Apple CarPlay Operation .....	18
Android Auto Operation.....	20
Wireless Mirroring Operation.....	22

## **USB 23**

Connecting a USB device .....	23
USB Basic Operation.....	23
Search Operation.....	24

## **iPod/iPhone 26**

Preparation .....	26
iPod/iPhone Basic Operation .....	27
Search Operation.....	28

## **HD Radio™ Tuner 29**

HD Radio Tuner Basic Operation.....	29
Receive Mode .....	31
Memory Operation .....	31
Selecting Operation .....	31
Bookmark.....	33
Tuner Setup.....	34

## **SiriusXM® 35**

SiriusXM® Basic Operation .....	35
Storing Channels in Preset Memory.....	37
Preset select .....	37
Direct search .....	37
Category/Channel search.....	38
Replay.....	38
TuneMix™.....	39
SmartFavorites, TuneStart™.....	39
TuneScan™.....	39
Traffic & Weather Now™.....	40
Content Alerts.....	40
SportsFlash™.....	41
SiriusXM SETUP.....	41

**Other External Components 47**

View Camera .....47  
External audio/video players (AV-IN).....49  
HDMI source .....49  
OEM Features Operation .....50

**Bluetooth Control 51**

Information for using Bluetooth® devices.....51  
Register the Bluetooth device .....52  
Bluetooth Setup.....54  
Playing the Bluetooth Audio Device .....55  
Using the Hands-Free Unit.....57  
Hands-Free Setup .....62

**Setup 63**

Monitor Screen Setup .....63  
Connections & AV Setup .....63  
Display & Button Setup .....65  
User Interface Setup.....67  
System Setup .....68  
Key Assignment Setup .....69

**Controlling Audio 71**

3-way speaker system setup .....71  
Speaker / X'over setup .....72  
Equalizer Control .....73  
Listening Position / DTA .....74  
Fader / Balance / Zone Control .....76  
Volume Offset .....78  
Sound Effect .....78  
Parametric Equalizer.....79  
Audio Setup memory .....82

**Remote control 83**

Battery Installation.....83  
Functions of the Remote control Buttons .....83

**Connection/Installation 85**

Before Installation .....85  
Installing the unit .....88

**Troubleshooting 98**

Problems and Solutions .....98  
Error Messages .....99

**Appendix 101**

Playable Media and Files..... 101  
Specifications..... 103  
About this Unit ..... 106



# Before Use

## Precautions

### ▲ WARNINGS

#### ■ To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metallic tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- If you experience problems during installation, consult your JVC dealer.

#### ■ Precautions on using this unit

- When you purchase optional accessories, check with your JVC dealer to make sure that they work with your model and in your area.
- You can select a language to display menus, audio file tags, etc. See **System Setup (P.68)**.
- The Radio Data System or Radio Broadcast Data System feature won't work in areas where the service is not supported by any broadcasting station.

#### ■ Protecting the monitor

- To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with a sharp tip.

#### ■ Cleaning the unit

- If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe it with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.

#### NOTE

- Applying spray cleaner directly to the unit may damage its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase the screened print.

#### ■ Acquiring GPS signal

The first time you turn on this unit, you must wait while the system acquires satellite signals for the first time. This process could take up to several minutes. Make sure your vehicle is outdoors in an open area away from tall buildings and trees for fastest acquisition.

After the system acquires satellites for the first time, it will acquire satellites quickly each time thereafter.

#### ■ About GLONASS

This unit uses Global Navigation Satellite System (GLONASS) in addition to GPS.

Combining GPS and GLONASS can refine positioning accuracy than using GPS only.

#### ■ Caution for Smartphone Users

Simultaneously running multiple applications on your smartphone while screen sharing places heavy demand on the microprocessor of the phone, potentially affecting communication and performance.


For best results while pairing with your JVC receiver, please be sure to close any unused applications.

## How to read this manual

- The screens and panels shown in this manual are examples used to provide a clear explanation of operations. For this reason, they may be different from the actual screens or panels, or some display patterns may be different from the actual ones.
- **Display language:** English is used for the purpose of explanation. You can select a display language from the **SETUP** menu. See **System Setup (P.68)**.

# Basic Operations

## Functions of the Buttons on the Front Panel

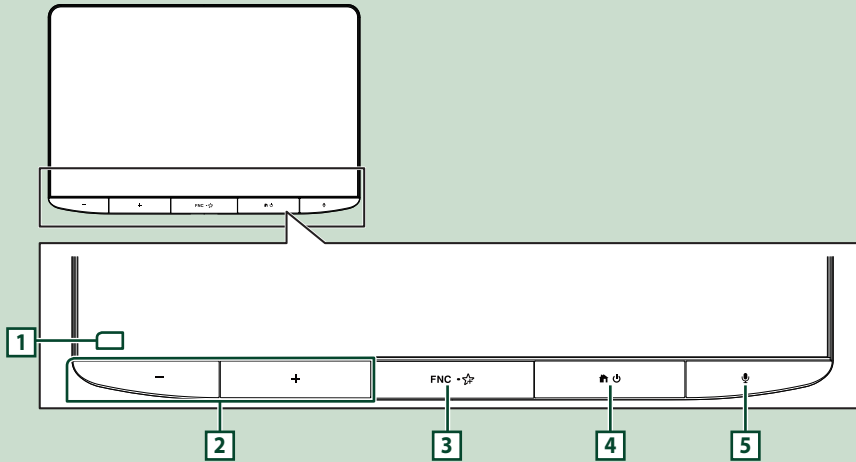

### NOTE

- The panels shown in this manual are examples used to provide a clear explanation of operations. For this reason, they may be different from the actual panels.

Number	Name	Motion
1	Remote Sensor	<ul style="list-style-type: none"> <li>Receives the remote control signal.</li> </ul>
2	-, + (Volume)	<ul style="list-style-type: none"> <li>Adjusts the volume.</li> <li>The volume will go up to 15 when you keep pressing +. <b>(P.9)</b></li> </ul>
3	FNC/★	<ul style="list-style-type: none"> <li>Displays the popup menu screen.</li> <li>Pressing and holding, displays the screen you have set in the Favorite Customize screen. <b>(P.70)</b></li> </ul>
4	Home/Power	<ul style="list-style-type: none"> <li>Displays the HOME screen <b>(P.11)</b>.</li> <li>When the power is off, turns the power on.</li> <li>Pressing and holding, turns the power off.</li> </ul>
5	Microphone	<ul style="list-style-type: none"> <li>Switches the voice recognition function on/off. See <b>(P.20, 22, 59)</b></li> <li>When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, pressing and holding displays Bluetooth pairing waiting dialog. <b>(P.52)</b></li> </ul>

## Turning on the Unit

- 1 Press the  button.




➤ The unit is turned on.

### NOTE

- If it is your first time to turn the unit on after installation, it will be necessary to perform Initial SETUP (P.6).

### ● To turn off the unit:


- 1 Press and hold the  button.  
➤ The unit is turned off.

## Initial Settings

### Initial SETUP


Perform this setup when you use this unit first time.

- 1 Set each item as follows.

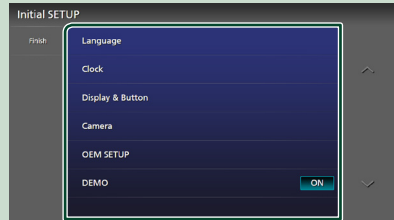

#### ■ Language

Select the language used for the control screen and setting items. Default is "American English(en)".

- ① Touch **Language**.
- ② Touch **Language Select**.
- ③ Select the desired language.
- ④ Touch .

For details, see **System Setup (P.68)**.

 
#### ■ Clock

Sets the synchronization of the clock and adjusts it.

For details, see **Calendar/clock settings (P.8)**.

#### ■ Display & Button


Set the button illumination color.

- ① Touch **Display & Button**.
- ② Touch **Button Illumination Color**.
- ③ Select the desired color.
- ④ Touch .

For details, see **Display & Button Setup (P.65)**.

#### ■ Camera

 Set the parameters for the camera.

- ① Touch **Camera**.
- ② Set each item and touch .

For details, see **Camera Setup (P.47)**.


#### ■ OEM SETUP

This function requires a commercial adaptor. Consult your JVC dealer for details.

## ■ DEMO

Set the demonstration mode. Default is "ON".

### 2 Touch Finish.

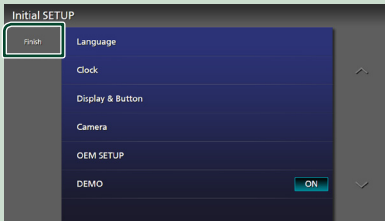

#### NOTE

- These settings can be made from the SETUP menu. See **Setup (P.63)**.

## Security Code Setup

You can set up a security code to protect your receiver system against theft.


When the Security Code function is activated, the code cannot be changed and the function cannot be deactivated. Note that the Security Code can be set with a 4 to 8 digit number of your choice.

#### Preparation

- Set **DEMO** to **OFF** in the System setting menu. (**P.68**)

### 1 Press the button.

### 2 Touch .

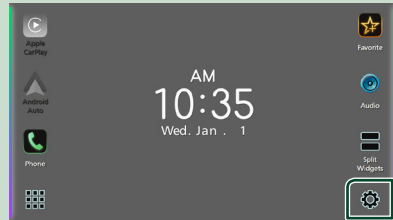

### 3 Touch **SETUP**.

- SETUP Menu screen appears.

### 4 Touch **System**.




- System setting menu appears.

### 5 Touch **Security Code Set** in the system setting menu.

- Security Code Set screen appears.

- 6 Enter a security code with 4 to 8 digits and touch **Enter**.

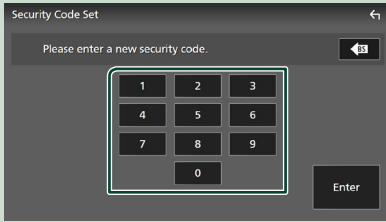

- 7 Enter the same code again and touch **Enter**.

Now, your security code is registered.

#### NOTE

- Touch **BS** to delete the last entry.
- If you enter a different security code, the procedure returns to step 6 (for first code entry).
- If you have disconnected the Receiver from the battery, enter the correct security code as that you have entered in step 6 and touch **Enter**. You can use your receiver.

#### To change the security code:

- 1 Touch **Security Code Change** on the Security screen.
  - Security Code Set screen appears.
- 2 Enter the current registered security code and touch **Enter**.
- 3 Enter a new security code with 4 to 8 digit number and touch **Enter**.
- 4 Enter the same code again and touch **Enter**.

The new security code is registered.

#### To clear the security code:

- 1 Touch **Security Code Cancellation** on the Security screen.
  - Security Code Set screen appears.
- 2 Enter the current registered security code and touch **Enter**.

The security code is cleared.

## Calendar/clock settings

- 1 Press the **Home/Power** button.
- 2 Touch **Settings**.
- 3 Touch **SETUP**.
  - SETUP Menu screen appears.
- 4 Touch **System**.
  - System setting menu appears.

- 5 Set each item as follows.

Scroll the page to show hidden items.



#### ■ Time Format

Select the time display format.

**12-Hour** (Default) / **24-Hour**

#### ■ Clock

**GPS-SYNC** (Default): Synchronizes the clock time with the GPS.

**Manual**: Set the clock manually.

#### ■ Time Zone

Select the time zone.

#### ■ Clock Adjust

If you select **Manual** for Clock, adjust the date and time manually. **(P.8)**

#### NOTE

- Please set the date and time. If they are not set, some functions may not work.


#### Adjust the date and time manually

- 1 Touch **Clock** in the System setting menu.
- 2 Select **Manual**.
- 3 Touch **Time Zone** in the System setting menu.
- 4 Select the time zone.



**5** Touch **Clock Adjust** in the System setting menu.

**6** Adjust the date, then adjust the time.

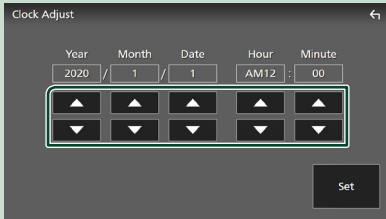


**7** Touch **Set**.

## Adjusting the volume

You can adjust the volume (0 to 40).

Press **+** to increase, and press **-** to decrease.

Holding **+** increases the volume continuously to level 15.

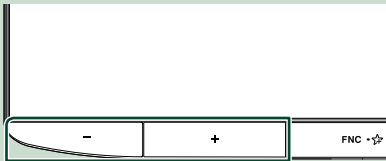


## Touch screen operations

To perform operations on the screen, you need to touch, touch and hold, flick or swipe to select an item, display a setting menu screen or change pages.


### ● Touch

Touch the screen gently to select an item on the screen.

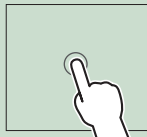

### ● Touch and hold

Touch the screen and keep your finger in place until the display changes or a message is displayed.

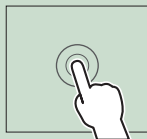


### ● Flick

Slide your finger quickly to the left or right on the screen to change the page. You can scroll a list screen by flicking up/down on the screen.



### ● Swipe


Slide your finger up or down on the screen to scroll the screen.

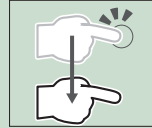

### Gesture Touch Control:

You can also control playback by moving your finger on the touch panel as follows (for some sources, the gesture touch control function is not available).


- Sliding the finger upward/downward: Equivalent to the operation of pressing **+** / **-** (Media). Tuner Preset broadcast stations are switched.
- Sliding the finger leftward/rightward: Equivalent to the operation of pressing **◀** / **▶**.
- Moving your finger clockwise or counter-clockwise: Increases/decreases the volume.

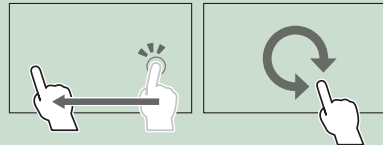

On the HOME screen, you can control the widget by sliding two fingers. **(P.16)**

## Popup menu

**1** Press the **FNC** /  button.

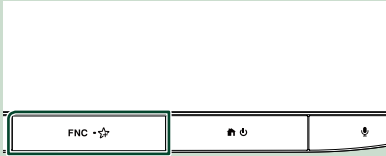
 








➤ Popup menu appears.

**2** Touch to display the popup menu.



 The contents of the menu are as follows.


	<ul style="list-style-type: none"> <li>Displays the control screen of current source. Icon feature differs depending on the source. This icon is for USB source.</li> </ul>
	<ul style="list-style-type: none"> <li>Switches between screens. The screen to be switched to depends on the <b>DISP Key</b> setting in the Key Assignment setting menu. <b>(P.69)</b></li> <li>Touch and hold to turns the screen off.</li> </ul>
	<ul style="list-style-type: none"> <li>Displays the Screen Adjustment screen. <b>(P.63)</b></li> </ul>
	<ul style="list-style-type: none"> <li>Close the popup menu.</li> </ul>
	<ul style="list-style-type: none"> <li>Displays the Device List screen. <b>(P.52)</b></li> </ul>
	<ul style="list-style-type: none"> <li>Displays the SETUP Menu screen.</li> </ul>
<b>1</b>	<ul style="list-style-type: none"> <li>Function key 1 to 3: The current screen changes to the one you have set. The function key 1 and 2 are set to <b>Camera</b> and <b>Speaker</b> function as default. For the function setting, refer to <b>Customize popup menu functions (P.70)</b>.                             <ul style="list-style-type: none"> <li>: Displays the view camera screen. <b>(P.47)</b></li> <li>: Displays the Audio screen. <b>(P.71)</b></li> </ul> </li> <li>Touch and hold to display the Customize FNC Menu screen. <b>(P.70)</b></li> </ul>

**2**

 - Short-cut source icons: The source changes to the one you have set with a short-cut. For the short-cut setting, refer to **Customize Short-cut source icons (P.13)**.

## Turn off the screen

**1** Touch and hold **DISP** on the popup menu.




### NOTE

- Touch the display to turn on the screen.
- To display the clock while the screen is off, it is necessary to set "OSD Clock" to "ON". **(P.65)**

## HOME screen descriptions

Most functions can be performed from the HOME screen.

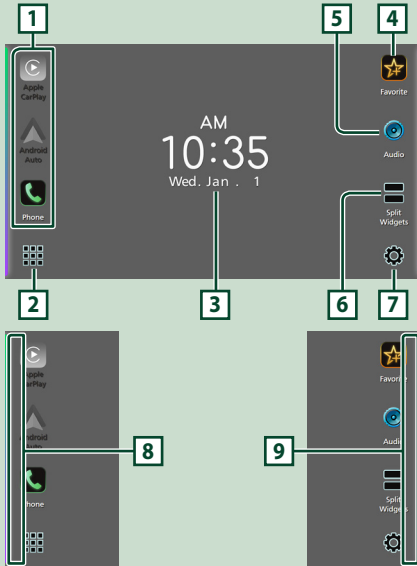

- |          |                                                                                                                                        |
|----------|----------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> | • Short-cut playback source icons <b>(P.13)</b>                                                                                        |
| <b>2</b> | • Displays the source selection screen. <b>(P.12)</b>                                                                                  |
| <b>3</b> | • Widget <b>(P.16)</b><br>– You can change the display to big widget or split widgets mode by sliding 2 fingers upward/downward.       |
| <b>4</b> | • Displays the screen you have set in the Favorite Customize screen. <b>(P.70)</b>                                                     |
| <b>5</b> | • Displays the Audio screen. <b>(P.71)</b>                                                                                             |
| <b>6</b> | • Switches between the big widget and the split widgets mode. <b>(P.16)</b>                                                            |
| <b>7</b> | • Displays the SETUP screen. <b>(P.63)</b>                                                                                             |
| <b>8</b> | • Swipe your finger from left hand side to right hand side on the screen to display the widget selection menu. <b>(P.16)</b>           |
| <b>9</b> | • Swipe your finger from right hand side to left hand side on the screen to display the setting menu for some functions. <b>(P.11)</b> |

## Display the HOME screen

- 1 Press the / button.




➤ HOME screen appears.

### Display the setting menu for some functions

Swipe your finger from right hand side to left hand side on the screen, the setting menu for some functions is appeared.

You can set the following functions.

- Preset EQ curve \*<sup>1</sup>
- Bass EXT (Bass Extend Settings) \*<sup>1</sup>
- SW Level \*<sup>1</sup>
- Air conditioner \*<sup>2</sup>

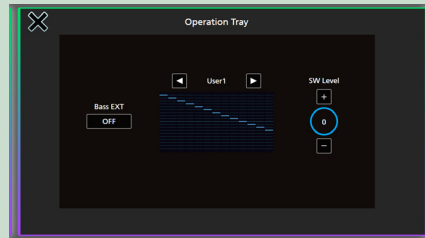

\*<sup>1</sup> For detailed setting of the functions, see **Equalizer Control (P.73)**.

\*<sup>2</sup> Only when the iDatalink (commercially available) is connected.

## Source selection screen description

You can display icons of all playback sources and options on the source selection screen. To change pages, flick your finger leftward/rightward on the screen.



- 1** • Changes playback sources. For playback sources, see **Select the playback source (P.12)**.
- 2** • Page indication
- 3** • Returns to the previous screen.
- 4** • Displays the SETUP screen. **(P.63)**

## Select the playback source

**1** Press the / button.  
➤ HOME screen appears.

**2** Touch .

From the screen, you can select the following sources and functions.

	• Switches to the Apple CarPlay screen from the connected iPhone. <b>(P.18)</b>
	• Switches to the Android Auto screen from the connected Android smartphone. <b>(P.20)</b>
	• Displays the Hands-Free screen. <b>(P.57)</b> When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, displays Bluetooth pairing waiting dialog. <sup>*1</sup> <b>(P.52)</b>
	• Switches to the HD Radio broadcast. <b>(P.29)</b>
	• Switches to the SiriusXM® satellite radio broadcast. <b>(P.35)</b>
	• Plays a Bluetooth audio player. <b>(P.55)</b>
	• Plays an iPod/iPhone. <b>(P.26)</b>
	• Plays files on a USB device. <b>(P.23)</b>
	• Switches to an external component connected to the AV Audio input and the Video input terminal. <sup>*2 *3</sup> <b>(P.49)</b>
	• Displays the Wireless Mirroring screen. <b>(P.22)</b>
	• Turns off the AV source. <b>(P.13)</b>

• For sources and information displayed when an iDataLink is connected, see **OEM Features Operation (P.50)**.

<sup>\*1</sup> When connecting as Apple CarPlay or Android Auto, it works as a phone provided in Apple CarPlay or Android Auto. If Apple CarPlay or Android Auto are connected during talking by the Bluetooth device or iDataLink phone, the current call will be continued.

\*2 You can use the **AV-IN** source when a cable from a visual source except a camera is connected to the Video input terminal, and a cable is connected to the AV Audio input terminal. (P.94)

\*3 Set "VIDEO IN" to "None" in Camera Assignment Settings. (P.48)

### To select the playback source on the HOME screen




The 3 items displayed on the left side of the source selection screen are shown on the HOME screen.


You can change the items displayed on this area by customizing the source selection screen. (P.13)

### To turn off the AV source

**1** Press the **Home/Power** button.  
 ► HOME screen appears.

**2** Touch .


**3** Touch **AV Off**.

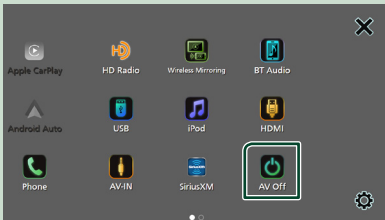

### Customize Short-cut source icons


You can arrange the positions of the source icons as you like.

**1** Press the **Home/Power** button.  
 ► HOME screen appears.


**2** Touch .

**3** Touch and hold the icon which you want to move in the customizing mode.

**4** Drag the icon to the desired position.

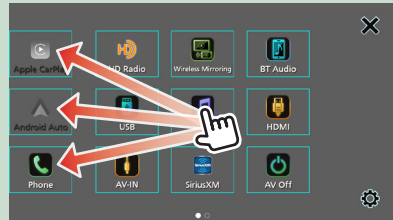

Changes the page

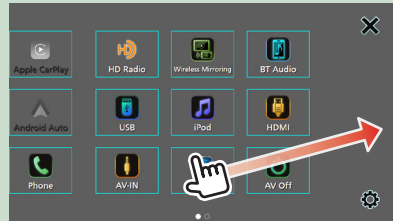



## Source control screen descriptions

There are some functions which can be performed from most screens.



**1** Displays the source selection screen. (P.12)

**2** Displays the SETUP Menu screen. (P.63)

**3 Short-cut source icons**  
The source changes to the one you have set with a short-cut. For the short-cut setting, refer to **Customize Short-cut source icons (P.13)**.

**4 Function panel \***  
Touch the right side of the screen to display the function panel. Touch again to close the panel.

**5** Connected Bluetooth device information.

**6 Indicator items**  
Displays the current source condition and so on.  
 - **ATT**: The attenuator is active.  
 - **DUAL**: The dual zone function is active.  
 - **LOUD**: The loudness control function is active.

**7 Content list \***  
Displays the track/file/station/channel list.

**8 Operation keys**  
You can operate the current source with these operation keys. The available functions are different depending on the source type.

\* For right hand drive vehicles, the left and right drawers are swapped. For how to set up the driving position, see **User Interface Setup (P.67)**.

## List screen

There are some common function keys in the list screens of most sources.  
(P.24, 28, 57)

### Display the list screen


#### For USB/iPod:

**1** Touch or the item listed on the information area in the source control screen.  
 > The list screen appears.

#### For Bluetooth audio:

**1** Touch .  
 > The list screen appears.

You can use following operation keys from this screen.

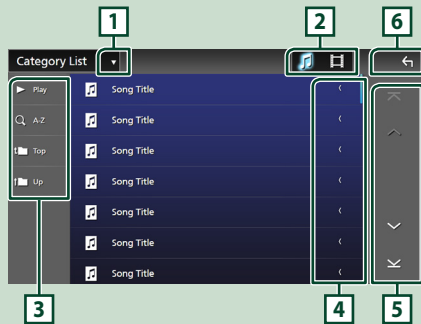

**1** Displays the list type selection window.



**2** Displays a music/movie file list.

**3** **etc.**  
Keys with various functions are displayed here.


- **Play**: Plays all tracks in the folder containing the current track.
- **A-Z**: Jumps to the letter you entered (alphabetical search).
- **Top Up**: Moves to the upper hierarchy level.

**4** **Text scroll**  
Scrolls the displayed text.

**5**  /  /  /  **Page scroll**

 You can change pages to display more items by touching  / .

-  /  : Displays the top or bottom page.

**6**  **Return**

Returns to the previous screen.


**NOTE**

- Depending on the current source or mode, some function key may not appear.

## Alert Message

This function is to receive alert messages. First, you need to turn on the “Emergency Alerts” on the HD Radio source control screen. (P.30)


### When an Alert Message comes

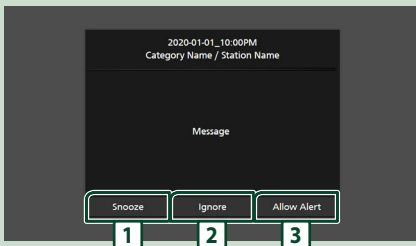


- 1 • The alert message is erased. Same alert message cannot be displayed for next 10 minutes.
- 2 • The alert message is erased. Same alert message cannot be displayed for next 12 hours.
- 3 • Touch to tune to that channel of HD Radio source.


## Display of the received Alert Message

You can read the received alert message afterward.


- 1 Touch  on the right side of the HD Radio source control screen. Touch **Alert Message Log**.

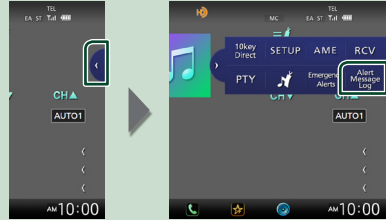

- 2 Select the desired Alert Message from the list.

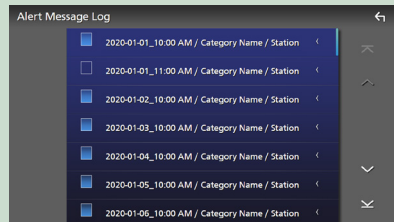

► The Alert Message appears.

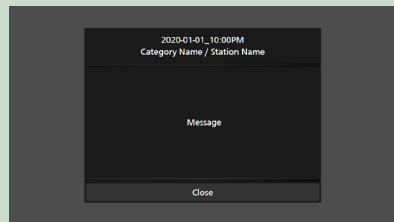


- 3 Touch **Close**.

# Widget

## Widget Basic Operation

### Big widget

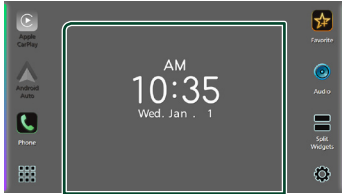

### Split widgets



### Widget list

- Clock Widget
- Current source information Widget
- Spectrum analyzer/VU meter Widget
- Climate/TPMS/Radar/ADAS Widget \*1
- Compass Widget
- HDMI Widget \*2
- Camera Widget \*2
- Photo Frame Widget

\*1 Displayable widgets vary depending on the type of the connected iDataLink (commercially available) and the model of the vehicle.

\*2 Only when the big widget mode is selected.


### ● To change the widget style

Touch the widget area. You can change the displayed information or design.

### ● To change the widget


Slide two fingers leftward/rightward.


When the split widgets mode is selected, you should put the fingers on each of the windows before slide.

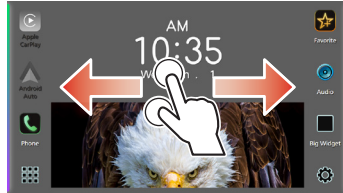

### ● To select the widget

Swipe your finger from the left edge on the display to right hand side to display the widget selection menu.

Touch  to return to the HOME screen.

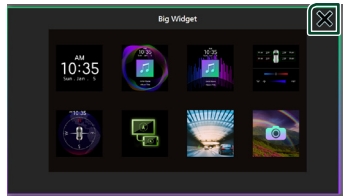



### ● To change the widget format

Slide two fingers upward/downward to switch between the big widget mode and the split widgets mode.



### NOTE

- You can also change the widget format by touching  /  on the HOME screen. (P.11)

## Photo Frame Widget

You can display a slideshow of the image files stored in your iPhone or Android smartphone.

### Preparation

- See **Importing Image Files (P.17)**.

## Importing Image Files

You can display image files stored in your iPhone or Android smartphone by connecting your iPhone or Android smartphone in which the "JVC Portal APP" application is installed to this unit.

The image files are displayed on the photo frame widget. Also, you can set an image as the wallpaper.

See **Photo Frame Widget (P.17)** and **To register an original image (P.66)**.

### Preparation

- Install the latest version of the JVC Portal APP application on your iPhone or Android.
  - iPhone: Search for "JVC Portal APP" in the Apple App Store to find and install the most current version.
  - Android: Search for "JVC Portal APP" in Google play to find and install the most current version.
- For details, see "JVC Portal APP" application.

## 1 Connect the device.

- To connect a device via Bluetooth, register it as the Bluetooth device and do the App (SPP) profile setting of the connection beforehand. See **Register the Bluetooth device (P.52)** and **Switch the connected device (P.53)**.
- Connect an iPhone using KS-U62 via the USB terminal. **(P.96)**

## 2 Unlock your device.

# APPS

## Apple CarPlay Operation

Apple CarPlay is a smarter, safer way to use your iPhone in the car. Apple CarPlay takes the things you want to do with iPhone while driving and displays them on the screen of the product. You can get directions, make calls, send and receive messages, and listen to the music from iPhone while driving. You can also use Siri voice control to make it easier to operate iPhone.

For details about Apple CarPlay, visit <https://www.apple.com/ios/carplay/>.

### Compatible iPhone devices

You can use Apple CarPlay with the following iPhone models.

- iPhone XS Max
- iPhone XS
- iPhone XR
- iPhone X
- iPhone 8 Plus
- iPhone 8
- iPhone 7 Plus
- iPhone 7
- iPhone SE
- iPhone 6s Plus
- iPhone 6s

## Connecting an iPhone

### Wired connection

#### 1 Connect your iPhone using KS-U62 via the USB terminal. (P.96)

When an iPhone compatible with Apple CarPlay is connected to the USB terminal, the Bluetooth Hands-Free phone currently connected is disconnected. If another Bluetooth Hands-Free phone is being used, disconnection will occur after ending the call.

#### 2 Unlock your iPhone.

### Wireless connection

You can select the iPhone registered in **Device List** and use it as the Apple CarPlay device. See **Register the Bluetooth device (P.52)**.

 
#### NOTE

- Turn on the Bluetooth function and Wi-Fi function of an iPhone.
- If two or more iPhone have been registered, select the iPhone to be used as the **Apple CarPlay** source. (P.19)
- It is necessary to connect the GPS antenna in order to use a wireless Apple CarPlay.
- When the Wi-Fi connection becomes unavailable, the HOME screen is displayed.
- You cannot use Apple CarPlay if the function is turned off by operating the iPhone at functional setup.



## To switch the current screen to the Apple CarPlay screen when connecting your iPhone

- Touch **Apple CarPlay** icon on the source selection screen. (P.12)
- Touch the following connection message if the message appears.



### NOTE

- The connection message appears when;
  - The iPhone you used previously is connected again.
  - The screen other than HOME and the source selection screen is displayed.
- The connection message is displayed for about 5 seconds.


## Select an Apple CarPlay device

If two or more iPhone compatible with Apple CarPlay have been registered, select the iPhone to be used as the Apple CarPlay source. See **Switch the connected device** (P.53).

## Operation keys and available Apps on the home screen of Apple CarPlay

You can use the Apps of the connected iPhone. The items displayed and the language used on the screen differ among the connected devices.

To enter the Apple CarPlay mode, touch **Apple CarPlay** icon on the source selection screen. (P.12)

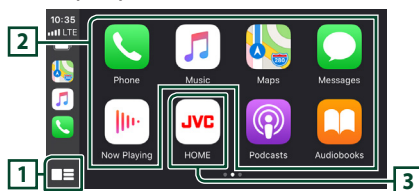

### 1

- Displays the home screen of Apple CarPlay.
- Touch and hold to activate Siri.

### 2 Application keys

Starts the application.

### 3 HOME

Exits the Apple CarPlay screen and displays the HOME screen.

\* The icon design may change depending on the iOS version.


## To exit the Apple CarPlay screen

- 1 Press the **Home/Power** button.
  - HOME screen appears.

## Use Siri

You can activate Siri.

- 1 Press the  button.

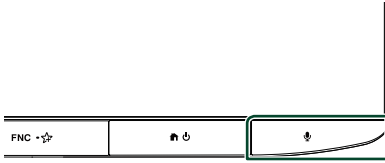


- 2 Talk to Siri.


### To deactivate

 - 1 Press the  button.

## Switch to the Apple CarPlay screen while listening to another source

- 1 Press the **FNC** /  button.
  - Popup menu appears.

- 2 Touch **DISP**.



### NOTE

- This operation is available when **DISP Key** is set to **Mirroring** in the Key Assignment setting menu. **(P.69)**
- When listening to another source with the Apple CarPlay screen displayed, playing music in the Apple CarPlay mode will switch the current source to the Apple CarPlay source.

## Android Auto™ Operation

Android Auto enables you to use the functions of your Android smartphone convenient for driving. You can easily access route guidance, make calls, listen to music, and access convenient functions on the Android smartphone while driving.

For details about Android Auto, visit <https://www.android.com/auto/> and <https://support.google.com/androidauto>.

### Compatible Android smartphones

You can use Android Auto with Android smartphones of Android version 5.0 or later. For Wi-Fi connection, Android 8.0 or later.

### NOTE

- Android Auto may not be available on all devices and may not be available in all countries or regions.

### ● About the placement of smartphone

Install the smartphone connected as Android Auto device in the place where it can receive the GPS signals.

When using Google Assistant, install the smartphone in the place where the smartphone easily catch a voice by the microphone.

### NOTE

- Do not put the smartphone in a spot exposed to direct sunlight or near an air blowing out port of an air conditioner. The placement of the smartphone in such places can lead to malfunction or damage of your smartphone.
- Do not leave the smartphone in the vehicle.

## Connect Android smartphone

### Wired connection

#### 1 Connect an Android smartphone via the USB terminal. (P.96)

To use the hands-free function, connect the Android smartphone via Bluetooth.

When an Android smartphone compatible with Android Auto is connected to the USB terminal, the smartphone is connected via Bluetooth automatically, and the Bluetooth Hands-Free phone currently connected is disconnected.

#### 2 Unlock your Android smartphone.

#### 3 Press the / button.

#### 4 Touch .

#### 5 Touch **Android Auto**. (P.12)

### Wireless connection

You can select the Android smartphone registered in **Device List** and use it as the Android Auto device. See **Register the Bluetooth device** (P.52).

#### 1 Press the / button.

#### 2 Touch .

#### 3 Touch **Android Auto**. (P.12)

#### NOTE

- Turn on the Bluetooth function and Wi-Fi function of Android smartphone.
- If two or more Android smartphones have been registered, select the Android smartphone to be used as the Android Auto source. (P.21)
- To change the password for wireless connection manually, refer to **Reset Android Auto Wireless Connection** (P.64).
- When the Wi-Fi connection becomes unavailable, the HOME screen is displayed.

## Select an Android smartphone


If two or more Android smartphones have been registered, select the Android smartphone to be used as the Android Auto source. See **Switch the connected device** (P.53).

## Operation keys and available Apps on the Android Auto screen

You can perform the operations of the Apps of the connected Android smartphone.

The items displayed on the screen differ among the connected Android smartphones.

To enter the Android Auto mode, touch the **Android Auto** icon on the source selection screen. (P.12)

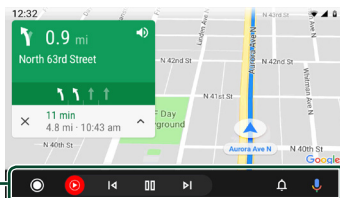

#### 1 Navigation bar

Starts the application or displays information.


### To exit the Android Auto screen

#### 1 Press the / button.

- HOME screen appears.

## Using voice control

1 Press the  button.

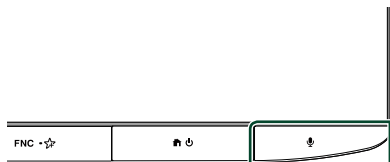

2 Start speaking.

### NOTE

- When you press and hold the **VOICE** button while inputting voice, you can start over from the beginning.

### To cancel

 
1 Press the  button.

## Switch to the Android Auto screen while listening to another source

1 Press the **FNC** /  button.

- Pop up menu appears.

2 Touch **DISP**.



### NOTE

- This operation is available when **DISP Key** is set to **Mirroring** in the Key Assignment setting menu. (P.69)
- When listening to another source with the Android Auto screen displayed, playing music in the Android Auto mode will switch the current source to the Android Auto source.

## Wireless Mirroring Operation

You can display the same screen of the Android smartphone on the monitor of the unit using the Wireless Mirroring function of the Android smartphone.

### Preparation

- You can use the Wireless Mirroring function with Android smartphones compatible with this function.
- This function may be called Wireless Display, Screen Mirroring, AllShare Cast, etc., depending on the manufacturer.
- The settings on the Android smartphone differ depending on the device type. For details, refer to the instruction manual supplied with your Android smartphone.
- If your Android smartphone is locked, Mirroring screen may not appear.
- If the Android smartphone is not ready for UIBC, you cannot perform touch operation.

1 Press the  button.

- HOME screen appears.

2 Touch .

3 Touch **Wireless Mirroring** . (P.12)

- The App screen is displayed.

4 Operate your Android smartphone to activate the Wireless Mirroring function, then connect to this unit.

5 Select “KW-Z1000W” as the network to use.

- When the connection is established, then the same screen displayed on the Android smartphone is displayed.


### NOTE

- Apps is discontinued when the power is turned ON/OFF or you leave the vehicle. To restart Apps, operate the Android smartphone.
- When the Apps source is displayed, you cannot register or reconnect a Bluetooth device. Switch the Apps source to another source, and then operate the Bluetooth device.

# USB

## Connecting a USB device

- 1 Connect the USB device with the USB cable. (P.95)

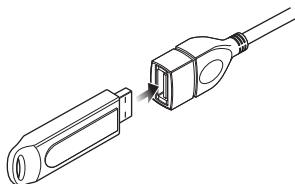

- 2 Press the button.  
➤ HOME screen appears.

- 3 Touch .

- 4 Touch **USB**. (P.12)

### Disconnect the USB device

- 1 Press the button.  
➤ HOME screen appears.

- 2 Touch a source other than **USB**.

- 3 Detach the USB device.

### Usable USB device

You can use a mass-storage-class USB device with this unit.

The word "USB device" appearing in this manual indicates a flash memory device.

#### ● About the file system

The file system should be the one of the following.

- FAT16    • FAT32    • exFAT    • NTFS


#### NOTE

- Install the USB device in the place where it will not affect safe driving.
- You cannot connect a USB device via a USB hub and Multi Card Reader.
- Take backups of the audio files used with this unit. The files can be erased depending on the operating conditions of the USB device. We shall have no compensation for any damage arising from any erased data.



## USB Basic Operation

Most functions can be controlled from the source control screen and playback screen.

### Control screen

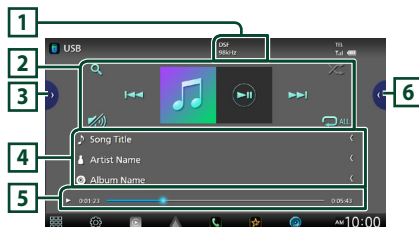

### Open the drawer

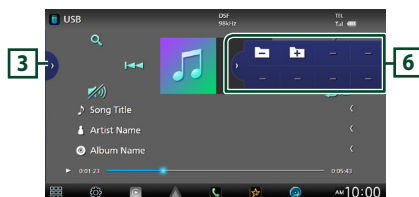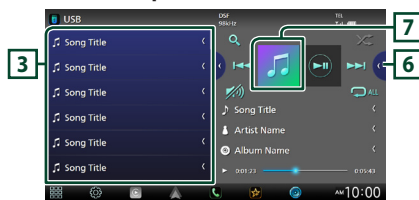

### 1 CODEC

When a high-resolution source is played, its format information is displayed.

### 2 Operation keys

- : Searches track/file. For details on search operation, see **Search Operation (P.24)**.
- : Searches the previous/next track/file.  
Touch and hold to fast forward or fast backward. (It will be cancelled automatically after about 50 seconds.)
- : Plays or pauses.
- : Touch to attenuate/restore the sound.



- : Repeats the current track/folder. Each time you touch the key, repeat modes are switched in the following sequence: File repeat ( ), Folder repeat ( ), Repeat all ( )
- : Randomly plays all tracks in the current folder. Each time you touch the key, random modes are switched in the following sequence: Folder random ( ), Random off ( )

### 3 Content list

- Touch the left side of the screen to display the Content list. Touch again to close the list.
- Displays the playing list. When you touch a track/file name on the list, playback will start.

### 4 Track information

- Displays the information on the current file. Only a file name and a folder name are displayed if there is no tag information.

### 5 Play mode indicator/Playing time

- , , etc.: Current play mode indicator. Meanings of individual icons are as follows: (play), (fast forward), (fast backward), (pause).
- For confirmation of current playing position. You can drag the circle left or right to change the playing position.



### 6 Function panel

Touch the right side of the screen to display the function panel. Touch again to close the panel.

- : Searches for the previous/next folder.

### 7 Artwork

- The jacket of the currently playing file is displayed.

## Search Operation


You can search music or video files by the following operations.

### 1 Touch .

### 2 Touch .



### 3 Select a list type.

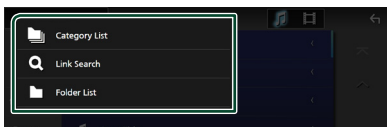

#### NOTE

- For operations on the list screen, see **List screen (P.14)**.


## Category search

You can search for a file by selecting a category.

### 1 Touch **Category List**.

### 2 Select whether you search audio files or video files .

### 3 Touch the desired category.

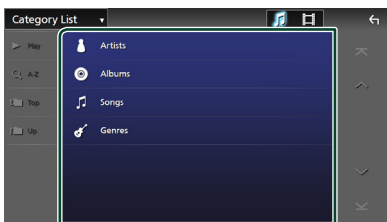


- The list corresponding to your selection appears.

### 4 Touch to select the desired item in the list. Repeat this step until you find the desired file.

## Link search (Audio file only)

You can search for a file of the same artist/album/genre as that in the current track.

- 1 Touch **Link Search**.
- 2 Touch the desired tag type. You can select from artists, albums and genres.

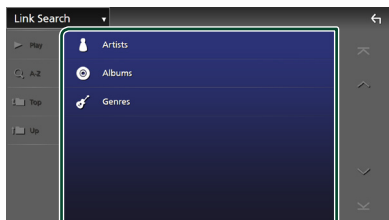


- The list corresponding to your selection appears.

- 3 Touch the desired item in the content list.

## Folder search

You can search for a file according to hierarchy.

- 1 Touch **Folder List**.
- 2 Touch the desired folder.

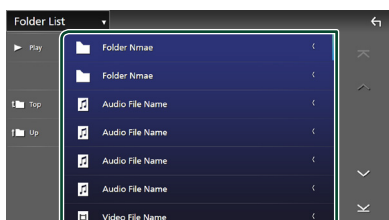

When you touch a folder its contents are displayed.

- 3 Touch to select your desired item in the list. Repeat this step until you find the desired file.

# iPod/iPhone

## Preparation

### Connectable iPod/iPhone

The following models can be connected to this unit.

Made for

- iPhone XS Max
- iPhone XS
- iPhone XR
- iPhone X
- iPhone 8 Plus
- iPhone 8
- iPhone 7 Plus
- iPhone 7
- iPhone SE
- iPhone 6s Plus
- iPhone 6s
- iPod touch (6th generation)

#### NOTE

- Latest compatible list of iPod/iPhone. For details, see [www.jvc.net/cs/car/ipod/](http://www.jvc.net/cs/car/ipod/).
- By connecting your iPod/iPhone to this unit with the iPod connection cable KS-U62 (optional accessory), you can supply power to your iPod/iPhone as well as charge it while playing music. Note that the power of this unit must be held on.
- If you restart playback after connecting the iPod, the music that has been played by the iPod is played first.

### Connect iPod/iPhone

#### Wired connection

##### Preparation

- Connect an iPod/iPhone with the KS-U62 (optional accessory) while Apple CarPlay is not connected.
- With an iPhone compatible with Apple CarPlay, turn off Apple CarPlay by operating the iPhone at functional setup before connecting iPhone. For details of the setup method, contact the manufacturer of the terminal.
- Plug the iPod/iPhone into the USB terminal with the KS-U62 (optional accessory).
- Only one iPod/iPhone can be connected.

#### 1 Connect the iPod/iPhone using the KS-U62. (P.96)

#### 2 Press the / button. ➤ HOME screen appears.

#### 3 Touch .

#### 4 Touch iPod. (P.12)

#### ● To disconnect the iPod/iPhone connected with the cable:

#### 1 Detach the iPod/iPhone.

#### Bluetooth connection

Pair the iPhone through Bluetooth.

##### Preparation


- To connect an iPhone via Bluetooth, register it as a Bluetooth device and do the profile setting for the connection beforehand. See **Register the Bluetooth device (P.52)** and **Switch the connected device (P.53)**.
- Connect an iPhone via Bluetooth while Apple CarPlay and an iPod/iPhone are not connected via USB.
- With an iPhone compatible with Apple CarPlay, turn off Apple CarPlay by operating the iPhone at functional setup before connecting iPhone. For details of the setup method, contact the manufacturer of the terminal.

## ● Select the method of making connections for outputting sound from the iPod source


- 1 Press the **Home/Power** button.
- 2 Touch **Settings**.
- 3 Touch **SETUP**.
  - SETUP Menu screen appears.
- 4 Touch **Connections & AV**.
  - Connections & AV setting menu appears.
- 5 Touch **iPod Bluetooth Connection**.
  - Bluetooth** (Default): Output sound using a Bluetooth device.
  - Bluetooth+HDMI**: Output sound using an HDMI device and perform music selection, etc. using a Bluetooth device.

## iPod/iPhone Basic Operation

### Control screen

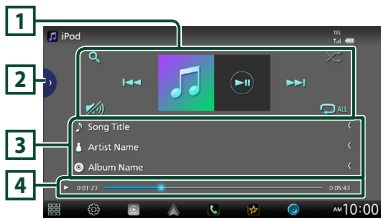

### Open the drawer

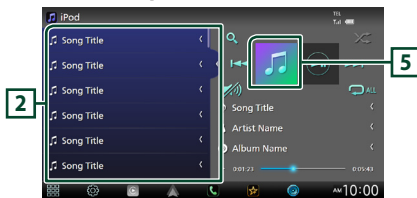

## 1 Operation keys

- **Search** : Searches for a track/file. For details on search operation, see **Search Operation (P.28)**.
- **Previous/Next** : Searches for the previous/next track/file.  
Touch and hold to fast forward or fast backward. (It will be cancelled automatically after about 50 seconds.)
- **Play/Pause** : Plays or pauses.

- **Volume** : Touch to attenuate/restore the sound.
- **Repeat** : Repeats the current track/album. Each time you touch the key, repeat modes are switched in the following sequence: Song repeat ( **Repeat** ), All songs repeat ( **Repeat All** ), Repeat off ( **Repeat Off** )
- **Shuffle** : Randomly plays all tracks in the current album. Each time you touch the key, random modes are switched in the following sequence: Song random ( **Shuffle** ), Random off ( **Shuffle Off** )

## 2 Content list

- Touch the left side of the screen to display the Content list. Touch again to close the list.
- Displays the playing list. When you touch a track/file name on the list, playback will start.

### NOTE

- The Content list is not displayed unless you select a file from the category list and play it. To use the category list, see **Search Operation (P.28)**.

## 3 Track information

- Displays the information on the current file.
- Touch to display the category list screen. See **Category search (P.28)**.

## 4 Play mode indicator/Playing time

- **Play mode indicator**: Current play mode indicator  
Meanings of individual icons are as follows:  
▶ (play), ▶▶ (fast forward), ◀◀ (fast backward), || (pause).
- For confirmation of current playing position. You can drag the circle left or right to change the playing position.



## 5 Artwork

- The jacket of the currently being played file is displayed.

## Search Operation

 
You can search music files by the following operations.

1 Touch **Q**.

2 Touch **▼**.



3 Select a list type.



### NOTE


- For operations on the list screen, see **List screen (P.14)**.

## Category search

You can search for a file by selecting a category.

1 Touch **Category List**.

2 Touch the desired category.

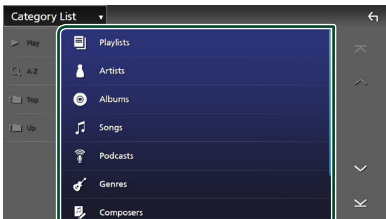

- The list corresponding to your selection appears.


3 Touch to select the desired item in the list. Repeat this step until you find the desired file.

## Link search

You can search for a file of the same artist/album/genre/composer as that in the current track.

1 Touch **Link Search**.

2 Touch the desired tag type. You can select from artists, albums, genres and composers.

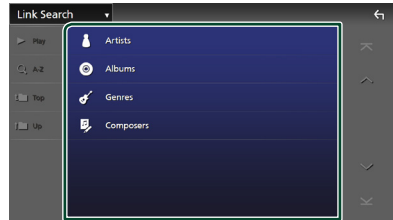

- The list corresponding to your selection appears.

3 Touch the desired item in the content list.

# HD Radio™ Tuner

## HD Radio Tuner Basic Operation


Most functions can be controlled from the source control screen.

To listen to the HD Radio source, touch **HD Radio** icon on the source selection screen. (P.12)



### NOTE

- HD Radio broadcasting is for North American sales area only.

### Control screen

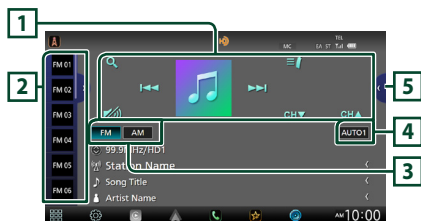

### Open the drawer

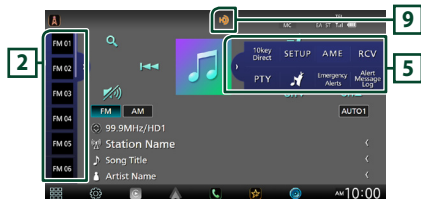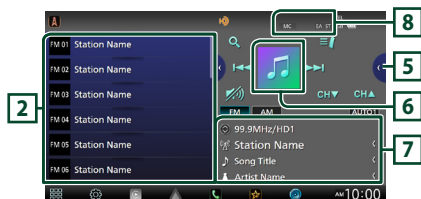

### 1 Operation keys

- **◀▶** : Tunes in a station. The method of switching frequencies can be changed (see **4** Seek mode).
- **CH▼ CH▲** : Selects a channel.
- **🔍** : Display the Channel List screen. See **Channel search (P.32)**.
- **📌** : Display a list of registered bookmarks. See **Bookmark list (P.33)**.
- **🔊** : Touch to attenuate/restore the sound.

### 2 Preset list

- Touching **📌/📌** allows you to change the display size.
- Recalls the memorized station or channel.
- When touched for 2 seconds, stores the currently being received station or channel in the memory.

### 3 Band keys

Switches bands (between FM and AM).

### 4 Seek mode


Touch to switch seek mode in the following sequence: **AUTO1**, **AUTO2**, **MANUAL**.

- **AUTO1** : Tunes in a station with good reception automatically.
- **AUTO2** : Tunes in the memorized stations one after another.
- **MANUAL** : Switches to the next frequency manually.

### 5 Function panel

Touch the right side of the screen to display the function panel. Touch again to close the panel.


- **10key Direct** : Display the direct station/channel search screen. For details, see **Direct search (P.32)**.
- **SETUP** (FM only): Displays the TUNER SETUP screen. For details, see **Tuner Setup (P.34)**.
- **AME** : Presets stations automatically. For details, see **Auto memory (P.31)**.
- **RCV** : Change the HD Radio reception mode. For details, see **Receive Mode (P.31)**.
- **PTY** (FM only): Searches for a program by program type. For details, see **Search by program type (P.32)**.

-  : Stores the information about the song being received. See **Bookmark (P.33)**.
- **Emergency Alerts** : Turn on or off the alert message. See **Alert Message (P.15)**.
- **Alert Message Log** : Displays the alert message received. See **Alert Message (P.15)**.

### 6 Picture

- The picture data or station Logo data is displayed if available from current content.

### 7 Information display


- Displays the information on the current station: Frequency and Channel  
Touching  allows you to switch between Content A, Content B and Content C.  
Content A: Station name, Song Title, Artist Name  
Content B: Station Message, Radio Text  
Content C: PTY Genre, Album Name

### 8 Indicator Items

- **MC**: A multicast digital broadcast is being received.
- **EA**:
  - White: Emergency Alert is on.
  - No light: Emergency Alert is off.
  - Orange: Interrupting or in snooze/ignore state.
- **ST**: A stereo broadcast is being received.

### 9 Indicator display

While receiving an HD Radio station, it lights with orange when the audio is digital and lights with gray when it is analog. While receiving an analog station, it is off.

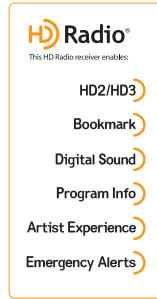

### HD2/HD3

- Adjacent to traditional main stations are HD2/HD3 Channels, providing new original programming on the FM dial

### Bookmark

- A music & product discovery feature that enables users to store information about content on the radio, and can deliver interactive information via QR codes

### Digital Sound

- Crystal clear, CD-like digital audio quality to consumers; eliminates background noise

### Program Info

- Provides song name, artist, station ID, and other relevant data to enrich the listening experience

### Artist Experience

- Visual images, such as album art of over-the-air broadcasts from HD Radio stations


### Emergency Alerts

- Delivers critical and life-saving messages to the public during emergency situations


## Receive Mode

You can set the radio broadcasts receive mode.

- 1 Touch **R** on the right side of the screen.  
Touch **RCV**.

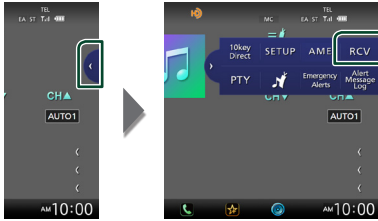

- 2 Select a receive mode.

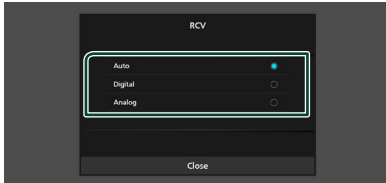


- **Auto**  
Switch between digital and analog audio automatically.
- **Digital**  
Select this to tune to digital audio only.
- **Analog**  
Select this to tune to analog audio only.

## Memory Operation


### Auto memory

You can store stations with good reception in the memory automatically.


- 1 Touch desired band key.

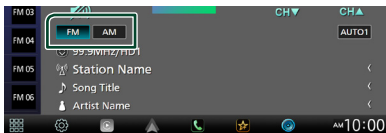

- 2 Touch **R** on the right side of the screen.  
Touch **AME**.

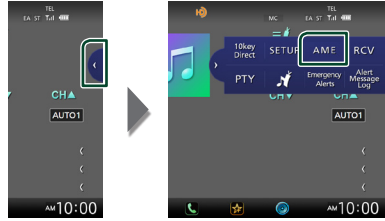

- 3 Touch **Yes**.

 

> Auto memory starts.

### Manual memory

You can store the currently being received station or channel in the memory.


- 1 Select the station or channel you wish to store in the memory.
- 2 Touch **FM#** (#:1-15) or **AM#** (#:1-5) in which you want to store the station or channel for 2 seconds until a beep sounds.

## Selecting Operation

### Preset select

You can list and select memorized stations or channels.

- 1 Touch **R** on the left side of the screen.  
Select a station or channel from the list.

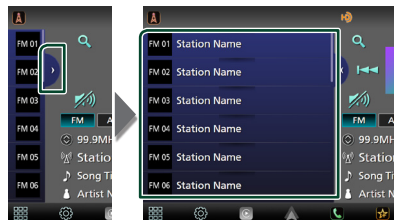





## Direct search

You can tune in by entering the desired frequency or channel number.

- 1 Touch **10key Direct** on the right side of the screen. Touch **10key Direct**.

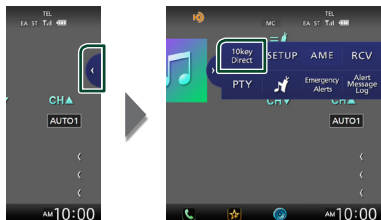

- 2 Select the search method.

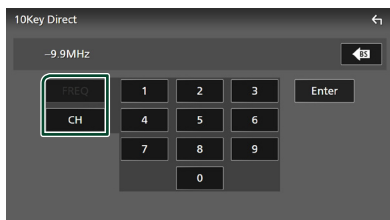

- 3 Enter the frequency or channel number.

- 4 Touch **Enter**.


### NOTE

 - To clear the number you entered, touch **BS**.


## Channel search

You can specify the desired channel.

- 1 Touch **Q**.



- 2 Select the desired content from the list.

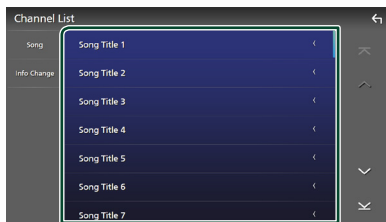


### NOTE

- Touch **Info Change** in the channel list. Select the sequence of the list (Song title, artist name, album name).

## Search by program type (FM only)

You can tune in the station broadcasting the specified type of program when listening to FM.


- 1 Touch **PTY** on the right side of the screen. Touch **PTY**.

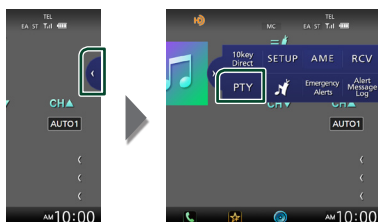

▶ PTY Search screen appears.

- 2 Select a program type from the list.

- 3 Touch **Search**.

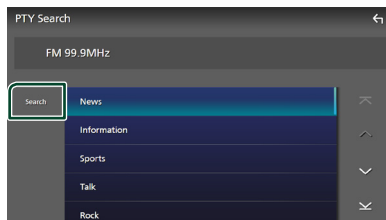



You can search for the station broadcasting the selected type of program.


## Bookmark

Stores tag information (title, artist, album, URL, and description) about the song you are listening to now.

Detailed information and QR codes can be displayed according to the stored tag information.

### Bookmark registration

- 1 Touch  on the right side of the screen. Touch .

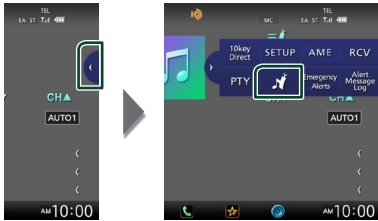

➤ Registers a bookmark.


#### NOTE

 - Up to 100 bookmarks can be registered to this unit.


### Bookmark list

Displaying a list of registered bookmarks and detailed information and QR code of the song.


- 1 Touch .



- 2 Select the desired bookmark from the list.

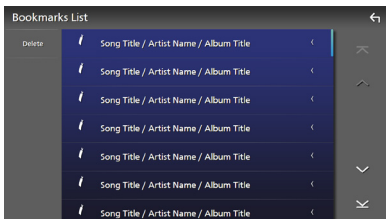

➤ The bookmark information appears.

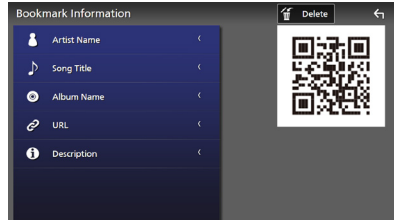

### Delete

 
Deletes the bookmarks being displayed.

Touch **Delete** and then touch **YES** on the confirmation screen.


### Bookmark delete

Deleting a bookmark.

- 1 Touch **Delete**.



- 2 Select the bookmark to delete from the list.

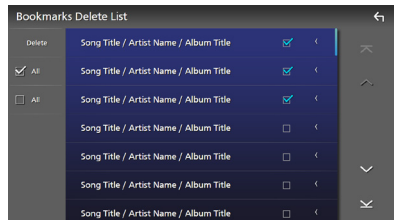

### All

Select all bookmarks.

### All

Erases all check marks.

- 3 Touch **Delete**.


➤ Confirmation message appears.


- 4 Touch **Yes**.

➤ All the selected bookmark(s) is deleted.

## Tuner Setup (FM only)

You can set tuner related parameters.

- 1 Touch  on the right side of the screen. Touch **SETUP**.

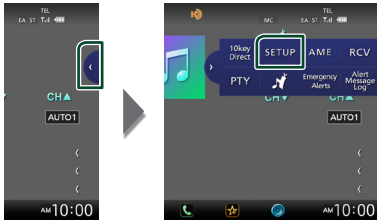

➤ Tuner SETUP screen appears.

- 2 Set each function as follows.

### ■ Area Setting

The tuner channel interval changes depending on the area where you use this unit.

**US** (Default): Select this when using this unit in North/Central/South America. FM and AM intervals are set to 200 kHz and 10 kHz respectively.

**SA**: Select this when using this unit in South American countries where the FM interval is 50 kHz. The AM interval is set to 10 kHz.

**Europe**: Select this when using this unit in any other areas. FM and AM intervals are set to 50 kHz and 9 kHz respectively.

# SiriusXM®

## SiriusXM® Basic Operation

Only SiriusXM® brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and Subscription are required. For more information, visit [www.siriusxm.com](http://www.siriusxm.com).

To listen to the SiriusXM source, touch the **SiriusXM** icon on the source selection screen. (**P.12**)


### Activating subscription

- Check your Radio ID.  
The SiriusXM Satellite Radio ID is required for activation and can be found by tuning in Channel 0 as well as on the label found on the SiriusXM Connect tuner and its package. The Radio ID does not include the letters I, O, S or F.
- Activate the SiriusXM Connect Vehicle Tuner using either one of the two methods below:
  - For users in U.S.A.  
Online: Visit [www.siriusxm.com/activatenow](http://www.siriusxm.com/activatenow)  
Phone: Call SiriusXM Listener Care at 1-866-635-2349
  - For users in Canada:  
Online: Visit <https://www.siriusxm.ca/help/activation-help/>  
Phone: Call XM customer Care at 1-877-438-9677


### NOTE

- To use SiriusXM® Satellite Radio, the optional accessory is necessary.

### Control screen

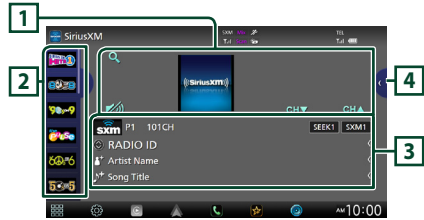

### Open the drawer

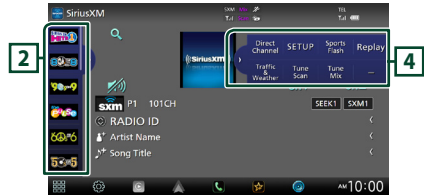

### 1 Operation keys


- **Q** : Display the Category search screen. For details on search operation, see **Category/Channel search (P.38)**.
- **CH▼ CH▲** : Selects a channel.
- **📶** : Touch to attenuate/restore the sound.

### 2 Preset list

- Touching **◀▶** allows you to change the display size.
- Recalls the memorized channel.
- When touched for 2 seconds, stores the currently being received channel in the memory.

### 3 Information display


- Displays the information on the current channel: Channel Name  
**P#**: Preset number  
**#CH**: Channel number  
**Logo**: Channel logo

Touching  allows you to switch between Content A, Content B and Content C.

Content A: Artist Name, Song Title

Content B: Content Info, Category Name

Content C: Channel Description, Similar Channels

 : Touch for 2 seconds to register the artist of the current song as a Content Alert.

 : Touch for 2 seconds to register the current song as a Content Alert.

For details, see **Content Alerts (P.40)**.

#### NOTE





- While getting contents, "Waiting" is showing on the display.

#### 4 Function panel

Touch the right side of the screen to display the function panel. Touch again to close the panel.




- **Direct Channel**: Touch and enter the desired number. For details, see **Direct search (P.37)**.
- **SETUP**: Touch to display the SiriusXM SETUP screen. For details, see **SiriusXM SETUP (P.41)**.
- **Replay**: Touch to turn on or off the replay mode. See **Replay (P.38)**.
- **Traffic & Weather**  
For SXV300 \*<sup>1</sup>

Traffic & Weather Now™ allows you to access the latest report whenever you want to hear it. Select your city from the set up menu (see **Select a City for Traffic & Weather (P.46)**) and touch **Traffic & Weather** to check the latest report. It will start from the beginning.

-  (White) : Played already.
-  (Green) : New information arrived.
-  (Purple) : Playing.
-  (Gray) : No information.

#### For SXV200 or SXV100 \*<sup>2</sup>

Turns the Traffic & Weather Jump function on or off.

-  (White) : Function on.
-  (Purple) : Playing.
-  (Gray) : Function off.

- **TuneScan** \*<sup>3</sup> : Allows you to hear a few seconds of songs from each of the SmartFavorite music channels on the current preset band. See **TuneScan™ (P.39)**.

- **TuneMix** \*<sup>4</sup> : When turned ON, shuffles the preset channels on P1-P6 to play a blend of songs from your favorite channels. See **TuneMix™ (P.39)**.
- **SportsFlash** \*<sup>4</sup> : Displays during SportsFlash™. Touch to cancel the SportsFlash™ function and return to the previous channel. See **SportsFlash™ (P.41)** and **SportsFlash™ setup (P.45)**.



\*<sup>1</sup> Compatible with SXV300 or later tuner models. It may take a few minutes after power on to get the first full report on your city. Traffic channels are not available in Canada.

\*<sup>2</sup> When SXV200 or SXV100 is connected with this unit.

\*<sup>3</sup> Compatible with SXV200 or later tuner models.

\*<sup>4</sup> Compatible with SXV300 or later tuner models.

#### 5 Indicator display

Displays the "Mix" (TuneMix™), "Scan" (TuneScan™), , (Traffic&Weather), or  (SportsFlash™) indicator and the received signal strength of the SiriusXM tuner.

#### 6 Seek mode

Touch to switch seek mode.

- **SEEK1** : Tunes in a station with good reception automatically.
- **SEEK2** : Tunes in the memorized stations one after another.

#### 7 Band key

Switches among bands. (SXM1/SXM2/SXM3/SXM4)

#### 8 Artwork

Displays the album artwork for most SiriusXM music channels

## Storing Channels in Preset Memory

You can store the current channel in memory.

- 1 Tune in the channel you wish to store in the memory.
- 2 Touch **▶** on the left side of the screen.



- 3 Touch **SXM(1-4) P(1-6)** in which you want to store the channel for 2 seconds until a beep sounds.

## Preset select

You can list and select memorized channels. This function can be used from the remote control. **(P.84)**

### To select from the preset list


- 1 Touch **▶** on the left side of the screen. Select a channel from the list.



## Direct search

You can tune in a channel directly.

- 1 Touch **▶** on the right side of the screen. Touch **Direct Channel**.

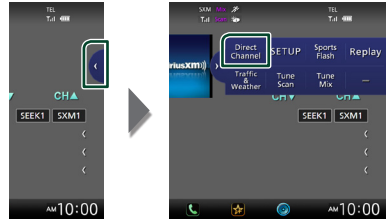

- 2 Enter the channel number and touch **Enter**.



### NOTE

- To clear the number you entered, touch **BS**.

## Category/Channel search

You can specify the desired category and select a channel.

### 1 Touch **Q**.




### 2 Select a category.



► Channel list appears.

### 3 Select the desired content from the list.

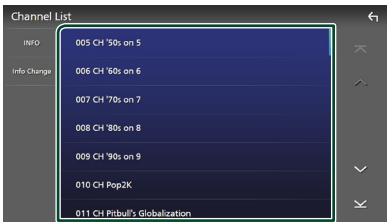


#### NOTE

- All channels in the selected category appear.
- Touching **All-Channels** displays all channels.
- Touch **Info Change** in the channel list. Select a desired item:  
content info, channel name, artist name, song title, category name.
- Categories which have the prefix "Featured -" are Featured Favorites.
- Featured Favorites are groups of channels that are created by the SiriusXM Programming department allowing you to discover new channels. Featured Favorite channels are dynamic and can change often, allowing you to discover new channels.
  - You can set whether to be notified when the featured seasonal theme is updated. **(P.46)**

## Replay

You can replay the last 60 minutes of the program from the current channel.

### 1 Touch **Replay** on the function panel.

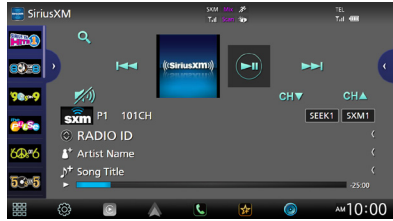

Press to skip to the previous/next track.  
Press and hold to rewind or fast forward.



Plays or pauses.

#### ■ **Replay time bar/Play mode indicator**

Displays the recorded data capacity and playback position.

►, ►►, etc.: Current play mode indicator



Displays a list of recorded data on a program basis.

### 2 Touch **Q** to display an Instant Replay List screen.



#### ■ **Instant Replay List**

Touching this plays back the displayed program.

**LIVE:** Touch to return to the live music/content.

#### ■ **Info Change**

Touch **Info Change**. Select a desired item:  
content info, channel name, artist name, song title, category name.


## To return to live music/content

- 1 Touch **◀** on the right side of the screen.
- 2 Touch **Live**.

## TuneMix™

TuneMix™ plays a unique blend of songs from your Preset music channels of the current SiriusXM Preset Band, allowing you to build a custom channel from as few as two to as many as 6 music channels. You can even skip songs you don't want to hear.

- 1 Touch **◀** on the right side of the screen. Touch **TuneMix** to set ON or OFF.

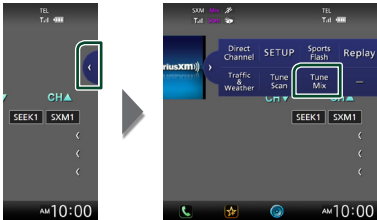

### NOTE

- Compatible with SXV300 or later tuner models.

## SmartFavorites, TuneStart™

Preset channels 1 through 6 of the current band are SmartFavorites channels.

The SiriusXM Vehicle Tuner automatically buffers the broadcast audio content of the SmartFavorites channels in the background.

You can rewind and replay up to 30 minutes of any of the missed news, talk, sports or music content on SmartFavorites channels. (See **Replay (P.38)**.)

When tuning in a SmartFavorites channel, songs will be played from the beginning of each track (TuneStart™). You can enable/disable TuneStart. (See **TuneStart™ (P.46)**.)

### NOTE


- Compatible with SXV200 or later tuner models.

## TuneScan™

TuneScan™ is a feature that plays samples from the starts of multiple buffered songs from each of the SmartFavorites channels that predominantly play music selections.

You have easy access to a large sampling of music content and can enjoy hearing a full song by stopping the scan on a song of interest.


- 1 Touch **◀** on the right side of the screen.

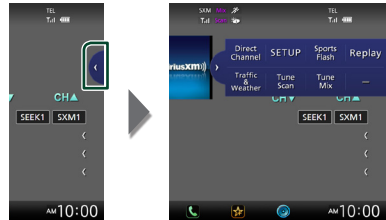

- 2 Touch **TuneScan** to begin scanning your SmartFavorites channels.

You will hear a few seconds of the songs from each of the SmartFavorite channels.

- 3 While your favorite song is being played, touch **TuneScan** again to start listening to that song.

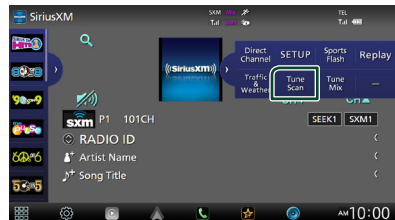

- Scan finishes and the song is played continuously.

### NOTE


- To cancel TuneScan™, touch the right side of the screen. Touch **TuneScan**.
- Touch and hold **TuneScan** to cancel TuneScan, and the music/content which was present on the channel before starting TuneScan will be played.
- Compatible with SXV200 or later tuner models.



## Traffic & Weather Now™

Traffic & Weather Now™ allows you to access the latest report whenever you want to hear it. First select your city in the set up menu. See **Select a City for Traffic & Weather (P.46)**.



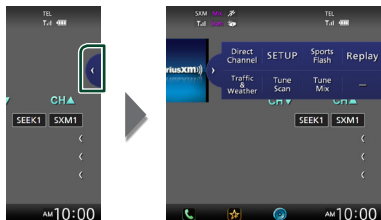

- 1 Touch **◀** on the right side of the screen.



- 2 Touch **Traffic & Weather**.

The report starts from the beginning. To stop and return to the previous channel, touch it again.

### Indicator display

-  (White) : Played already.
-  (Green) : New information arrived.
-  (Purple) : Playing.
-  (Gray) : No information.


### NOTE

- Compatible with SXV300 or later tuner models.

## Content Alerts

When a broadcast program related to the registered artist, song or team starts, an Alert Content List screen appears to allow you to switch the current channel to the relevant channel.

- 1 When the broadcast of the registered content starts, an Alert Content List screen appears.

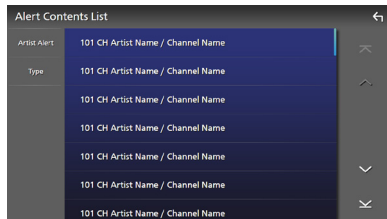

- 2 Select a content from the list.


### NOTE

- Touch **Type**. Select a desired item: Artist Alert, Song Alert, GameAlert™.
- To learn how to register artists and songs for the Content Alert function, see [▶ Information display in SiriusXM® Basic Operation \(P.35\)](#).
- To learn how to set up the Content Alerts function and select Teams for alerts, see **Content Alerts setup (P.43)**.

## SportsFlash™

SportsFlash™ will notify you when a big play happens during a game with one of your favorite sports teams. Choose to tune in and hear the play unfold like it was live. Continue listening to the game or return to your previous channel.

- 1 When a big play happens during one of the games, an Alert screen appears.

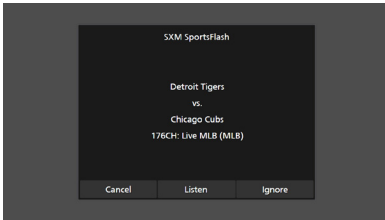

### ■ Listen

Touch to tune in that channel and play back the big play.

### ■ Ignore

Touch to cancel this specific SportsFlash alert. Touching **Ignore** will ignore this specific alert but will allow future alerts for this game.

### ■ Cancel


Touch to cancel SportsFlash alert. No alerts for this game will be displayed afterward.

## NOTE

- Compatible with SXV300 or later tuner models.
- To learn how to set up the SportsFlash alert function, see **SportsFlash™ setup (P.45)**.

## SiriusXM SETUP

- 1 Touch **ⓘ** on the right side of the screen. Touch **SETUP**.

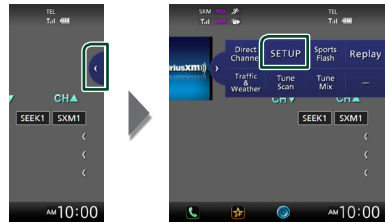

- ▶ SiriusXM SETUP screen appears. See the following sections for each setting.
  - Set up the parental code (**P.42**)
  - Set up the Parental Control (**P.42**)
  - Set up the skip channel select (**P.43**)
  - Set up the Content Alerts (**P.43**)
  - Set up the teams for SportsFlash™ (**P.45**)
  - Select the city for Traffic & Weather Jump or Traffic & Weather Now™ (**P.46**)
  - Select the Featured Bands Update Messages (**P.46**)
  - Set up the TuneStart™ (**P.46**)
  - Reset to the default settings (**P.46**)

## Parental code

You can set a SiriusXM parental code for Parental Control.


- 1 Touch **Parental Code** on the SiriusXM SETUP screen.

➤ Parental Pass Check screen appears.

### NOTE


- The code number is set to "0000" as default.

- 2 Enter the current code number and touch **Enter**.

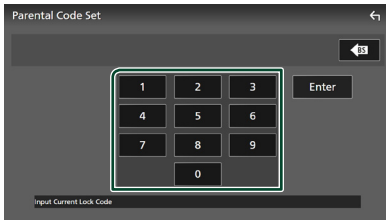

➤ Parental Pass 1st screen appears.

- 3 Enter the new code number and touch **Enter**.

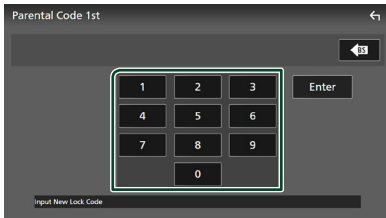

➤ Parental Pass 2nd screen appears.

- 4 Enter the same code number as that you entered in step 3 and touch **Enter**.

➤ The code number is confirmed and the SiriusXM parental code is now set.

## Parental Control

Parental Control is a feature that provides the user with the ability to prevent unauthorized access to mature content and user selected channels.

- 1 Touch **Parental Control** on the SiriusXM SETUP screen.

- 2 Touch **User, Mature or OFF**.

### User

Locks only the selected channels.

### Mature

Locks channels classified as "mature" only.

### OFF

Deactivates the parental mature and user locks.

- 3 Enter the parental code you originally input in as stated in *Parental code (P.42)* and touch **Enter**.

### When selecting User

This allows you to limit access to any SiriusXM channel (Parental Lock Channel).

- 1 Touch **Parental Lock Channel Selection** on the SiriusXM SETUP screen.

➤ Parental Pass Check screen appears.


### NOTE

- You need to set up a parental code beforehand as stated in *Parental code (P.42)*.

- 2 Enter the parental code you originally input as stated in *Parental code (P.42)* and touch **Enter**.

➤ Parental Lock Category Select screen appears.

- 3 Touch the desired category in the list.

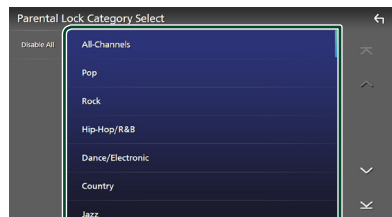

➤ Displays all channels in the selected category.

**NOTE**

- Touch **All-Channels** to display all channels.
- To delete the parental lock channel setting, touch **Disable All** and then touch **YES** on the confirmation screen.

**4 Touch each channel on the list and set to ON or OFF.**

**ON:** Locks the channel.

**OFF:** Unlocks the channel.



**NOTE**

- Touch **Info Change**. Select a desired item: content info, channel name, artist name, song title, category name.


**Skip channel select**

You can set the undesired channels to skip.

**1 Touch Skip Channel Select.**

- Skip Category Select screen appears.

**2 Touch the desired category from the list.**

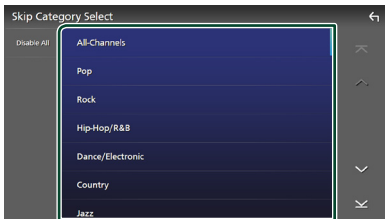

- Displays all channels in the selected category.

**3 Touch each channel in the list and set to ON or OFF.**



**NOTE**

- To delete the skip channel setting, touch **Disable All** and then touch **YES** on the confirmation screen.
- Touch **Info Change**. Select a desired item: content info, channel name, artist name, song title, category name.
- Direct Channel and Preset Memory functions allow you to select channels.

**Content Alerts setup**

**Activating content alert**

**1 Touch Content Alerts on the SiriusXM SETUP screen.**

- Content Alerts is turned on or off. Default is "ON".

**Selecting the content for Content Alerts**

**1 Touch Content Alerts Contents Set on the SiriusXM SETUP screen.**


**2 Select the content you want to set up.**



**NOTE**

- To cancel all alert contents, touch **Clear** and then touch **YES** on the confirmation screen.
- Select **OFF** for the content you want to deactivate the content alert for.


**3** Touch each content list item you want to check or uncheck.

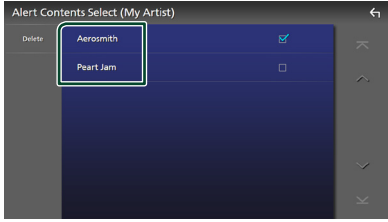


**NOTE**  
• You can select (☑) up to 60 artists or songs.

● **To delete the Artist and Song**

 **1** Touch **Delete**.



**2** Touch the content(s) in the list you want to select.

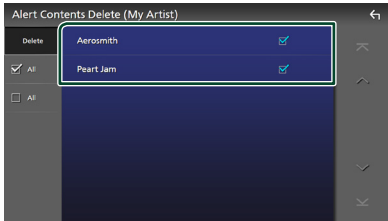

■  **All**  
Selects all contents.


■  **All**  
Clears all check marks.

**3** Touch **Delete** and then touch **YES** on the confirmation screen.


**To select a Team**

 Get alerted when your favorite sports team is playing on another SiriusXM channel with GameAlert™.


**1** Touch **My Games**.



**2** Touch the desired league in the list.

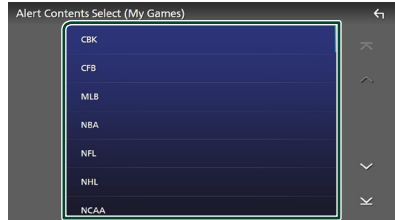

**3** Touch the team(s) in the list you want to select.

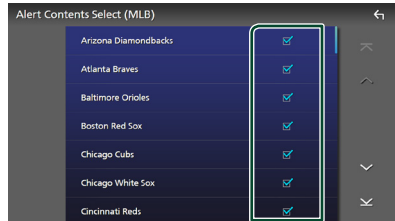

**NOTE**  
• You can select (☑) up to 30 teams.

## SportsFlash™ setup

### Activating SportsFlash

- 1 Touch **SportsFlash** on the SiriusXM SETUP screen.

► SportsFlash is turned on or off.  
Default is "ON".

### Selecting SportsFlash Beep

- 1 Touch **SportsFlash Beep** on the SiriusXM SETUP screen.

► SportsFlash Beep is turned on or off.  
Default is "ON".

### Selecting the teams for SportsFlash


- 1 Touch **SportsFlash Team Set** on the SiriusXM SETUP screen.

► Team Set screen appears.


- 2 Touch **Edit**.




- 3 Touch the desired league in the list.

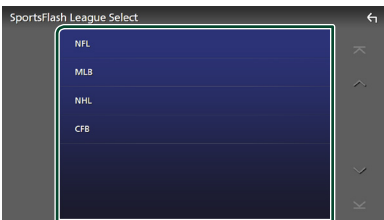

- 4 Touch each team(s) in the list you want to select.

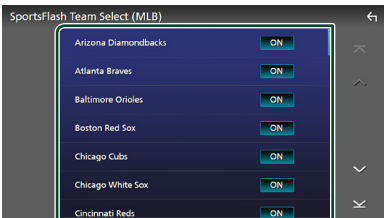

- 5 Touch **Done** twice.

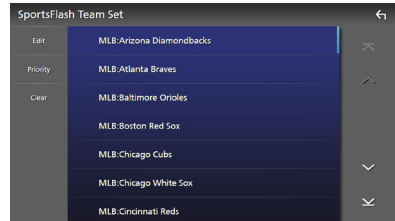

#### ■ Edit

Sets and removes teams.

#### ■ Priority

Sets the priority of a team.

#### ■ Clear

Removes all teams that have been set.

 
Touch **Clear**. When the confirmation screen appears, touch **YES**.

#### NOTE

- SportsFlash™ is available on SXV300 or later tuner models.
- Up to 50 teams can be added.


### Set the SportsFlash™ Team Priority

- 1 Touch **Priority**.




- 2 Set the priority of a team.

Each time you touch a Team, the priority is set or reset.

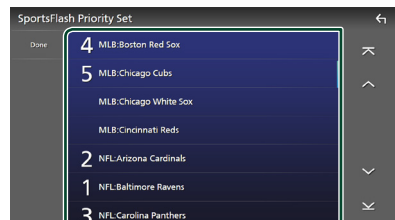

**3 Touch Done .**

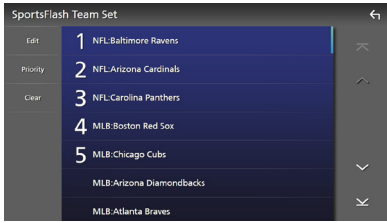


**NOTE**

- Priority can be set on up to 5 teams.
- When priority has already been set for 5 teams, it cannot be set for any other team. Delete an unnecessary team.

**Select a City for Traffic & Weather**

You can select a city for which you wish to receive SiriusXM Traffic & Weather broadcasts and hear them from the beginning.

- 1 Touch Traffic & Weather City Select on the SiriusXM SETUP screen.**
- 2 Touch ◀ and ▶ to select a city.**

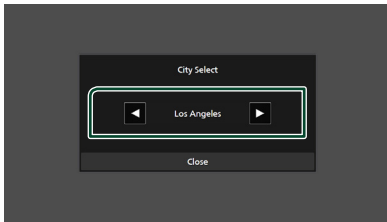

**3 Touch Close .**

**Selecting Featured Bands Update Messages**

You can set whether to be notified when the featured seasonal theme is updated.

- 1 Touch Featured Bands Update Messages on the SiriusXM SETUP screen.**  
Featured Bands Update Messages is turned on or off.

**TuneStart™**

- 1 Touch Tune Start on the SiriusXM SETUP screen.**  
The TuneStart is turned on or off. Default is "ON".

**Reset**

- 1 Touch SiriusXM Reset on the SiriusXM SETUP screen.**  
▶ Confirmation screen appears.
- 2 Touch YES .**  
▶ All SiriusXM settings are reset to defaults.

# Other External Components

## View Camera

### NOTE

- To connect a camera, see **Connecting the camera (P.97)**.
- To use a rear view camera, a REVERSE lead connection is required. **(P.93)**
- If **Rear Camera Interruption** is active the camera screen is displayed when you shift the gear to the reverse (R) position.
- The camera whose view was displayed last is kept and the same camera view will be displayed the next time. If its assignment setting is changed, the rear camera view is displayed.
- Rear/front camera interruption screen is not kept as the camera screen which will be displayed the next time.

### Display the camera screen


You can display the camera screen manually if "Camera" is registered to a popup menu function key. **(P.70)**

- 1 Press the **FNC / ☆** button.
  - Popup menu appears.
- 2 Touch **Camera**.



➤ View camera screen appears.

- 3 Adjust each item as follows.

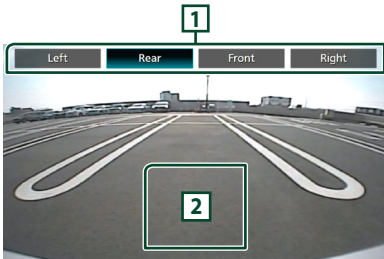

### 1 Camera Switching Keys\*1

Touch to switch the view camera. It is necessary to set "Camera Assignment Settings" beforehand except "Rear". See **To set up the camera assignment settings (P.48)**.

### 2 Camera off

Touch to exit the camera screen.

\*1 When two or more cameras of rear, front, left, right, and 3rd are connected with this unit.

### Camera Setup

- 1 Press the **HOME / ⏻** button.
  - HOME screen appears.
- 2 Touch **⚙️**.
- 3 Touch **SETUP**.
  - SETUP Menu screen appears.
- 4 Touch **Camera**.
  - Camera setting menu appears.
- 5 Set each item as follows.



### Camera Assignment Settings

Set up the camera assignment. See **To set up the camera assignment settings (P.48)**.

### Rear Camera Interruption

**ON** (Default): Displays the picture from the rear view camera when you shift the gear to the reverse (R) position.

**OFF**: Select this when no camera is connected.



## Other External Components

### ■ Rear Camera Message \*1

**Always display** (Default): Always displays the caution message on the rear camera interruption screen.

**Clear after 5 seconds**: Displays the caution message for about 5 seconds on the rear camera interruption screen.

### ■ Parking Guidelines

You can display parking guidelines to enable easier parking when you shift the gear to the reverse (R) position.

Default is "ON".

### ■ Guidelines SETUP

If you select **ON** for **Parking Guidelines**, you can adjust the parking guidelines. See **To adjust the parking guidelines (P.49)**.

### ■ Front Camera Interruption \*2

**10 sec / 15 sec** (Default) / **20 sec**: The front camera screen is displayed when return the gear from the reverse (R) position.

**OFF**: Cancel.

\*1 To use the function, it is necessary to set **Rear Camera Interruption** to **ON**.

\*2 To use the function, it is necessary to set **Rear Camera Interruption** to **ON** and to assign front position to the view camera in **Camera Assignment Settings**. (P.48)

## ■ To set up the camera assignment settings

**1** Touch **Camera Assignment Settings** in the Camera setting menu. (P.47)

**2** Select the item to set up.

### ■ FRONT VIEW CAMERA

Set the camera assignment from view camera connected to Front view camera input terminal.

### ■ 3rd VIEW CAMERA

Set the camera assignment from view camera connected to 3rd view camera input terminal.

### ■ VIDEO IN

Set the camera assignment from view camera connected to Video input terminal.

**3** Select the view camera to set up.



### 1 Picture from view camera

Displays the picture from the view camera connected to the input terminal to be set. (P.97)

### 2 Camera position

Assign each position to the view camera connected to the selected input terminal. Front/Left/Right/ **None**

### 3 Mirroring settings

Switch the mirroring setting \*1. "ON"/"OFF" (Default)

\*1 The **FRONT VIEW CAMERA** and **3rd VIEW CAMERA** setting screens only.

**4** Touch **Enter**.


## NOTE


- The screen shot above is for the **FRONT VIEW CAMERA** setting screen. It may be different from the ones for **3rd VIEW CAMERA** and **VIDEO IN**.

## To adjust the parking guidelines


### NOTE

- Install the rear view camera in the appropriate position according to the instruction manual supplied with the rear view camera.
- When adjusting the parking guidelines, make sure to apply the parking brake to prevent the car from moving.

- 1 Touch **Parking Guidelines** in the Camera setting menu and set to ON. (P.47)
- 2 Touch **Guidelines SETUP** in the Camera setting menu.
- 3 Adjust the parking guidelines by selecting the  mark.

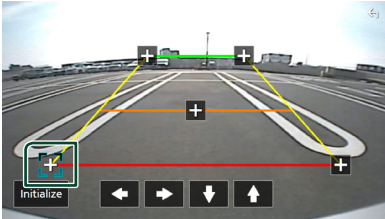


- 4 Adjusting the position of the selected mark.

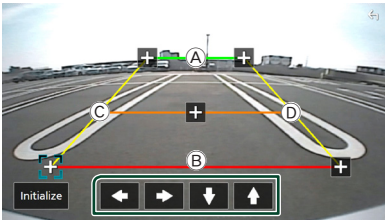

Make sure that lines (A) and (B) are horizontally parallel, and that lines (C) and (D) are of the same length.

### NOTE

- Touch **Initialize** and then touch **Yes** to set all the  marks to their initial default position.

## External audio/video players (AV-IN)

- 1 Connect an external component to the AV Audio input and the Video input terminal. (P.94)
- 2 Select **AV-IN** as the source. (P.12)
- 3 Turn on the connected component and start playing the source.

### NOTE


- To select the AV-IN source, it is necessary to set "VIDEO IN" to "None" in **Camera Assignment Settings**. (P.48)

## HDMI source


- 1 Connect your smartphone to the HDMI input terminal. (P.94)  
Use HDMI cable (commercially available).
- 2 Select **HDMI** as the source. (P.12)
- 3 Start an application or playback on your smartphone.

## OEM Features Operation


This unit can display vehicle information when connected to the bus system of the vehicle using an iDataLink (commercially available).


 
 
 
 
 
 
 
- 1 Press the  button.  
 > HOME screen appears.



- 2 Touch .

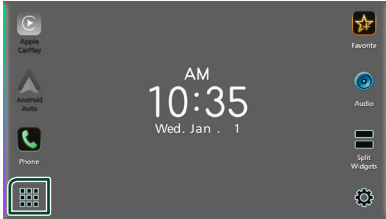

- 3 Touch icon.

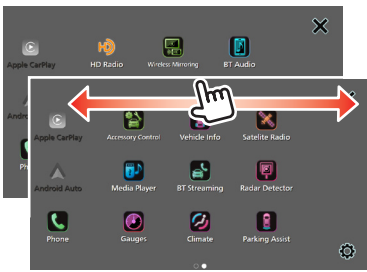

	• Displays the control screen of the Bluetooth Hands-Free function provided for the vehicle.
	• Displays information about the tire pressures of the vehicle. *
	• Displays the control screen of the satellite radio source provided for the vehicle.
	• Displays the control screen of the media player source provided for the vehicle.
	• Displays the control screen of the Bluetooth streaming source provided for the vehicle.
	• Displays information about the Radar Detector. *
	• Displays information about the instruments such as a speedometer.
	• Displays information about the air conditioner of the vehicle. *

  	• Displays information about the Parking Distance Sensor of the vehicle.
	• Displays the control screen of the accessories in the vehicle.

\* These iDataLink features are displayed as the widget on the HOME screen. **(P.11)**  
 You can display the relevant screens by touching the widget.

### NOTE

- Displayable screens, key names, and screen names vary depending on the type of the connected iDataLink and the model of the vehicle. For more details, access the following URL: [www.idatalink.com/](http://www.idatalink.com/)

# Bluetooth Control

Using the Bluetooth function allows you to use various functions such as listening to the audio file and making/receiving a call.

## Information for using Bluetooth® devices



Bluetooth is a short-range wireless radio communication technology for mobile devices such as smartphones/cell-phones, portable PCs, and other devices.

Bluetooth devices can be connected without cables and communication with each other.

### NOTE

- While driving, do not perform complicated operations such as dialing numbers, using the phonebook, etc. When you perform these operations, stop your car in a safe place.
- Some Bluetooth devices may not be connected to this unit depending on the Bluetooth version of the device.
- This unit may not work for some Bluetooth devices.
- Connecting conditions may vary depending on your environment.
- Some Bluetooth devices are disconnected when this unit is turned off.
- The Bluetooth devices cannot be used while using Apple CarPlay.
- The Bluetooth currently connected with other device is disconnected when an iPhone compatible with Apple CarPlay is connected.

## About the smartphone/cell-phone and Bluetooth audio player

This unit conforms to the following Bluetooth specifications:

### Version

Bluetooth Ver. 5.0

### Profiles

#### Smartphone/cell-phone:

HFP (V1.7) (Hands Free Profile)

SPP (Serial Port Profile)

PBAP (Phonebook Access Profile)

### Audio player:

A2DP (Advanced Audio Distribution Profile)

AVRCP (V1.6) (Audio/Video Remote Control Profile)

### Sound codec

LDAC, SBC, AAC

### NOTE

- The units supporting the Bluetooth function have been certified for conformity with the Bluetooth Standard according to the procedure prescribed by Bluetooth SIG. However, it may be impossible for such units to communicate with your smartphone/cell-phone depending on its type.

## Register the Bluetooth device

It is necessary to register the Bluetooth audio player or smartphone/cell-phone in this unit before using the Bluetooth function.

You can register up to 10 Bluetooth devices.

### NOTE

- Up to 10 Bluetooth devices can be registered. If an attempt is made to register the 11th Bluetooth device, the Bluetooth device connected on the earliest date will be deleted to register the 11th one.
- This unit is compatible with the Apple Easy Pairing function. When an iPod touch or iPhone is connected to this unit, an authentication dialog appears. Performing operation for authentication on this unit, or iPod touch or iPhone registers the smartphone as a Bluetooth device.


1 Press the button.

2 Touch .

3 Touch **SETUP**.


➤ SETUP Menu screen appears.

4 Touch **Connections & AV**.

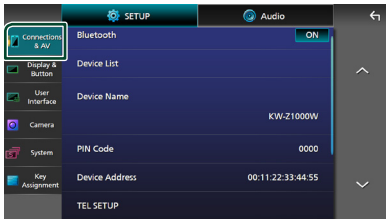

5 Touch **Device List**.

6 Select a device type.

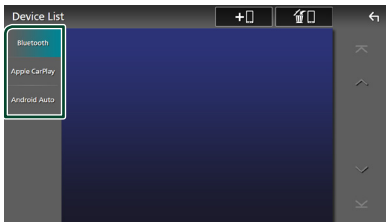

### ■ Bluetooth

To connect as Bluetooth Hands-Free and Bluetooth audio source.

### ■ Apple CarPlay

 
To connect as Apple CarPlay source.

### ■ Android Auto

To connect as Android Auto source.

7 Touch .

➤ Bluetooth pairing waiting dialog appears.



### NOTE

 
- If an Apple CarPlay device is currently connected, the Apple CarPlay device will be disconnected.
- When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, pressing and holding the button displays Bluetooth pairing waiting dialog.

8 Search for the unit (“KW-Z1000W”) from your smartphone/cell-phone.

Complete steps 8 to 10 within 30 seconds.


9 Operate your smartphone/cell-phone according to the displayed messages.

● Confirm the request both on the smartphone/cell-phone.



● Input the PIN Code in your smartphone/cell-phone.

 PIN Code is set to “0000” as the default.



**10 Touch Yes.**

When data transmission and connection have completed, the Bluetooth connection icon appears on the screen.

**NOTE**

- When registering the iPhone that is available for Apple CarPlay wirelessly, a confirmation message appears.
  - **Yes:** Displays the Apple CarPlay screen for wireless connection.
  - **No:** Apple CarPlay is not connected. When using Apple CarPlay, see **Select an Apple CarPlay device (P.19)**.

**Switch the connected device**

If two or more Bluetooth devices have been registered, select the device to be used.

**1 Touch Device List in the Connections & AV setting menu.****2 Select the device type.****■ Bluetooth**


To connect as Bluetooth Hands-Free and Bluetooth audio source.


**■ Apple CarPlay**

To connect as Apple CarPlay source.

**■ Android Auto**


To connect as Android Auto source.

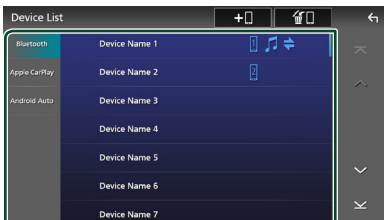**3 Touch the name of the device you want to connect.****NOTE**

- If the icon is lighted, it means that the unit will use that device.
- If you touch the device name with the icon on the list of Apple CarPlay devices, it will be disconnected.
- You can quickly display the Device List screen by touching  in the popup menu. **(P.10)**

**To switch the connected device to a Bluetooth device****1 Touch Bluetooth on the Device List screen.**

➤ Bluetooth device list appears.

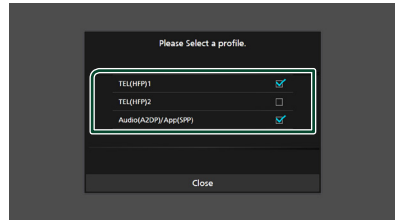**2 Touch the name of the Bluetooth device you want to connect.****3 Set each profile as follows.****■ TEL (HFP) 1, TEL (HFP) 2**

Select when the device is connected with the unit as Hands-Free phone 1 or 2.


**■ Audio (A2DP)/App (SPP)**


Select to use as an audio player or to interwork with an application installed in a smartphone.

**4 Touch Close.**


**To delete the registered device**

You can delete the device that is registered as Bluetooth source or Apple CarPlay source. When you delete a Bluetooth device which supports Android Auto, the device is also deleted from the Android Auto device list.

1 Touch  on the Device List screen.

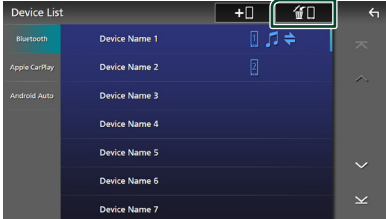


2 Touch the device name to check.

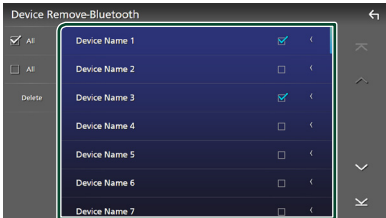

- All**  
Selects all Bluetooth devices.
- All**  
Clears all check marks.

**NOTE**

- You cannot select a device currently connected.
- When you select Android Auto tab,  is not displayed.

3 Touch **Delete**.  
➤ Confirmation message appears.

4 Touch **Yes**.  
➤ All the selected device(s) is deleted.

**Bluetooth Setup**

**NOTE**


- The Bluetooth Setup is disabled while using Apple CarPlay.

1 Press the  /  button.

2 Touch .

3 Touch **SETUP**.  
➤ SETUP Menu screen appears.

4 Touch **Connections & AV**.

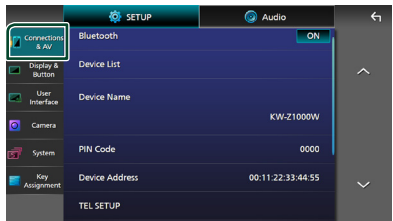

➤ Connections & AV setting menu appears.

5 Touch **Bluetooth** and set to **ON**.  
See the following section for each setting.


- Change the PIN Code (**P.55**)
- Change the device name (**P.55**)
- Change the settings for Hands-Free function, see **Hands-Free Setup (P.62)**.

**NOTE**

- For the other setting items on this screen, see **Connections & AV Setup (P.63)**.

## Change the device name


- 1 Touch **Device Name** in the Connections & AV setting menu.
  - Change Device Name screen appears.
- 2 Touch and hold **BS**.
- 3 Input the device name.

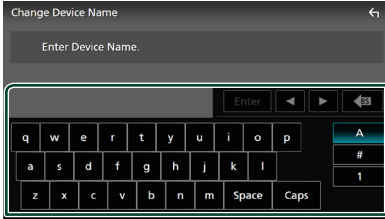

- 4 Touch **Enter**.

## Change the PIN Code

- 1 Touch **PIN Code** in the Connections & AV setting menu.
  - Change PIN Code screen appears.
- 2 Touch and hold **BS**.
- 3 Input the PIN Code.

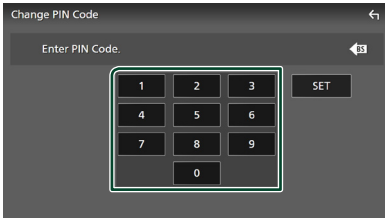

- 4 Touch **SET**.

## Playing the Bluetooth Audio Device

Most functions can be controlled from the source control screen.


To select Bluetooth source, touch **BT Audio** icon on the source selection screen. (P.12)

### NOTE

- The Bluetooth audio source is disabled while using Apple CarPlay.
- The Bluetooth audio source is disabled when the device set as "Audio/App" is using Android Auto.

## Bluetooth basic operation

### Control screen

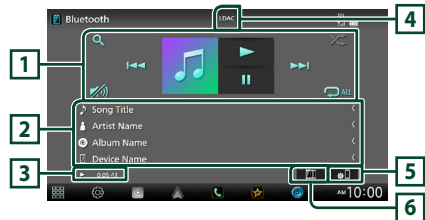

### 1 Operation keys \*

- **Q**: Searches for a file. See **File search** (P.57).
- **⏮** **⏪** **⏩** **⏭**: Searches for the previous/next content. Touch and hold to fast forward or fast backward.
- **▶**: Plays.
- **⏸**: Pauses.
- **🔊**: Touch to attenuate/restore the sound.
- **🔄**: Repeats the current track/folder. Each time you touch the key, repeat modes are switched in the following sequence: File repeat (🔄), Folder repeat (🔄), All songs repeat (🔄), Repeat off (🔄).
- **🎲**: Randomly plays all tracks in the current folder. Each time you touch the key, random modes are switched in the following sequence: Folder random (🎲), All random (🎲), Random off (🎲).

### 2 Information display \*

- Displays the name of track information.
- Connected device name.



**3 Play mode indicator/Playing time**

▶, || : Current play mode indicator  
Meanings of individual icons are as follows:  
▶ (play), ▶▶ (fast forward), ◀◀ (fast backward),  
|| (pause), ■ (stop).

**4 CODEC**

When an LDAC-compatible device is connected, "LDAC" is displayed.

**5**

Displays the Connections & AV setting menu. (P.63)

**6 JVC Streaming DJ**

Bluetooth audio devices can be switched easily to play music. See **JVC Streaming DJ (P.56)**.

\* These items appear only when the audio player which supports AVRCP profile is connected.

**NOTE**

- The operation keys, indications and information displayed on the screen differ depending on the connected device.
- If the operation keys do not appear, operate from the player.
- Depending on your smartphone/cell-phone or audio player, sound may be heard and controlled but text information may not appear.
- If the volume is too low, raise it on your smartphone/cell-phone or audio player.
- It is recommended that you change the playback quality from "priority on sound quality" to "priority on stable connection" in the settings of your LDAC-compatible device so that the intermittent sound problem is less likely to occur.

**JVC Streaming DJ**

Up to 5 Bluetooth audio device can be connected and switched easily to play music.

- 1 Touch** .  
▶ A list of registered devices is displayed.
- 2 Touch** of device name you want to connect.
  - Touching displays the Device List screen. (P.53)
  - Touching on the left of the connected device ( ) disconnects this device.



- : Device used normally.
- : Device used for JVC Streaming DJ.

- 3 Touch** (White/dark blue background) on the left of the name of the device to be played.

The background changes from dark to light blue and starts playback.




- (Gray) : Not connected.
- (White/dark blue background) : Connected.
- (White/light blue background) : During playback.

- 4 Touch** .

**NOTE**

- If a connected Bluetooth audio device is operated to play music, connections are switched.
- When a Bluetooth source is switched to another one, its settings are deleted and the connection is restored to the connection before source switching.
- You cannot select an Android smartphone connected as an Android Auto device.

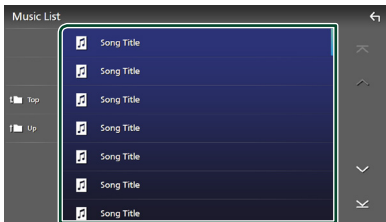**File search****1** Touch **Q**.**2** Touch the desired file or folder.

When you touch a folder its contents are displayed.

**3** Touch the desired item in the content list.  
 ▶ Playback starts.

**NOTE**

- For operations in the list screen, see **List screen (P.14)**.

**Using the Hands-Free Unit**

You can use the telephone function by connecting the Bluetooth telephone to this unit.

**NOTE**

- While Apple CarPlay or Android Auto is connected, the Bluetooth Hands-Free function and two Bluetooth devices connections cannot be used. Only the Apple CarPlay or Android Auto Hands-Free function can be used.

**Make a call**

**1** Press the **HOME/POWER** button.  
 ▶ HOME screen appears.

**2** Touch **PHONE**.

**3** Touch **Phone**. (P.12)  
 ▶ Hands-Free screen appears.

**NOTE**

- If your smartphone/cell-phone supports PBAP, you can display the phonebook and call lists onto the touch panel screen when the smartphone/cell-phone is connected.
  - Phonebook: up to 1000 entries
  - Up to 50 entries including dialed calls, received calls, and missed calls

**4** Select a dialing method.



- **Call records icon**: Call using call records
- **Phonebook icon**: Call using the phonebook
- **Star icon**: Call using the preset number
- **Grid icon**: Call by entering a phone number

## Bluetooth Control

### ● Select the smartphone/cell-phone to use

When you connect two smartphones/cell-phones

- 1) Touch   to select the phone you want to use.

### ● Bluetooth SETUP

- 1) Touch .  
Connections & AV setting menu appears.  
**(P.54)**


### ● Voice Recognition

- 1) Touch . **(P.59)**

#### NOTE



- Status icons such as battery and antenna icons may differ from those displayed on the smartphone/cell-phone.
- Setting the smartphone/cell-phone in the private mode can disable the Hands-Free function.


## Call using call records

- 1 Touch .
- 2 Select the phone number from the list.




## Call using the phonebook

- 1 Touch .
- 2 Touch  **A-Z**.
- 3 Select the initial.

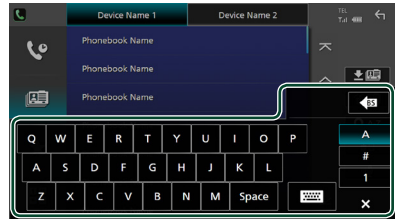


- Characters with no corresponding name will not appear.
- A first character with an accent character such as "ü" can be searched for with a non-accent character "u". A character with an accent character in a sentence cannot be searched for.

- 4 Select the person you want to call from the list.

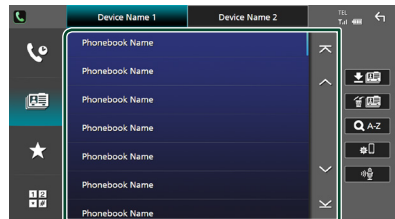

- 5 Select the phone number from the list.

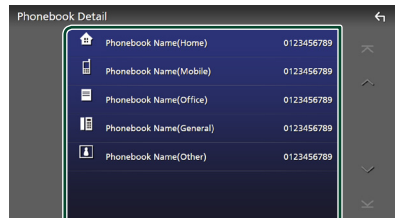



**NOTE**

- You can sort the phone numbers in the list by last name or first name. For details, see **Hands-Free Setup (P.62)**.
- When Russian is selected in "Language Select" (**P.68**), you can switch between English keyboard and Russian keyboard.
- When Hebrew is selected in "Language Select" (**P.68**), you can switch between English keyboard and Hebrew keyboard.
- You can search with 3 initial letters on the English keyboard and 1 initial letter on the Russian / Hebrew keyboard.

**Call using the preset number**

- 1 Touch .
- 2 Touch the name or phone number.

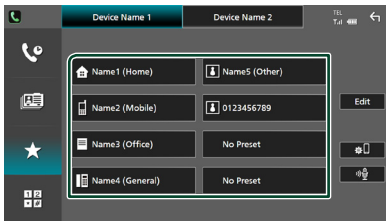**Call by entering a phone number**

- 1 Touch .
- 2 Enter a phone number with number keys.




- 3 Touch .

**Voice Recognition**

You can access the voice recognition function of the smartphone/cell-phone connected to this unit. You can search the smartphone/cell-phone phonebook by voice. (The functionality depends on the smartphone/cell-phone.)


- 1 Press the  button.

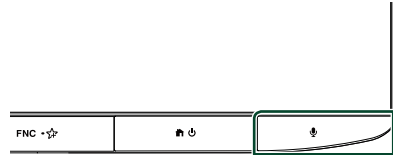



➤ Voice Recognition screen appears.

 
- 2 Start speaking.

**NOTE**

- You can use the voice recognition function by touching  on the Hands-Free screen.
- You can use the voice recognition function for the connected smartphone/cell-phone if you selected **TEL (HFP) 1** or **TEL (HFP) 2** for HFP when registered.

## Receive a call

- 1 Touch  to answer a phone call or  to reject an incoming call.

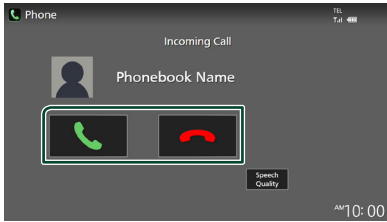

### NOTE

- When shifting the gear to the reverse (R) position and monitoring the picture from the rear view camera, this screen does not appear even if a call comes in.
- The portrait registered in the phonebook is displayed while making/receiving calls and during a call.
- If you edit the phonebook on the connected device side after downloading the phonebook, the portrait may not be displayed depending on the edited content. It is recommended that you download the phonebook whenever you edit it.
- The image quality of a displayed portrait may depend on a connected device.

## To end call


- 1 While talking, touch .

## Operations during a call



### ● Adjust the volume of your voice

- 1) Touch **Speech Quality**.
- 2) Touch ◀ or ▶ for **Microphone Level**.

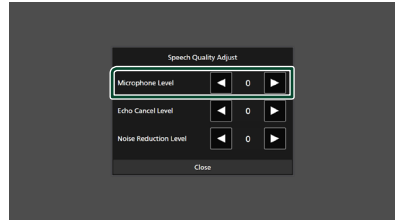


### ● Adjust the receiver volume

Press the - or + button.






### ● Mute your voice

Touch  to mute or not to mute your voice.


### ● Output the dial tone

Touch **DTMF** to display the tone input screen. You can send tones by touching desired keys on the screen.


### ● Switching between speaking voice output destinations

Touching  /  /  each time switches speaking voice output destinations between the smartphone/cell-phone and the speaker.

### ● Call-waiting

When you receive a new call while talking on the phone, you can answer the newly received call by touching . The current call is put on hold.

Each time you touch , the caller will change to the other one.

When you touch , the current call will end to be switched to the call waiting on hold.


## Phone number preset

You can register frequently used phone numbers in this unit.

- 1 Touch .
- 2 Touch **Edit**.




- 3 Select where to preset.

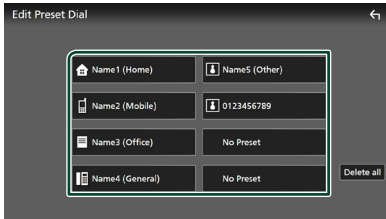

### Delete all

To delete all preset numbers, touch **Delete all** and then touch **OK** on the confirmation screen.

- 4 Select how to preset.

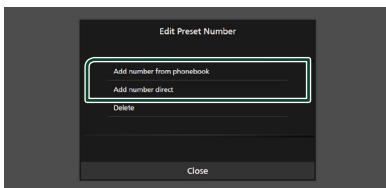

### Add number from phonebook

Select the number to preset from the phonebook.

### Add number direct

Enter the telephone number directly and touch **SET**.

### Delete

To delete a preset number, touch **Delete** and then touch **OK** on the confirmation screen.

## Phonebook transfer

You can transfer phonebook data from your Bluetooth smartphone using PBAP.

- 1 Touch .
- 2 Touch .




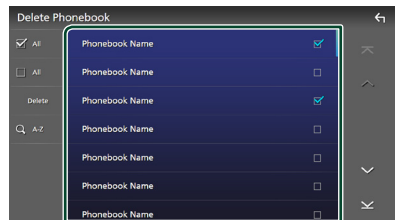
➤ Phonebook data transfer starts.

### NOTE

- If the Phonebook contains more than 1000 entries, only 1000 entries are transferred. The 1001st and later entries are not transferred.
- If no Phonebook has been downloaded, touching **Download Phonebook Now** will start downloading the Phonebook.
- The portrait registered in the phonebook is displayed while making/receiving calls and during a call.  
If you edit the phonebook on the connected device side after downloading the phonebook, the portrait may not be displayed depending on the edited content. It is recommended that you download the phonebook whenever you edit it.

## Phonebook deletion

- 1 Touch .
- 2 Touch the name to check.



### All

Checks all boxes.

### All

Clears all check marks.

- 3 Touch **Delete**.

➤ Confirmation message appears.

- 4 Touch **OK**.

## Hands-Free Setup

You can make various settings for the Hands-Free function.

**1** Press the  button.


➤ Popup menu appears.

**2** Touch .

**3** Touch **SETUP**

➤ SETUP Menu screen appears.

**4** Touch **Connections & AV**.

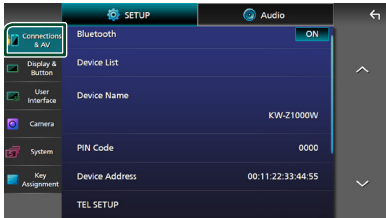

➤ Connections & AV setting menu appears.

**5** Touch **TEL SETUP**.

➤ TEL SETUP screen appears.

**6** Set each function as follows.



### Bluetooth HF/Audio

Select the speakers to output the sound from the smartphone/cell-phone (such as phone call voice and ringing tone) and Bluetooth audio player.

**Front**: Outputs sound from the front speakers.

**All** (Default): Outputs sound from all speakers.

### Auto Response\*

Set the automatic response time to pick-up an incoming call.

**OFF** (Default): Turns off the Automatic response function.

**1 / 5 / 10 / 15 / 20 / 25 / 30**: Sets the ringing time (second).

### Auto Pairing

When set to "ON", the Apple Auto Pairing function is turned on to automatically register the iPod touch or iPhone connected to this unit.

**ON** (Default): Turns on the Apple Auto Pairing function.

**OFF**: Turns off the Apple Auto Pairing function.

### Sort Order

 
Set how to sort the data in the smartphone/cell-phone phonebook.

**First** (Default): Sorts data by the first name.


**Last**: Sorts data by the last name.


\* Either the auto response time set on this unit or the time set on the smartphone/cell-phone, whichever is shorter takes effect.

**7** Touch **OK**.



# Setup

- 1 Press the  button.
- 2 Touch .
- 3 Touch **SETUP**.

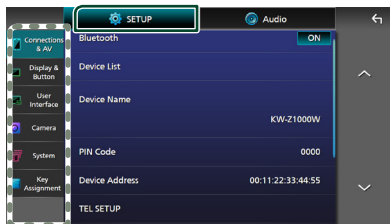

See the following section for each setting.


- Set up connections and AV ([P.63](#))
- Set up display and button ([P.65](#))
- Set up the user interface ([P.67](#))
- Set up camera ([P.47](#))
- Set up systems ([P.68](#))
- Set up key assignment ([P.69](#))

## Monitor Screen Setup

You can adjust the image quality of video, menu screen, etc.

- 1 Press the **FNC** /  button.
  - Pop up menu appears.

 - 2 Touch **Screen Adjustment**.



- Screen Adjustment screen appears.

- 3 Adjust each setting as follows.



### ■ Backlight / Contrast / Black / Brightness / Color / Tint

Adjust each setting.

### ■ Aspect

Select a screen mode.

**Full** : Changes the aspect ratio of video and displays video fully on the screen.

**Normal** : Displays video at the ratio of 4:3.

**Auto** : Displays video fully (vertically or horizontally) with no ratio change.

### NOTE

- Settings to adjust vary depending on the current source.

## Connections & AV Setup

You can set connections and AV parameters.

- 1 Press the  button.

- 2 Touch .


- 3 Touch **SETUP**.

- SETUP Menu screen appears.

- 4 Touch **Connections & AV**.

- Connections & AV setting menu appears.

- 5 Set each parameter as follows.

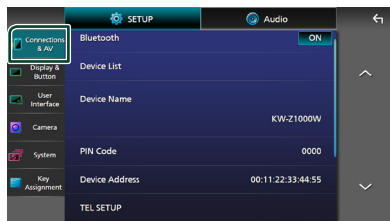

### ■ Bluetooth

Turns the Bluetooth function on or off.

### ■ Device List

Select the connected device to be used. ([P.53](#))



## Setup

### ■ Device Name

If you select **ON** for **Bluetooth**, you can change the Bluetooth device name.

See **Change the device name (P.64)**.

### ■ PIN Code

If you select **ON** for **Bluetooth**, you can change the PIN code.

See **Change the PIN Code (P.55)**.

### ■ Device address

Display the Bluetooth device address.

### ■ TEL SETUP

You can make various settings for the Hands-Free function.

See **Hands-Free Setup (P.62)**.

### ■ Wi-Fi SETUP

You can change the device name and display the device address, password. See **Change the device name (P.64)**.

### ■ Speech Quality Adjust

Adjust the speech quality.

**Microphone Level** : Adjust the level of microphone gain. Default is "0".

**Echo Cancel Level** : Adjust the level of echo cancellation. Default is "0".

**Noise Reduction Level** : Reduce the noise generated in the surrounding environment without changing the microphone volume. Use this function when the voice of caller is not clear. Default is "0".

### ■ iPod Bluetooth Connection

See **Select the method of making connections for outputting sound from the iPod source (P.27)**.

### ■ AV-OUT

You can select an AV source to be output from the AV OUTPUT port.

OFF, iPod, USB or AV-IN

- You cannot select AV-IN if the Video input terminal is used for camera.
- You cannot select iPod if it is connected via Bluetooth or Apple CarPlay is connected.
- If you select iPod as the main source, you cannot select USB as the AV output source.
- If you select USB as the main source, you cannot select iPod as the AV output source.

- If you select HDMI as the main source, files with sampling rates higher than 96 kHz in USB selected as the AV output source are skipped.

- If you select Bluetooth audio, HD Radio, Wireless Mirroring, Apple CarPlay or Android Auto as the main source, you cannot select USB or iPod as the AV output source.

### ■ Reset Android Auto Wireless Connection

You can change the password for wireless Android Auto.

The system of the unit is rebooted after selecting **YES**.

## Change the device name

**1 Touch Device Name** in the Connections & AV setting menu.


or

**Touch Wi-Fi SETUP** and then touch **Device Name**.

➤ Change Device Name screen appears.

**2 Touch and hold** .


**3 Input the device name.**

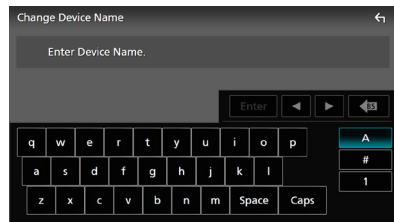

**4 Touch Enter.**

## Display & Button Setup

- 1 Press the button.
- 2 Touch .
- 3 Touch **SETUP**.
  - SETUP Menu screen appears.
- 4 Touch **Display & Button**.
  - Display & Button setting menu appears.
- 5 Set each parameter as follows.

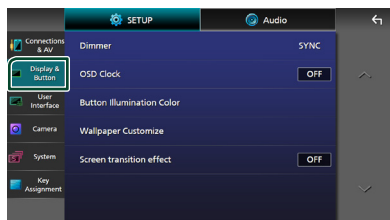

### ■ Dimmer

Select the dimmer mode.

**OFF**: Does not dim the display and buttons.

**ON**: Dims the display and buttons.

**SYNC** (Default): Turns the dimmer function on or off when the vehicle light control switch is turned on or off.

### ■ OSD Clock

Select if you want to display the clock while the screen is off, or while watching video files, etc.

"ON" (Default)/"OFF"

### ■ Button Illumination Color

You can set the button illumination color. (P.66)

### ■ Wallpaper Customize

You can change the wallpaper image or color. (P.65)



### ■ Screen transition effect

Select whether to use the screen transition effect when the source control screen is switched to the Home screen.

"ON" (Default)/"OFF"

## Change the wallpaper image

- 1 Touch **Wallpaper Customize** in the Display & Button setting menu.
- 2 Select an image from live or static wallpapers.

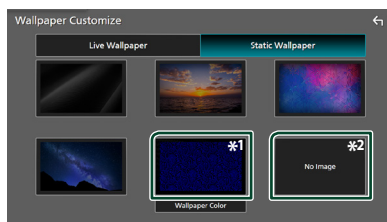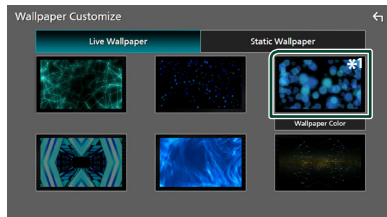


\*1 Select a wallpaper and button illumination color in advance.

\*2 Select an original image in advance.


### To select wallpaper color

- 1 Touch **Wallpaper Color** on the Wallpaper Customize screen.
- 2 Select a wallpaper color.

#### Live wallpaper

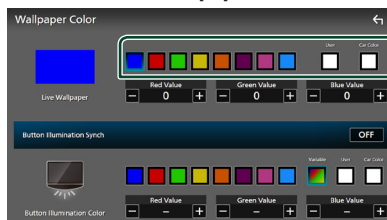

### Static wallpaper

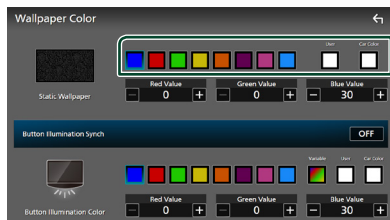

#### User

You can set the color created with the RGB color mixer. For how to create an original color, see **To register an original color (P.66)**.

#### Car Color

This can be selected when the iDataLink (commercially available) is connected.

#### Button Illumination Synch \*1

The color you have selected at **Button Illumination Color** can be set. If you adjust the color value with the following RGB color mixer, the adjusted color will be applied to the wallpaper and the button illumination. "ON"/"OFF"(default)

#### Button Illumination Color

You can set the button illumination color. **(P.66)**

\*1 When **Button Illumination Color** is "Variable" on the static wallpaper color screen, this option is fixed to OFF.

### 3 Touch .

#### To register an original image

With JVC Portal APP application installed on your iPhone or Android smartphone, you can upload image files to this unit and set an image as the wallpaper image. See **Importing Image Files (P.17)**.


#### Customizing the button color

You can set the button illumination color.


**1** Touch **Button Illumination Color** in the Display & Button setting menu or on the Wallpaper color screen.

### 2 Touch the desired color.

#### Live wallpaper

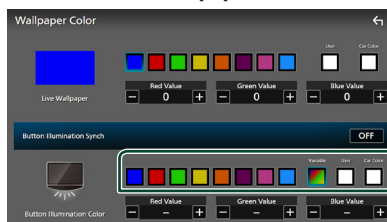

#### Static wallpaper

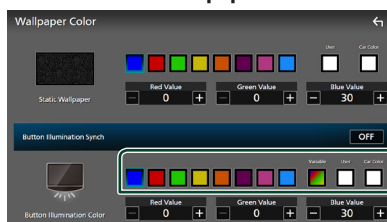

#### Variable

You can set the key color to continuously scan through the color spectrum.

#### User

You can set the color created with the RGB color mixer.

#### Car Color

This can be selected when the iDataLink (commercially available) is connected.

### 3 Touch .

#### To register an original color

You can register your original color.

**1** Touch **User** on the Button Illumination Color setting menu.

**2** Use - and + to adjust each color value.



### 3 Touch .

#### NOTE

- You can create a color based on a preset color. Touch the preset color instead of **User**, and adjust the color value.

## User Interface Setup

You can setup user interface parameters.

- 1 Press the  button.
- 2 Touch .
- 3 Touch **SETUP**.
  - SETUP Menu screen appears.
- 4 Touch **User Interface**.
  - User Interface setting menu appears.
- 5 Set each parameter as follows.



### ■ Source Setup - Remote Control

Select the sources to be switched with the remote controller. For how to operate the remote controller, see **Functions of the Remote control Buttons (P.83)**.

### ■ Steering Remote Controller

Sets the desired function in the steering remote controller. See **Learning function of steering remote (P.67)**.

### ■ Beep

Turn the key touch tone on or off.  
Default is "ON".

### ■ Gesture Touch Control Effect

Determine whether to show the trace of finger under gesture touch control. (P.9)  
"ON" (Default)/"OFF"

### ■ Parking Assist Display

When the iDataLink (commercially available) is connected, you can display information about obstacles around the car.

**ON**: Always displays information.

**Dyn.** (Default): Displays information when the sensor detects obstacles.

**OFF**: Cancels this function.

This can be set when the iDataLink (commercially available) is connected.

### ■ Parking Assist Position

Select where to display information about obstacles on the screen (left or right).

"Left"/"Right" (Default)

This can be set when the iDataLink (commercially available) is connected.

### ■ Driving Position

Select the driving position (left or right).

"Left" (Default)/"Right"

## ■ Learning function of steering remote

This function is available only when your vehicle is equipped with the electrical steering remote controller.

If your steering remote controller is not compliant, learning may not be completed and error message may appear.

### 1 Touch **Steering Remote Controller** in the User Interface setting menu.


➤ Steering Remote Controller Setting screen appears.

### 2 Press and hold the steering remote controller button.

#### NOTE


- You can have the unit learned all buttons at a time. In that case, press all buttons one at a time and after pressing all of them, touch **Learning completed** in Steering Remote Controller Setting screen. However, new functions cannot be learned after this operation.

### 3 Touch the function you want to set.

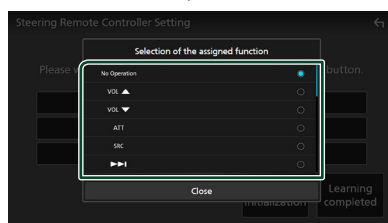

## Setup

### 4 Repeat steps 2 and 3 as necessary.

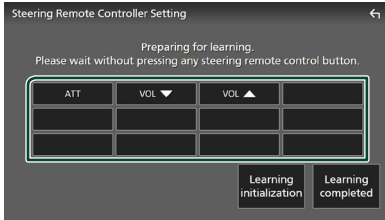

### 5 Touch Learning completed.

#### NOTE

- When changing the function already learned, press and hold the button you want to change in step 2 and then touch to select the changed function from the function list.
- Confirm the contents of the settable function on the function list. You cannot edit the function list.
- To initialize the contents, touch **Learning initialisation of Steering Remote Controller** in User Interface screen. After you touch **Initialise**, a confirmation message appears. Follow the message and complete the operation.

## System Setup

You can setup System parameters.

### 1 Press the button.

### 2 Touch .


### 3 Touch **SETUP**.

- SETUP Menu screen appears.

### 4 Touch **System**.

- System setting menu appears.

### 5 Set each parameter as follows.

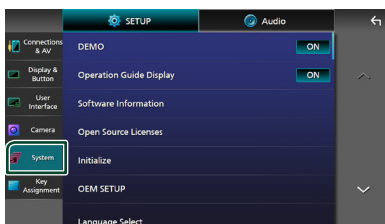

#### ■ DEMO

Select the demonstration mode. Default is "ON".

#### ■ Operation Guide Display

Determine whether to show the touch screen operation guide screen every time before HOME screen is displayed. Default is "ON".

#### ■ Software Information

Confirm the software version of this unit. (P.69)

#### ■ Open Source Licenses

Display the open source licenses.

#### ■ Initialize

Touch **Initialize** and then touch **Yes** to set all the settings to the initial default settings.

- Audio SETUP Memory is not initialized.

#### ■ OEM SETUP

Confirm the information about or change the settings for using the iDatalink (commercially available).

#### ■ Language Select

Select a language.

#### ■ Time Format

#### ■ Clock

#### ■ Time Zone

#### ■ Clock Adjust

You can set the date and time. See **Calendar/clock settings (P.8)**.

#### ■ Security Code Set

#### ■ Security Code Cancellation


#### ■ Security Code Change

You can set up a security code. See **Security Code Setup (P.7)**.

## Software Information

You can confirm the software version of this unit.

- 1 Touch **Software Information** in the System setting menu.
- 2 Confirm the software version.

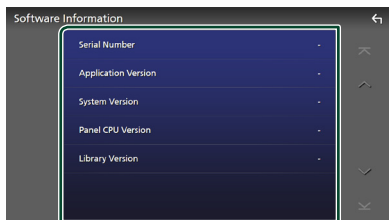


### NOTE

- For how to update the software, see the relevant update procedure manual which comes with the software.

## Key Assignment Setup

You can set key assignment parameters.

- 1 Press the **Home/Power** button.
- 2 Touch **Settings**.
- 3 Touch **SETUP**.
  - SETUP Menu screen appears.
- 4 Touch **Key Assignment**.
  - Key Assignment setting menu appears.
- 5 Set each parameter as follows.

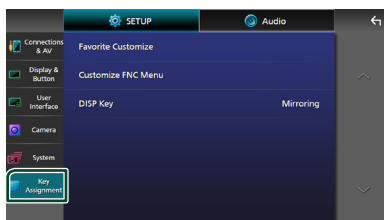

### ■ Customize Favorite Key

Select the function which you wish to set for **Favorite** icon. **(P.70)**

### ■ Customize FNC Menu

Select the function which you wish to set for the function key1 to 3. **(P.70)**

### ■ DISP Key

Select the source screen displayed when **DISP** in the popup menu screen is touched.


**OFF**: Displays the control screen of the current source.

**Mirroring** (Default): Switches to the App screen from the connected iPhone/Android smartphone or to the Apple CarPlay screen from the connected iPhone when the key is touched. **(P.18)**


## Setup

### Customize Favorite key

You can jump to your favorite function easily from Home screen.

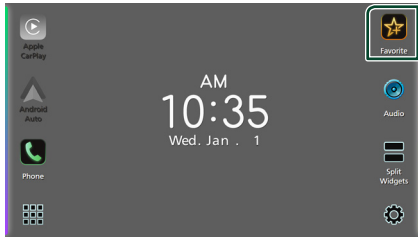


#### NOTE

 - You can also jump to your favorite function when you press and hold **FNC** /  button.
- Favorite key may be disabled on some screens depending on the registered function. When this key is invalid, start the desired function by normal procedure.

### To register a favorite function

- 1 Touch **Favorite Customize** in the Key Assignment setting menu.
  - Favorite Customize screen appears.
- 2 Touch **GUI key assignment**.
- 3 Select a favorite function.

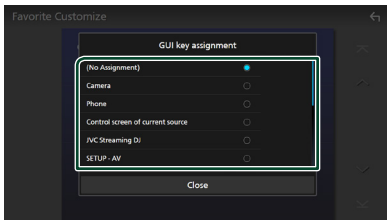


- 4 Touch **Close**.

#### NOTE

- You can also change the assignment when you touch and hold **Favorite** icon on the HOME screen.
- If it is your first time to touch **Favorite** icon after installation, the function list dialog will appear.

### Customize popup menu functions

You can register a function for each of the function key1 to 3.

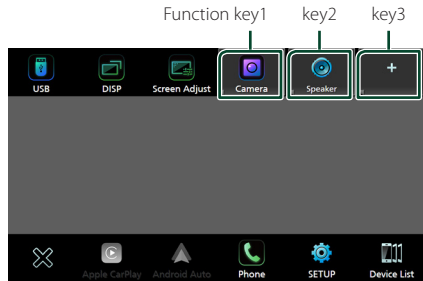


### To register a function

- 1 Touch **Customize FNC Menu** in the Key Assignment setting menu.
  - Customize FNC Menu screen appears.
- 2 Select the function key you want to customize.



- The function list dialog appears.

- 3 Select a function.

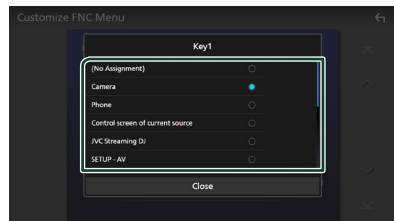

- 4 Touch **Close**.


#### NOTE

- You can change the assignment when you touch and hold the desired function key.

# Controlling Audio

You can adjust various settings such as audio balance or subwoofer level.

- 1 Press the button.
- 2 Touch .
- 3 Touch **Audio**.

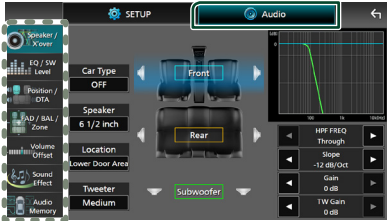

See the following section for each setting.

- Set up Speaker / X'over (P.72)
- Controlling EQ / SW Level (P.73)
- Set Position / DTA (P.74)
- Controlling FAD / BAL / Zone (P.76)
- Set Volume Offset (P.78)
- Set Sound Effect (P.78)
- Use Audio Memory (P.82)

## NOTE

- When the iDataLink (commercially available) is connected, the best audio settings are set automatically. Each parameter as follows are set.
  - Speaker / X'over
  - EQ / SW Level
  - Position / DTA
  - Fader / Balance
  - Sound Effect
- To recall the settings automatically adjusted by the iDataLink connection when the settings are changed manually, touch **Audio SETUP Clear** in the Audio Memory setting menu. (P.82)

## 3-way speaker system setup

Select the appropriate crossover network mode for the speaker system used (2-way or 3-way speaker system).


### CAUTION

- Connecting 3-way speakers with the 2-way mode selected can break the speakers.

- 1 Press the button.
- 2 Touch .


  - Source selection screen appears.

- 3 Touch **AV Off**.
- 4 Press the **-** button ① and the button ② for 1 second at the same time.

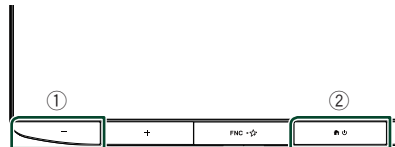

- Speaker system select screen appears.

- 5 Select the crossover network mode.

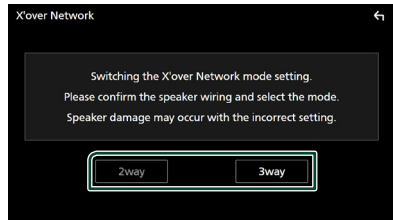

- A confirmation screen appears.

- 6 Touch **Yes**.



**NOTE**

- When the 3-way speaker system is selected, the following functions are disabled.
  - Front focus of Listening Position / DTA
  - Fader for Controlling General Audio
  - Zone Control
  - Selection of the speakers to output sound from the smartphone/cell-phone of Bluetooth HF/Audio
  - Beep for User Interface Setup
- While talking on the paired phone or using the voice recognition function, the speaker system cannot be switched.
- When the dual zone is selected and audio source other than "OFF" is selected as Rear Source, the speaker system cannot be switched to the 3-way mode.

**Speaker / X'over setup**

**1** Press the button.

**2** Touch .

**3** Touch **Audio**.


➤ Audio screen appears.

**4** Touch **Speaker / X'over**.


**5** Select a car type.

You can select the car type and speaker network, etc.

When you select your car type, the Delay Time Alignment is activated automatically (for timing adjustment of sound output for each channel) to have the highest surround effects.

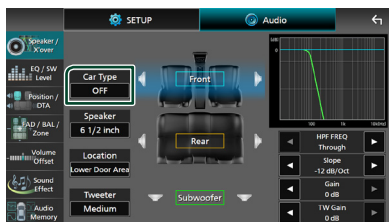

**6** Touch the speaker (1) you wish to adjust and set each parameter (2) as follows.

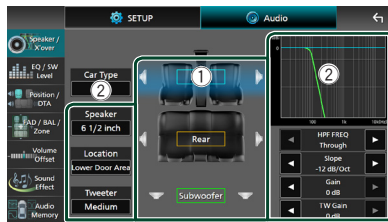

**Speaker**

You can select a speaker type and its size to get the best sound effects.

When the speaker type and size are selected, the speaker crossover network is set automatically.

**Location (Only for Front, Rear)**

Select the speaker position you have installed.

**Tweeter (Only for Front)**

You can set up the tweeter when you are selecting front speakers.

None, Small, Medium, Large

**HPF FREQ (Only for Front, Rear)**

High Pass Filter adjustment.

**LPF FREQ (Only for Subwoofer)**

Low Pass Filter adjustment.

**Slope**

Set a crossover slope.

**Gain**

Adjust the gain of the front speaker, rear speaker, or subwoofer.

**TW Gain (Only for Front)**


Adjust the tweeter level.

**Phase Inversion (Only for Subwoofer)**

Set the phase of subwoofer output.

Check **Phase Inversion** to shift the phase 180 degrees.

## When Speaker network is set to 3-way:

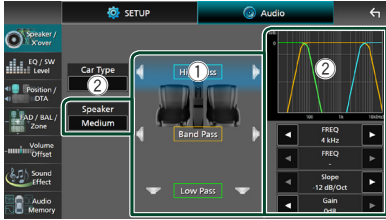

### ■ Speaker

You can select a speaker type and its size to get the best sound effects. If you have no speakers, select "None".

When the speaker type and size are selected, the speaker crossover network is set automatically.

### ■ FREQ (High Pass)

High Pass Filter adjustment. (Only for High Pass)

### ■ FREQ (Low Pass)

Low Pass Filter adjustment. (Only for Low Pass)

### ■ HPF FREQ, LPF FREQ (Only for Band Pass)

Band Pass Filter adjustment.

### ■ Slope \*1 \*2

Set a crossover slope.

### ■ Gain

Set the gain of each speaker.

### ■ Phase Inversion

Set the phase of tweeter, mid range, and woofer output.

Check **Phase Inversion** to shift the phase 180 degrees.

\*1 Only when "LPF FREQ"/"HPF FREQ" (Band Pass) is set to a mode other than "Through".

\*2 Only when "FREQ" (Low Pass) is set to a mode other than "Through".

## NOTE

- For how to switch to the 3-way speaker system, see **3-way speaker system setup (P.71)**.

## Equalizer Control

You can adjust equalizer by selecting the optimized setting for each category.

- 1 Press the **Home/Power** button.
- 2 Touch **Settings**.
- 3 Touch **Audio**.
  - Audio screen appears.
- 4 Touch **EQ / SW Level**.
- 5 Touch the screen and set the **Graphic Equalizer** as desired.



### ■ Gain level (area in dotted frame)

Adjust the gain level by touching each frequency bar.

You can select a frequency bar and adjust its level by **▲**, **▼**.

### ■ ALL SRC

Apply the adjusted equalizer curve to all sources. Touch **ALL SRC** and then touch **OK** on the confirmation screen.

### ■ Memory

Saves the adjusted equalizer curve as "User1" to "User4". **(P.74)**

### ■ Initialize

Initialize (flatten) the current EQ curve.

### ■ Bass EXT (Bass Extend Settings)

When turned on, the frequencies lower than 62.5 Hz is set to the same gain level (62.5 Hz).

### ■ SW Level


Adjust the subwoofer volume. This setting is not available when Subwoofer is set to "None". See **Speaker / X'over setup (P.72)**.

### ■ Pop / Hip Hop / R&B / Jazz / Classical / Hard Rock / Flat / Bass Boost / User1 / User2 / User3 / User4

Recall the preset EQ curve.

### Save the EQ curve

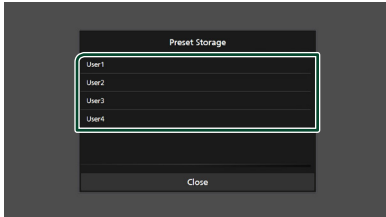

- 1 Adjust the EQ curve.
- 2 Touch **Memory**.
- 3 Select where to save.




## Listening Position / DTA

Listening Position / DTA allows you to improve the sound field depending on the position of the seat you sit.

Listening Position / DTA allows you to set "Listening Position" and "Front Focus". You cannot set both at the same time.

- 1 Press the  button.
- 2 Touch .
- 3 Touch **Audio**.
  - Audio screen appears.
- 4 Touch **Position / DTA**.

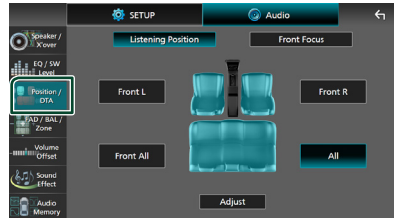


- Set up Listening Position ([P.74](#))
- Set up Front Focus ([P.75](#))

### Listening Position

Adjust the sound delay time so that the sounds from different speakers arrive at the listener sitting on the selected seat at the same time.


- 1 Touch **Listening Position** on the Position / DTA screen.
- 2 Select a listening position from **Front R** (Right front), **Front L** (Left front), **Front All** (All front), and **All**.

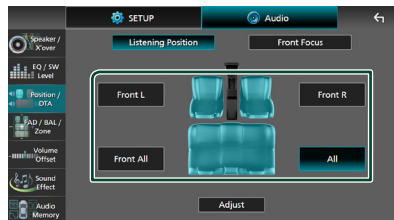


## Position DTA control

You can fine-adjust your listening position.

- 1 Touch **Adjust**.
- 2 Touch **Delay**.
- 3 Touch ◀ or ▶ to adjust the delay time of the selected speaker.

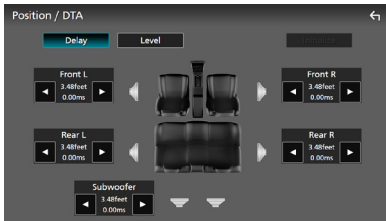

- 4 Touch **Level**.
- 5 Touch ◀ or ▶ to adjust the sound level of the selected speaker.

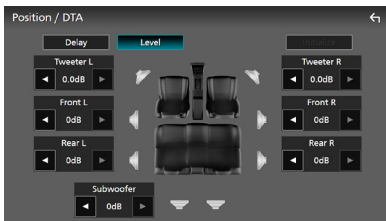

### NOTE


- To initialize the Delay and Level settings, touch **Initialize** and **YES** on the confirmation screen.

## Front Focus

You can focus the imaginary sound image on the front of the selected seat.

- 1 Touch **Front Focus** in the Position / DTA screen.
- 2 Select a front focus position.

For **Front All** and **All**, select Priority L or R depending on which side you want to put the imaginary sound image.

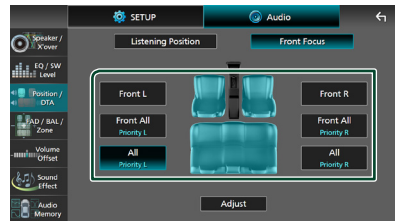


### NOTE

- When the 3-way speaker system is selected, front focus feature is disabled.


Front Focus fine adjustment

- 1 Touch **Adjust**.
- 2 Touch **Delay**.
- 3 Set each parameter as follows.

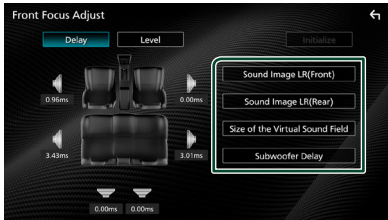

- **Sound Image LR (Front)**  
Focus the sound image on the front of front seats.
- **Sound Image LR (Rear)**  
Focus the sound image on the front of rear seats.
- **Size of the Virtual Sound Field**  
Adjust the size of sound image to meet your taste. If the sound image is shifted from the front, move it back by **Sound Image LR (Front)** or **Sound Image LR (Rear)**.
- **Subwoofer Delay**  
Adjust the delay time of subwoofer sound.

- 4 Touch **Level**.
- 5 Touch **◀** or **▶** to adjust the sound level of the selected speaker.

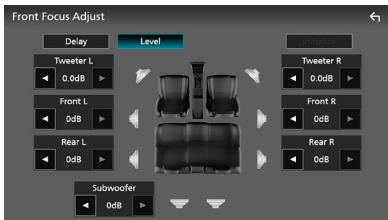


**NOTE**

- To initialize the Delay and Level settings, touch **Initialize** and **YES** on the confirmation screen.

Fader / Balance / Zone Control

- 1 Press the **Home/Power** button.
- 2 Touch **Settings**.
- 3 Touch **Audio**.  
▶ Audio screen appears.
- 4 Touch **FAD / BAL / Zone**.

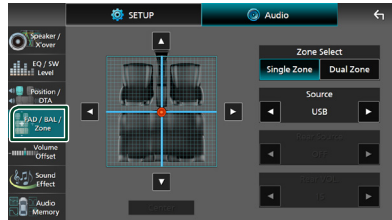


- Fader / Balance Control (P.76)
- Set up Zone Control (P.77)

**Fader / Balance Control**

You can adjust the volume balance among the speakers.

- 1 Touch **◀**, **▶**, **▲**, and **▼** to adjust the volume balance.

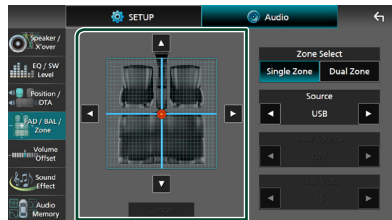

- ◀ and ▶ adjust the left and right volume balance.
- ▲ and ▼ adjust the front and rear volume balance.

- **Center**  
Clear the adjustment.


**NOTE**

- When the 3-way speaker system is selected, "Fader" adjustment is disabled.

## Zone Control

You can select different sources for front and rear positions in the vehicle.


### 1 Touch **Dual Zone** on the FAD / BAL / Zone screen.

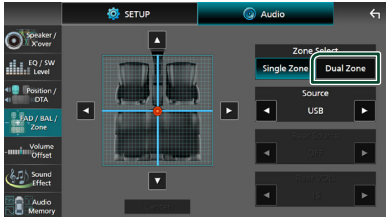

#### Source

You can switch the current source.

### 2 Set each source as follows.

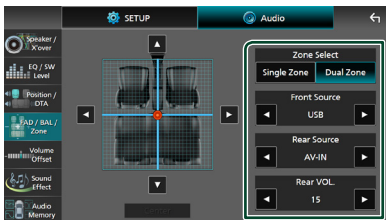

#### Zone Select

Touch **Single Zone** to turn off the dual zone function.

#### Front Source, Rear Source

Select an audio source for each.

Rear Source;

"AV-IN"/"iPod"/"USB"/"OFF"

#### Rear VOL.

Adjust the rear source volume.

## NOTE

- When the rear source is switched, the audio source that is output at the AV OUTPUT terminal is also switched to the same source.
- When the dual zone function is set to on, the following functions are not available.
  - Output from the subwoofer
  - Subwoofer Level/Bass Boost (**P.78**)
  - Equalizer Control/Sound Effect/Listening Position (**P.73, 78, 74**)
  - Speaker Setup (**P.72**)
  - Fader for Controlling General Audio
  - High-resolution Sound Source File Playback
- When the dual zone is selected and audio source other than "OFF" is selected as Rear Source, the speaker system cannot be switched.
- You cannot select AV-IN if the Video input terminal is used for camera.


## Rear Source

- You cannot select iPod if it is connected via Bluetooth or Apple CarPlay is connected.
- If you select iPod as the Front Source, you cannot select USB as the Rear Source.
- If you select USB as the Front Source, you cannot select iPod as the Rear Source.
- If you select HDMI as the Front Source, files with sampling rates higher than 96 kHz in USB selected as the Rear Source are skipped.
- If you select Bluetooth audio, HD Radio, Wireless Mirroring, Apple CarPlay or Android Auto as the Front Source, you cannot select USB or iPod as the Rear Source.

## Volume Offset

Finely adjust the volume of the current source to minimize the difference in volume between different sources.

- 1 Press the button.
- 2 Touch .
- 3 Touch **Audio**.
  - Audio screen appears.
- 4 Touch **Volume Offset**.
- 5 Touch **+ or -** to adjust the level.

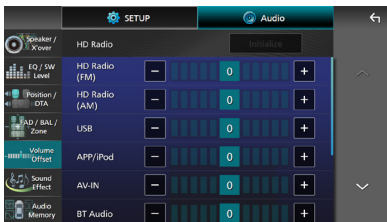

### ■ Initialize

Returns to the initial settings.

Touch **Initialize** and then touch **YES** on the confirmation screen.

### NOTE


- If you have increased the volume first, then reduce the volume using "Volume Offset". Switching the current source to another source suddenly may output extremely loud sound.

## Sound Effect

You can set sound effects.

- 1 Press the button.
- 2 Touch .
- 3 Touch **Audio**.
  - Audio screen appears.
- 4 Touch **Sound Effect**.

## 5 Set each parameter as follows.

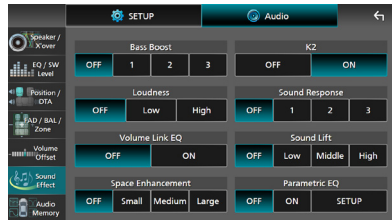

### ■ Bass Boost

Set the amount of bass boost "OFF"/"1"/"2"/"3".

### ■ Loudness

Set the amount of boost of low and high tones.

"OFF"/"Low"/"High"

### ■ Volume Link EQ

Reduce the driving noise by boosting specific frequencies in the audio signal.

"OFF"/"ON"

### ■ Space Enhancement

Select the feeling of sound space enhancement.

"OFF"/"Small"/"Medium"/"Large".

This setting is not available for the HD Radio tuner source.

### ■ K2

Turn ON/OFF the K2 function.

Technology to extrapolate and supplement with proprietary algorithm, the high-frequency range that is cut off when encoding.

### ■ Sound Response

Virtually make the sound more realistic using the Digital Signal Processor (DSP) system.

Select the level from "OFF"/"1"/"2"/"3".

### ■ Sound Lift

You can adjust the height of speakers virtually to suit your listening position.

"OFF"/"Low"/"Middle"/"High".

### ■ Parametric EQ

When set to "ON", you can use the parametric equalizer. For details, see **Parametric Equalizer (P.79)**.

## Parametric Equalizer

In addition to the conventional Graphic Equalizer, this unit has a parametric equalizer, which allows you more precise adjustments. By using each equalizer properly, you can calibrate the unit more thoroughly. Adjustment using this function requires expertise.

### When to Use Each Function

#### ● Parametric Equalizer

Use this to finely correct or improve the frequency characteristics of the acoustics of the car in order to establish a basis for adjustments.

Practiced ears or a measuring equipment may be required to apprehend the problems of the sound field inside the car.

#### ● Graphic Equalizer

Use this to actively create an attractive sound as conventionally.

Everybody can easily get the result through trial and error of intuitive operations.

Even more effective adjustments are possible when the basis is established by using the Parametric Equalizer.

### ■ About the Parametric Equalizer

This system allows you to freely control the filter, frequency, Q factor (acuteness) and slope gain at 14 points consisting of 9 points common for front/rear/subwoofer, 2 points for front only, 2 points for rear only, and one point for subwoofer only.

#### NOTE

- Configure the Parametric Equalizer to establish the basis for adjustments before making adjustments using the Graphic Equalizer.
- The changes made using the Parametric Equalizer are not shown on the Graphic Equalizer screen.
- You can check the effects using the Parametric Equalizer ON/OFF key.


### About Adjustments

If there are unpleasant peaks, you can slide the peaking filter to the left or right and search the frequencies by ear. Studio engineers use this method to make adjustments quickly and efficiently.

However, in order to identify peaks and dips of a car audio system, you have to capture the pink noise outputted from the speaker using a microphone and analyze it using a real time analyzer (RTA). From the analysis result, identify the peaks and/or dips that need to be corrected and configure the filters to cancel them.

### About the Filters of Parametric Equalizer

Filters allow you to remove or extract specific sound through signal processing.

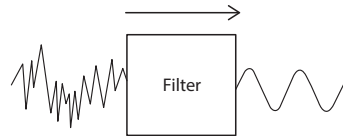

#### NOTE


- Cutoff frequency is the boundary between the passband and the stopband. The definition of cutoff frequency is a frequency for which the output is -3 dB of the nominal passband value.



### ● High-Pass Filter

Passes signals with frequencies higher than a certain frequency ( $f_c$ : cutoff frequency) and attenuates signals with frequencies lower than the cutoff frequency. Use this to pass only high-frequency signals. Use this in the following cases for example:


- For extracting the frequency band for separate tweeters. By extracting the specific frequency band, level adjustment can be made to the frequency band individually.
- The sound may be muddy when you play back low frequency sound. This occurs when frequencies below the speaker capacity is inputted. To cancel this, use the high-pass filter to cut off the frequencies below the speaker capacity.

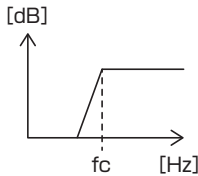

### ● High-Shelving Filter/Low-Shelving Filter

These filters reduce or increase signals above or below a certain frequency ( $f_c$ : cutoff frequency), which create shelves in the frequency spectrums. A high-shelving filter reduces or increases the frequencies above the target frequency and a low-shelving filter reduces or increases the frequencies below the target frequency. The low shelf controls the lower frequencies and the high shelf controls the high frequencies. Use these in the following cases for example:


- When you want to change the volume of the tweeters, for example when they are close to your ears and are sounding too loud.
- When you want to change the subwoofer volume at hand.

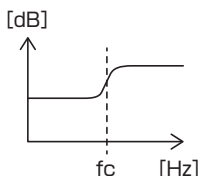

### ● Peaking Filter

The frequencies in the vicinity of a certain frequency ( $f_0$ : center frequency) are boosted or attenuated. Use this in the following cases for example:


- When you want to control a narrow range of frequencies to correct the frequency abnormality in the car.
- To diminish a chattering noise from the speaker by attenuating the frequency range of the noise.
- To adjust of the sound balance of the whole range between the low end and the high end.

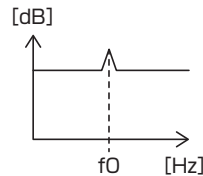

### ● Low-Pass Filter

Passes signals with frequencies lower than a certain frequency ( $f_c$ : cutoff frequency) and attenuates signals with frequencies higher than the cutoff frequency. Use this to pass only low-frequency signals. Use this in the following cases for example:

- For extracting the low frequencies band for a subwoofer.
- For extracting middle/low frequencies when you are using speakers with separate tweeters and you want to output the high frequencies to the tweeters and output the middle/low frequencies to the woofers.
- To cut the high frequencies when they are too loud.

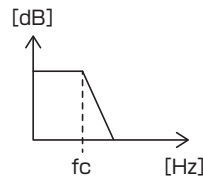


## Adjust the Parametric Equalizer

### Preparation

- Correct the value in "Listening Position" and "Front Focus" before adjusting the parametric equalizer. See *Listening Position / DTA (P.74)*.

- Press the button.
- Touch .
- Touch **Audio**.
- Touch **Sound Effect**.
- Set the Parametric EQ to **ON** and touch **Yes**.
- Touch **SETUP**.
  - Parametric EQ screen appears.
- While auditioning music, move the peaking filter to the left and right to search for unpleasant peaks and suppress them.
- Use pink noise and an analyzer to identify dips, as dips are difficult to find. Correct steep (10 dB or greater) peaks and dips as these are generally regarded as obstructions to sound quality.
- Set each parameter as follows.

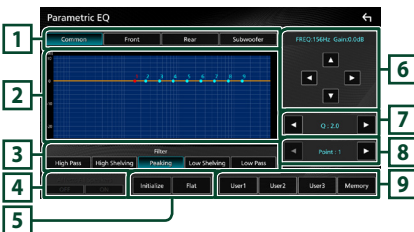

### 1 Speaker

Select the speaker.

**When Speaker network is set to 2-way:**

"Common" / "Front" / "Rear" / "Subwoofer"

**When Speaker network is set to 3-way:**

"Common" / "Tweeter" / "Middle" / "Woofers"

### 2 EQ points/curve

Displays the EQ point and the curve. Adjust the EQ points by touching.

**EQ point (red):** The EQ point currently being adjusted.

**EQ point (blue/yellow):** EQ points that are not currently being adjusted.

**Curve (orange):** EQ curve of the speaker currently being adjusted.

**Curve (blue):** Overall EQ curve.

### 3 Filter

Select the filter.

"High Pass" / "High Shelving" / "Peaking" / "Low Shelving" / "Low Pass"

### 4 Affects All Speakers<sup>\*1</sup>

- ON:** Outputs sound from all speakers.
- OFF:** Outputs sound from the currently selected speaker only.

### 5 Initialize / Flat

- Initialize:** Initialize (flatten) the adjustment of all the speakers.
- Flat:** Initialize (flatten) the adjustment of the current speaker.

### 6 Frequency / Gain

Set the frequency and gain.

◀ and ▶ adjust the frequency.

▲ and ▼ adjust the gain.

### NOTE

- Touch the EQ point to roughly determine the frequency and gain, then use this key to make fine adjustments.

### 7 Q / Slope<sup>\*2</sup>

Set the Q factor and slope.

### 8 Point

Select the EQ point to adjust.

### 9 Preset

- User1 / User2 / User3:** Recalls the preset EQ.
- Memory:** Stores the current EQ settings.

\*1 Only when the speaker other than "Common" is selected.

\*2 When "Peaking" filter is selected, you can adjust the Q factor. When "High Pass" or "Low Pass" filter is selected, you can adjust the slope.

### NOTE

- You can adjust the EQ points and curve based on a preset EQ. Recall the preset EQ and touch the preset key again to unselect it before adjustment.



## Controlling Audio


**10** When you have finished adjustments, save the results as a preset, and check the effects by switching presets or turning the Parametric EQ **ON** and **OFF**.

**11** Use the Graphic Equalizer to make final adjustments. (P.73)

## Audio Setup memory

Audio Control settings can be memorized. The memorized settings can be recalled at any time.

- 1 Press the  button.
- 2 Touch .
- 3 Touch **Audio**.  
➤ Audio screen appears.
- 4 Touch **Audio Memory**.

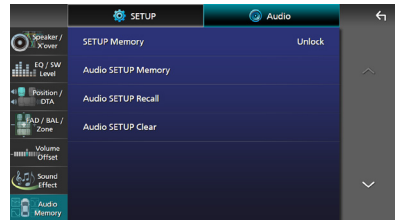

### ■ SETUP Memory

Lock or unlock the Audio SETUP Memory/ Recall/Clear.

### ■ Audio SETUP Memory

Memorize the current audio settings.

- Fader / Balance, Speaker / X'over, Equalizer (User Preset, SW Level), Position / DTA, Sound Effect (P.71)

### ■ Audio SETUP Recall

Recall the memorized audio setting.

### ■ Audio SETUP Clear

Clear the Audio SETUP Memory and the currently memorized audio settings.

If the iDataLink (commercially available), is connected, the audio settings revert to the values set by the iDataLink.

# Remote control

This unit can be operated using the remote control.

The remote control is the optional accessory (RM-RK258).

## ▲ WARNING

- Do not ingest the battery, Chemical Burn Hazard

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## ▲ CAUTION


- Risk of fire or explosion if the battery is replaced by an incorrect type. Ensure to replace only with the same type.
- Risk of fire, explosion or the leakage of flammable liquid or gas if the battery is left in an extremely high temperature surrounding environment and/or subjected extremely low air pressure. The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Risk of fire, explosion or the leakage of flammable liquid or gas if the battery is disposed into fire or a hot oven, recharged, shorted, mechanically crushed or cut of the battery.
- If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.

## Battery Installation




- Use a commercially available button battery (CR2025).
- Insert the battery with the + and – poles aligned properly.
  - If the effectiveness of the remote controller decreases, replace the battery.

## Functions of the Remote control Buttons

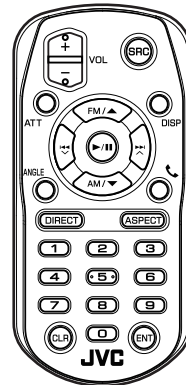

Key Name	Function
SRC	Switches to the source to be played. In Hands-Free mode, hangs up the phone. <b>(P.67)</b>
VOL + -	Adjusts the volume.
ATT	Lowers the volume when pressed once. Restores the previous volume when pressed twice.
DISP	Switches the screen between the current source and the App screen from the connected iPhone/Android.

Key Name	Function
FM/▲ AM/▼	Selects the folder to be played. For the HD Radio source, selects FM/ AM band to be received. For the SiriusXM source, selects the band to be received.
◀◀ ◻ ▶▶ ◻	Selects the track or file to be played. For the HD Radio and SiriusXM sources, switches to broadcast stations received by the unit.
▶/	For the HD Radio and SiriusXM sources, switches the seek mode.
ANGLE	Not used.
	When a call comes in, answers the call.
DIRECT	Switches to the direct search mode. For details on the direct search mode, see <b>Direct search mode (P.84)</b> .
ASPECT	Changes the aspect ratio. • To confirm the current aspect ratio setting, operate on the touch panel. <b>(P.63)</b>
Numeric Keypad	<ul style="list-style-type: none"> <li>• Allows you to enter the number to search in the direct search mode. For details on the direct search mode, see <b>Direct search mode (P.84)</b>.</li> <li>• For the HD Radio and SiriusXM sources, allows you to enter the preset number. <ul style="list-style-type: none"> <li>– If the preset number is single digit, press the number.</li> <li>– If the preset number is double digits, press continuously the numbers within 3 seconds.</li> <li>– Pressing ◀◀ or ▶▶ within 3 seconds allows you to determine the preset number of single digit.</li> </ul> </li> </ul>
CLR	Not used.
ENT	Not used.

## Direct search mode

Using the remote control, you can jump directly to the desired channel by entering the number corresponding to the content.

### NOTE

- This operation cannot be performed for the USB device and iPod.

### 1 Press the **DIRECT** button several times until the desired content appears.

The available contents are different depending on the source type.

#### ■ HD Radio tuner

Frequency value/Channel number

#### ■ SiriusXM

Channel number

### 2 Enter the number of the content you want to play using the numeric keypad.

### 3 Press the ◀◀ or ▶▶ button.

- The content corresponding to the number you entered is played.

# Connection/Installation

This section is for the professional installer. For safety's sake, leave wiring and mounting to professionals. Consult the car audio dealer.

## Before Installation

Before installation of this unit, please note the following precautions.

### ▲ WARNINGS

- If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse.

### ▲ CAUTION


- Install this unit in the console of your vehicle. Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.

### NOTE

- Mounting and wiring this product requires skills and experience. For best safety, leave the mounting and wiring work to professionals.
- Do not install the unit if it becomes an obstacle to driver performance.
- Adjust the panel position not to become an obstacle to driver performance.
- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.


- If the power is not turned ON ("There is an error in the speaker wiring. Please check the connections." is displayed), the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.
- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, such as with battery wires, the battery may be drained.
- If the console has a lid, the lid will not be closed even when the unit is installed correctly.
- If the fuse blows, first make sure the wires aren't touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the ⊖ wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the ⊕ connector of the left speaker to a front output terminal, do not connect the ⊖ connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Mount the unit so that the mounting angle is 30° or less.
- This unit has the cooling fan to decrease the internal temperature. Do not mount the unit in a place where the cooling fan of the unit is blocked. Blocking these openings will inhibit the cooling of the internal temperature and result in malfunction.

## Connection/Installation

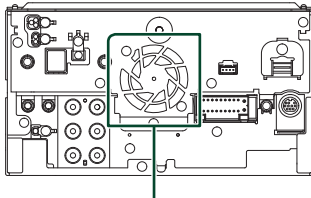

Cooling fan


- Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scars, damage, or failure may result.
- Reception may drop if there are metal objects near the Bluetooth/Wi-Fi antenna.

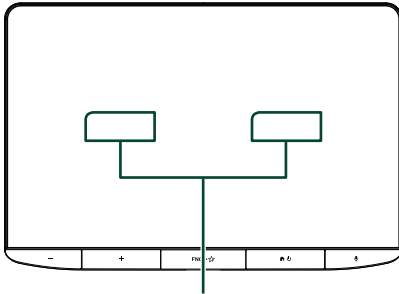

Bluetooth/Wi-Fi antenna unit

### ● Forward and Lateral Fields of Vision

- To determine driver's forward and lateral fields of vision under normal conditions, place a pole (directly visible from the front or visible through the car rear-view mirror) as shown.

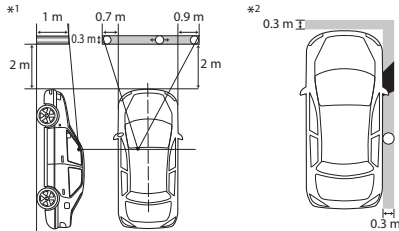

- : Pole (height: 1m, diameter: 0.3m)
- : Field of vision from steering position
- : Exempted area (pole size is subject to regulation)

 

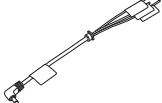 
- For right hand drive vehicles, standards are reversed.

\*1 The pole must be visible from the driver's position as direct forward field of vision.

\*2 The pole must be directly visible or indirectly visible through the mirror, etc. from the driver's position.

## Supplied accessories for installation

①		x1
②		x1
③		x1
④		x6
⑤		x6
⑥		x1
⑦		x1
⑧		x1
⑨		x2
⑩		x1
⑪		x6

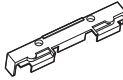12		x1
13	 <p>(Ø3 x 6 mm) (Black)</p>	x2
14		x1

## ■ Installation procedure

- 1) To prevent a short circuit, remove the key from the ignition and disconnect the ⊖ terminal of the battery.
- 2) Remove the vehicle parts for installing the unit and connecting wires to terminal.
- 3) Make the proper input and output wire connections for each unit.
- 4) Connect the speaker wires of the wiring harness.
- 5) Connect the wiring harness wires in the following order; ground, battery, ignition.
- 6) Determine the height of the display unit and position of the slider. See **Distance between the display unit and the main unit (P.88)**.
- 7) Connect the wiring harness connector to the unit.
- 8) Install the main unit to the vehicle.
- 9) Reinstall the vehicle parts.
- 10) Install the display unit.
- 11) Reconnect the ⊖ terminal of the battery.
- 12) Perform the Initial Setup.  
See **Initial SETUP (P.6)**.






## Installing the unit

### Confirm the installing position of the display unit







#### ● Vehicles cannot be installed

It may be possible to install if it can avoid the following by adjustment for slider position and display height.

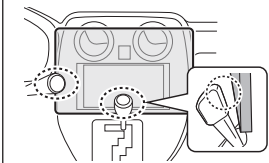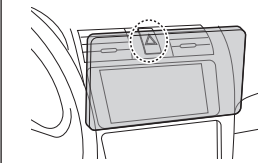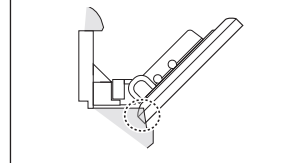Lever operations are interfered such as shift lever, wiper lever, winker lever when install the unit.	A hazard switch is hidden from a driver seat.	The display unit hits a panel on the vehicle.
		

#### ● Distance between the display unit and the main unit

    
Adjust slider position and display height so that it does not interfere with display movement.

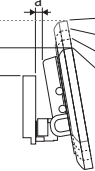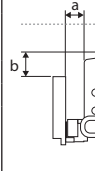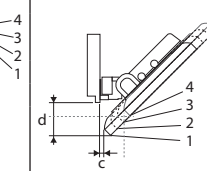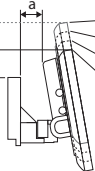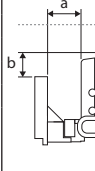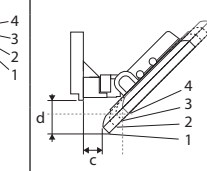Slider position	Display angle				Display height				
	-10°	0°	45°		1	2	3	4	
Back position				-10°	10				
				a	38.1	50.9	63.8	76.5	
	0°	a				26.7			
		b	34.7	47.7	60.7	73.7			
		c	5.7	14.4	24.1	33.4			
		d	45.8	36.6	27.4	18.2			
Forward position				-10°	30.1				
				a	38.1	50.9	63.8	76.5	
	0°	a				46.7			
		b	34.7	47.7	60.7	73.7			
		c	25.7	34.9	44.1	53.3			
		d	45.8	36.6	27.4	18.2			


Unit: mm

#### Examples



 
Cluster panel on the vehicle



Slider in back position

 

Slider in forward position

   


• C'=50mm;  
Slider position: Forward position  
Display height: Set only "4"

• C'=30mm;  
Slider position: Back position  
Display height: Set only "4"


Slider position: Forward position  
Display height: Set "2"~"4"

## Positioning the slider in forward


- 1 Remove the four screws from the bottom of the main unit.

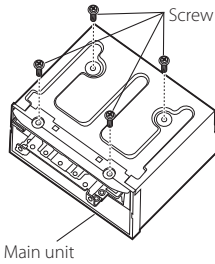


- 2 Remove the two covers for back position, and then remove the two hexagon head screws from the bracket for back position.

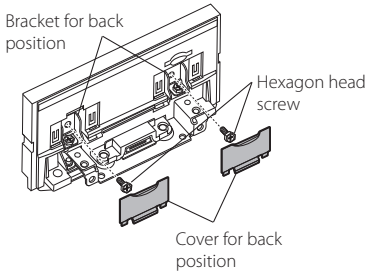


- 3 Pull the slider block forward and remove the two hexagon head screws to remove the bracket for back position.

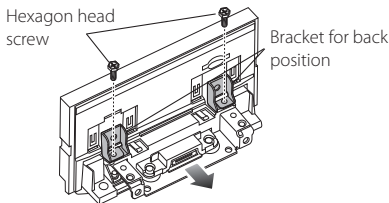


- 4 Install the bracket for forward position (accessory 10) each side so that its projections are aligned with the slots on the main unit.

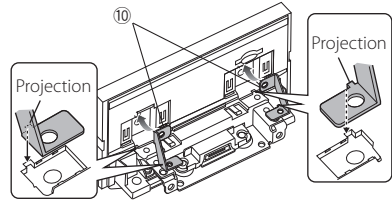


- 5 Fix the bracket for forward position to the slider block with the two hexagon head screws. Push the slider block until it stops and then fix the bracket for forward position to the main unit with the two hexagon head screws.

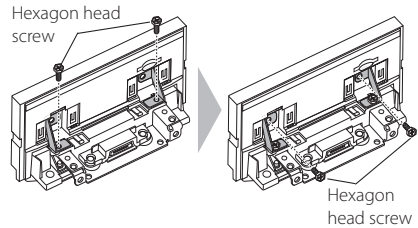

- 6 Reinstall the four screws to the bottom of the main unit.

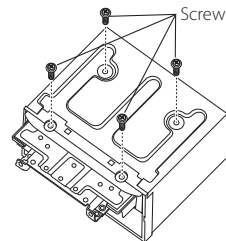


- 7 Install the cover for forward position (accessory 9) to two locations, as shown.

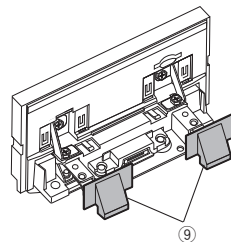


### Adjusting the display height

- 1 Remove the four flat head screws from both sides.

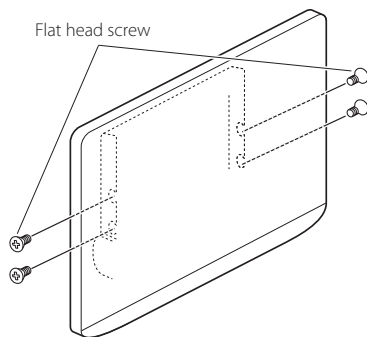

- 2 Adjust the display height according to the screw hole position. Default is "1".

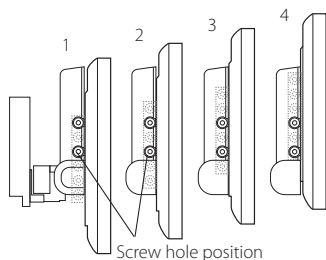

- 3 Reinstall the four flat head screws on both sides and fix the display.

#### NOTE


- Fix with flat head screws correctly. After installing the display unit (accessory ⑧) to the main unit, tilt the display forward until it stops and confirm that the display unit (accessory ⑧) does not hit vehicle parts. If the display unit hits vehicle parts, adjust the display height again.

### GPS antenna

GPS antenna is installed inside of the car. It should be installed as horizontally as possible to allow easy reception of the GPS satellite signals.

To mount the GPS antenna inside your vehicle:

- 1) Clean your dashboard or other surface.
- 2) Remove the separator of the metal plate (accessory ⑦).
- 3) Press the metal plate (accessory ⑦) down firmly on your dashboard or other mounting surface. You can bend the metal plate (accessory ⑦) to conform to a curved surface, if necessary.
- 4) Remove the separator of the GPS antenna (accessory ⑥), and stick the antenna to the metal plate (accessory ⑦).

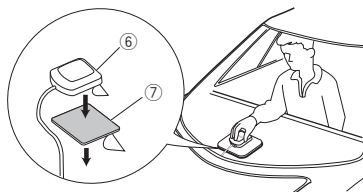


#### NOTE

- Use the supplied GPS antenna. Using the GPS antenna other than the supplied one may cause a drop in positioning accuracy.
- Depending on the type of car, reception of the GPS satellite signals might not be possible with an inside installation.
- Please install this GPS antenna in an area away from any antennas that are used with CB radios or satellite televisions.
- The GPS antenna should be installed at a position that is spaced at least 12 inch (30 cm) from smartphone/cell-phone or other transmitting antennas. Signals from the GPS satellite may be interfered with by these types of communication.
- Painting the GPS antenna with (metallic) paint may cause a drop in performance.

## Microphone unit

- 1) Check the installation position of the microphone (accessory ③).
- 2) Clean the installation surface.
- 3) Remove the separator of the microphone (accessory ③), and stick the microphone to the place shown below.
- 4) Wire the microphone cable up to the unit with it secured at several positions using tape or other desired method.
- 5) Adjust the direction of the microphone (accessory ③) to the driver.

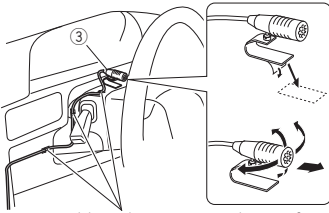

Fix a cable with a commercial item of tape.


## Installing the main unit

### NOTE

- Determine the slider position before installing the main unit. **(P.89)** The slider position cannot be changed after installing to the vehicle.
- Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (eg, the sound may skip).

- 1 Remove parts that interfere with installing such as a panel on the vehicle.

- 2 Install the car bracket to the main unit.

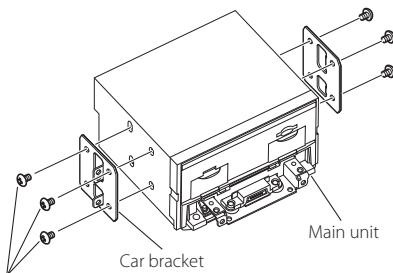


④ or ⑤


- 3 Connect the wiring harness wires and peripheral equipment.

- 4 Install the main unit to the vehicle.

- 5 Reinstall the removed parts such as a panel on the vehicle.

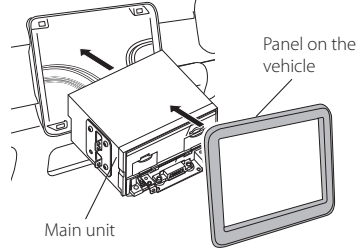


- 6 Install the display unit (accessory ⑧) to the main unit.

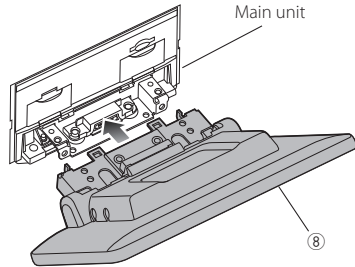

### NOTE


- If the display unit hits a panel on the vehicle, adjust the display height by referring to **Adjusting the display height (P.90)**.

- 7 Fix the display unit with six hexagon head screws (accessory ⑪).

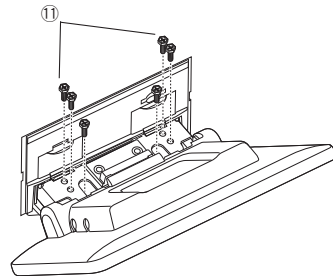

## Connection/Installation

- 8 Attach the protective cover (accessory ⑫) to coupling part, and then fix it with two binding head screws (accessory ⑬).

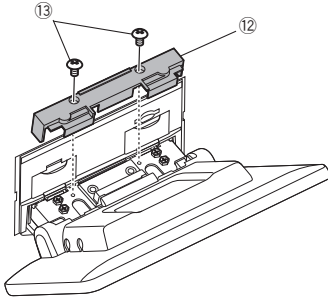


### NOTE


- If the protective cover (accessory ⑫) is not attached, this unit will not turn on. Even if the unit is turned on, the power may be turned off halfway.  
Be sure to attach the protective cover (accessory ⑫).

- 9 Raise the display manually.

## Connecting wires to terminals

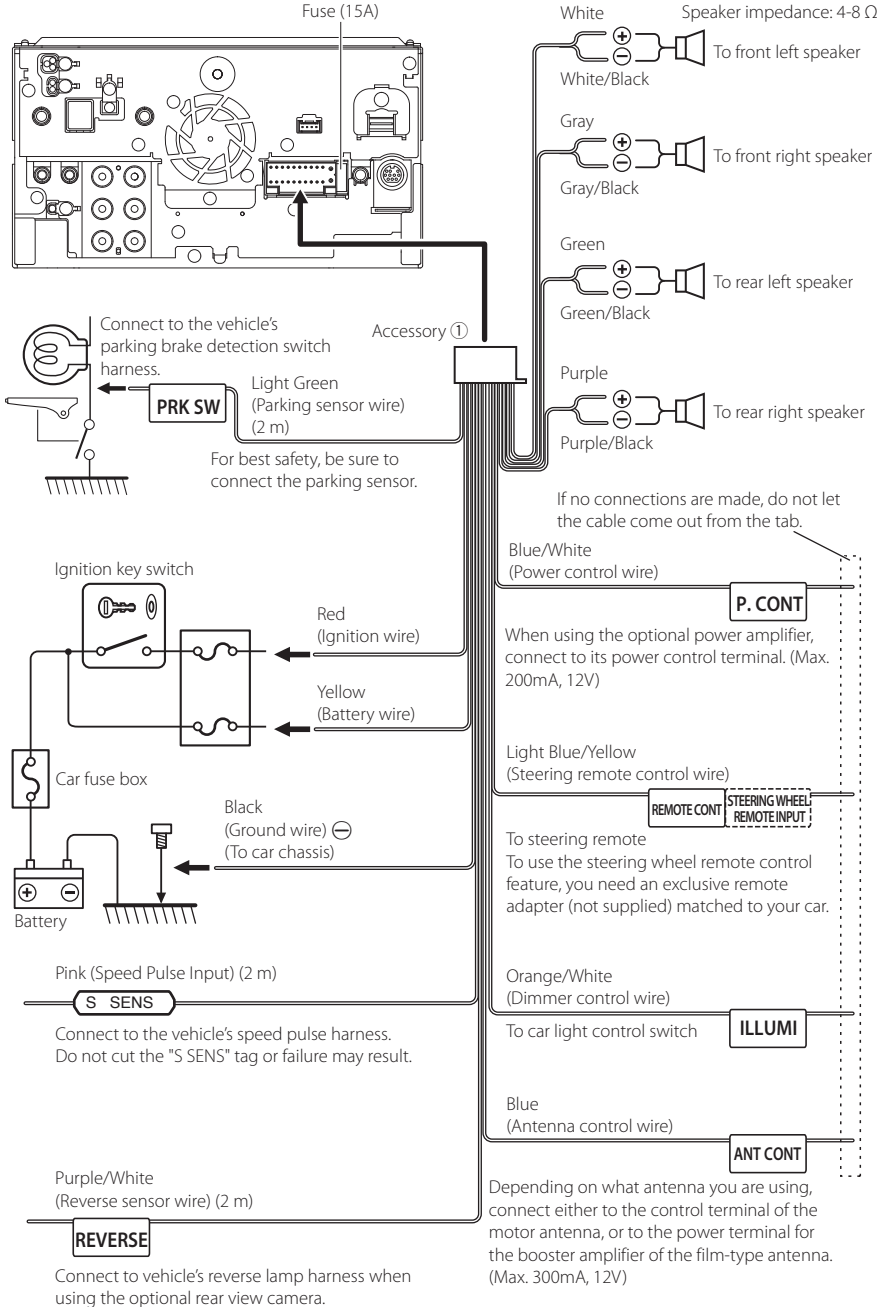


### 3-way speaker system setup

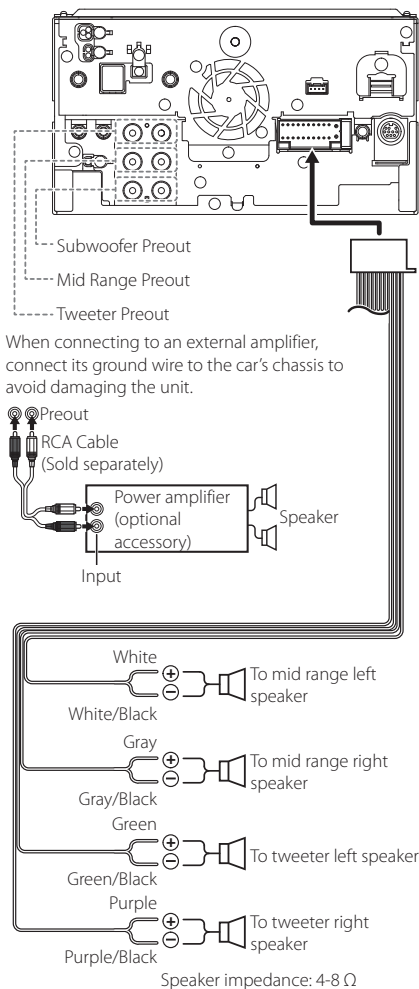


#### NOTE

- For speaker system setup, see **3-way speaker system setup (P.71)**.
- For speaker setup and crossover setup, see **Speaker / X'over setup (P.72)**.
- For how to connect speaker wires to terminals other than speaker terminals and Preout terminals, see **Connecting the system and external components (P.94)** and **Connecting wires to terminals (P.93)**.


### Connecting the system and external components

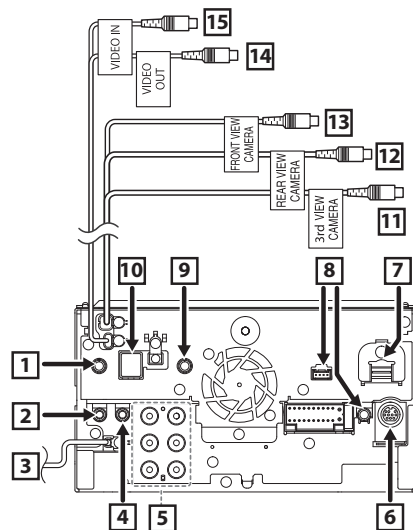

 
- 1** Accessory (14): Steering remote harness  
Connect to vehicle's steering remote harness. Contact your JVC dealer for details.



 - 2** Accessory (3): Bluetooth Microphone



- 3** FM/AM antenna input

 
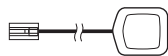 


- 4** AV Audio output (ø3.5 mini jack)

- 5** When connecting to an external amplifier, connect its ground wire to the car's chassis to avoid damaging the unit.




- 6** SiriusXM Connect Vehicle Tuner connector  
For more information on how to install the SiriusXM Connect Vehicle tuner, consult the installation guide included with the tuner.

<p><b>7</b></p>	<p>HDMI input Use HDMI cable (commercially available). When you connect the cable to HDMI terminal, remove the fixture. After connecting the cable, put the fixture again.</p>  <p>Fixture HDMI connector</p>
<p><b>8</b></p>	<p>iDatalink connector</p>
<p><b>9</b></p>	<p>AV Audio input (ø3.5 mini jack)</p>
<p><b>10</b></p>	<p>Accessory ⑥: GPS Antenna Use the supplied GPS antenna. Using the GPS antenna other than the supplied one may cause a drop in positioning accuracy.</p> 
<p><b>11</b></p>	<p>3rd view camera input (Yellow) For more information, see <b>To set up the camera assignment settings (P.48)</b>.</p>
<p><b>12</b></p>	<p>Rear view camera input (Yellow)</p>
<p><b>13</b></p>	<p>Front view camera input (Yellow) *1 For more information, see <b>To set up the camera assignment settings (P.48)</b>.</p>
<p><b>14</b></p>	<p>Video output (Yellow)</p>
<p><b>15</b></p>	<p>Video input (Yellow)</p>

\*1 Side (Left or Right) view camera can also be connected to **9** or **13**.

## Connecting a USB device

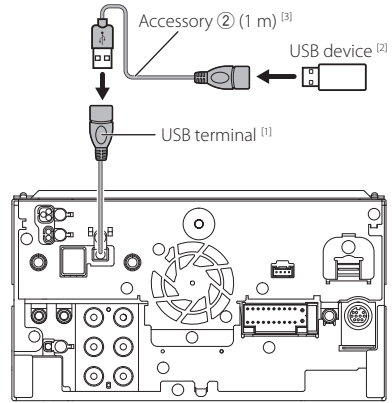

<sup>[1]</sup> USB maximum power supply current :  
DC 5 V  $\equiv$  1.5 A


<sup>[2]</sup> Sold separately

<sup>[3]</sup> See **Securing the USB extension cable (P.96)**.




## Securing the USB extension cable

Secure the USB extension cable with insulating tape or the like so that its connectors are not disconnected.

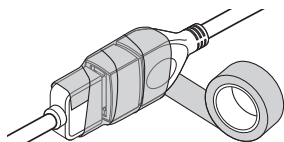

## Connecting an iPod/iPhone

### Lightning connector

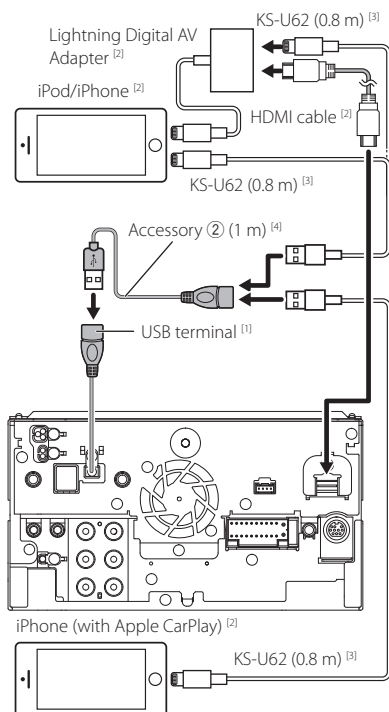

<sup>[1]</sup> USB maximum power supply current :  
DC 5 V  $\equiv$  1.5 A


<sup>[2]</sup> Sold separately

<sup>[3]</sup> Optional accessory

<sup>[4]</sup> See **Securing the USB extension cable (P.96)**.

## Connecting an Android smartphone

Android smartphone (with Android Auto) <sup>[2]</sup>

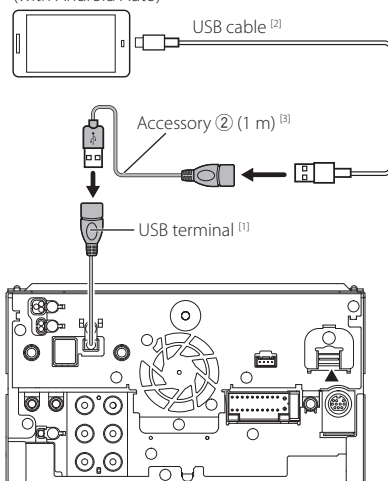


<sup>[1]</sup> USB maximum power supply current :  
DC 5 V  $\equiv$  1.5 A

<sup>[2]</sup> Sold separately

<sup>[3]</sup> See **Securing the USB extension cable (P.96)**.

## Connecting the camera

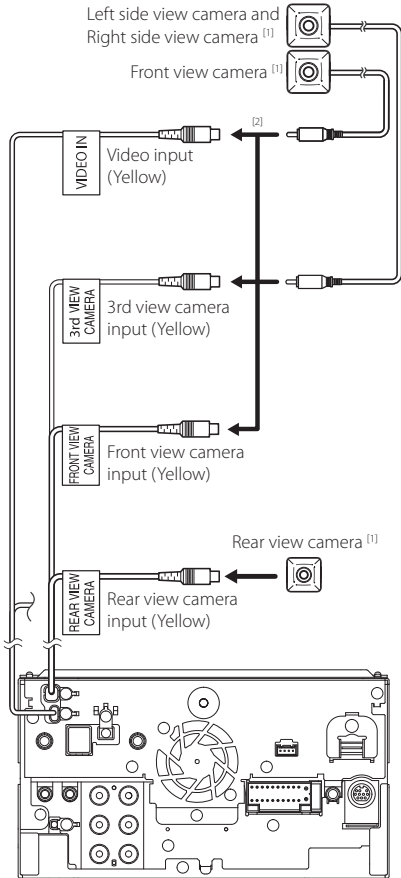

<sup>(1)</sup> Sold separately

<sup>(2)</sup> See **To set up the camera assignment settings (P.48)**.

# Troubleshooting

## Problems and Solutions

If any trouble occurs, first check the following table for possible problems.

### NOTE

- Some functions of this unit may be disabled by some settings made on this unit.
- What might seem to be a malfunction in your unit may just be the result of slight misoperation or miswiring.

### About settings

- **Cannot set up the subwoofer.**
- **Cannot set up subwoofer phase.**
- **No output from the subwoofer.**
- **Cannot set up the low pass filter.**
- **Cannot set up the high pass filter.**

Subwoofer is not set to on.

- Set the subwoofer to on. See **Speaker / X'over setup (P.72)**.

The dual zone function is enabled.

- Set the dual zone function to off. See **Zone Control (P.77)**.

- **Cannot select the output destination of the subsource in the dual zone.**
- **Cannot adjust the volume of the rear speakers.**

The dual zone function is disabled.

- Set the dual zone function to on. See **Zone Control (P.77)**.

- **Cannot set up the equalizer.**
- **Cannot set up the crossover network.**

The dual zone function is enabled.

- Set the dual zone function to off. See **Zone Control (P.77)**.

### About audio operations

#### Radio reception is poor.

The car antenna is not extended.

- Pull out the antenna all the way.
- The antenna control wire is not connected.
- Connect the wire correctly. See **Connecting the system and external components (P.94)**.

#### Cannot select a folder.

The random play function is enabled.

- Turn off the random function.

### Others

#### The Touch Sensor Tone doesn't sound.

The preout jack is being used.

- The Touch Sensor Tone cannot be output from the preout jack.

## Error Messages

When you fail to operate the unit correctly, the cause of the failure appears as the message on the screen.

### There is an error in the speaker wiring. Please check the connections.

Protective circuit has been activated because a speaker cord has shorted or it has come in contact with the car chassis.

- Wire or insulate the speaker cord as appropriate and turn the power off and on again.

### Hot Error

When the internal temperature of this unit rises to 60°C or more, the protection circuit is activated and you may not be able to operate the unit.

- Use the unit again after reducing the temperature of the unit.

### Error 07–67

The unit is not operating correctly due to some reason or other.

- Turn the power off and on again. If the “Error 07–67” message does not disappear, contact your nearest JVC dealer.

### No Device (USB device)

The USB device is selected as a source although no USB device is connected.

- Change the source to any source other than USB/iPod. Connect a USB device, and change the source to USB again.

### Disconnected (iPod, Bluetooth audio player)

The iPod/Bluetooth audio player is selected as a source although no iPod/Bluetooth audio player is connected.

- Change the source to any source other than iPod/Bluetooth. Connect an iPod/Bluetooth audio player, and change the source to iPod/Bluetooth again.

### No Media file

The connected USB device contains no playable audio file. Media was played that doesn't have data recorded that the unit can play.

- See **Playable Media and Files (P.101)** and try another USB device.

### USB device over current status detected.

The connected USB device is rated a current capacity higher than the allowable limit.

- Check the USB device. Some trouble may have occurred to the connected USB device.
- Change the source to any source other than USB. Remove the USB device.

### The speed sense wire is not connected. Please check the connection.

The speed pulse disconnection is detected. By default, it is treated as connected.

- To improve precision of a vehicle position recognition, check the connection of the speed pulse.

### Starting tuner failed.

The tuner unit is not operating correctly due to some reason or other.

- Turn the power off and on again. If the “Starting tuner failed.” message does not disappear, contact your nearest JVC dealer.

## SiriusXM

### Check Tuner

A SiriusXM tuner is not connected to this unit.

- Verify that the SiriusXM Connect Vehicle Tuner cable is securely connected to the radio.

### Subscription Updated - Press Return To Continue

The SiriusXM subscription has been renewed.

- Touching **Return** on the popup screen will clear the message.

### SXM Chan Unavailable

The currently selected channel is unavailable.

- Visit [www.siriusxm.com](http://www.siriusxm.com) for more information about the SiriusXM channel lineup.

### SXM Ch Unsubscribed

The currently selected channel is not subscribed to.

- In the U.S.A., visit [www.siriusxm.com](http://www.siriusxm.com) or call 1-866-635-2349 if you have questions about your subscription package or would like to subscribe to this channel.
- In Canada, visit [www.siriusxm.ca](http://www.siriusxm.ca) or call 1-877-438-9677.

### SXM Check Antenna

No antenna is connected to the SiriusXM tuner.

- Check that an antenna is connected to the SiriusXM tuner. Check antenna for damages.

### SXM No Signal

No SiriusXM radio signal is received.

- Verify that your vehicle is outdoors with a clear view of the sky.

### Channel Locked

The selected channel has been locked by the parental controls.

- Enter the unlock code when you are asked. See **Parental Control (P.42)**.

### Incorrect Pass Code entered

The selected channel is a mature or parental lock channel, and locked by the parental lock or user lock code.

- Enter the correct lock code.

### Apple CarPlay

---

**The GPS antenna must be connected to use Apple CarPlay wirelessly. Please verify the proper connections or plug in by USB to use Apple CarPlay.**

The GPS antenna is not connected when the Apple CarPlay is started by connecting wirelessly or when the iPhone compatible with wireless Apple CarPlay is registered in **Device List**.

- Check the connection of the GPS antenna or plug in over USB to use Apple CarPlay.

# Appendix

## Playable Media and Files

You can play various kinds of media and files on this unit.

### About files

The following audio and video files are supported.

#### Playable Audio files

	Format	Bit rate	Sampling frequency	Bit count
AAC-LC (.m4a)	MPEG-2/MPEG-4 AAC LC HE-AAC(V1,V2)	8 – 320kbps, VBR	16 – 48 kHz	16 bit
MP3 (.mp3)	MPEG-1/MPEG-2 Audio Layer 3	8 – 320kbps, VBR	16 – 48 kHz	16 bit
WMA (.wma)	Windows Media Audio Standard L3 profile (Version 7,8,9)	8 – 320kbps	16 – 48 kHz	16 bit
Linear PCM (WAVE) (.wav)	RIFF waveform Audio Format	–	16 – 192 kHz	24 bit
FLAC (.flac)	flac	–	16 – 192 kHz	24 bit
Vorbis (.ogg)	vorbis	VBR	16 – 48 kHz	16 bit
DSD (.dsf, .dff)	DSF, DSDIFF	–	2.8 MHz, 5.6 MHz, 11.2 MHz	1 bit

- WMA and AAC files with DRM cannot be played.
- DSD sound is converted to PCM sound before playback.
- The EmChinks tag of DSDIFF is not supported.
- Although the audio files complies with the standards listed above, they may not be played depending on the types or conditions of media or device.
- This unit supports playback of High-Resolution Audio files.  
It is recommended that a car audio system should be configured with all High-Resolution Audio compatible products from player to speaker to enjoy its high quality sound.

#### Acceptable Video files

	Profile	Max. Picture size	Max. bit rate	Audio format
MPEG-1 (.mpg, .mpeg)	–	352 × 240, 352 × 288	1.5 Mbps	MPEG Audio Layer 2
MPEG-2 (.mpg, .mpeg)	MP@ML	720 × 480, 720 × 576	8 Mbps	MPEG Audio Layer 2
H.264/MPEG-4 AVC (.mp4, .m4v, .avi, .flv, .f4v)	Baseline Profile, Main Profile	1920 × 1080 (30 fps)	8 Mbps	MP3, AAC
MPEG-4 (.mp4, .avi)	Advanced Simple Profile	1920 × 1080 (30 fps)	8 Mbps	MP3, AAC
WMV (.wmv)	Main Profile	1920 × 1080 (30 fps)	8 Mbps	WMA
MKV (.mkv)	Video format follows H.264/MPEG-4 AVC, MPEG-4, WMV			MP3, AAC, WMA, Vorbis, FLAC

- This unit can only play back files which are smaller than 4 GB.

## Appendix

### ■ Limitation on structure of file and folder

	USB device
Maximum number of folder layers	8
Maximum number of files (per folder)	999
Maximum number of folders (per folder)	9999
Maximum number of folders (per device)	Unlimited

- You can enter a folder name and file name with 255 or fewer single-byte characters.
- Files in the folder whose folder name begins with a dot (.) cannot be played.

## Specifications

### ■ Monitor section

#### Picture Size

- : 10.1 inches (diagonal) wide
- : 223.7 mm (W) × 125.8 mm (H)
- : 8-13/16 × 4-15/16 inch

#### Display System

- : AAS LCD panel

#### Drive System

- : TFT active matrix system

#### Number of Pixels

- : 2,764,800 (1280H × 720V × RGB)

#### Effective Pixels

- : 99.99 %

#### Pixel Arrangement

- : RGB striped arrangement

#### Back Lighting

- : LED

### ■ USB interface section

#### USB Standard

- : USB 2.0 High Speed

#### File System

- : FAT16, FAT32, exFAT, NTFS

#### Maximum Power Supply Current

- : DC 5 V  1.5 A

#### D/A Converter

- : 24 bit/32 bit

#### Audio Decoder

- : MP3 / WMA / AAC / WAV / FLAC / DSD / Vorbis

#### Video Decoder

- : MPEG-1 / MPEG-2 / MPEG-4 / WMV / H.264 / MKV

#### Frequency Response

- 192 kHz: 20 – 88,000 Hz
- 96 kHz: 20 – 44,000 Hz
- 48 kHz: 20 – 22,000 Hz
- 44.1 kHz: 20 – 20,000 Hz

#### Total Harmonic Distortion

- : 0.010 % (1 kHz)

#### S/N Ratio (dB)

- : 98.5 dB

#### Dynamic Range

- : 89 dB

### ■ HDMI section

#### HDMI

- : Type-A

#### Input Resolution

- VGA (640x480p @59.94Hz/60Hz)
- 480p (720x480p @59.94Hz/60Hz)
- 720p (1280x720p @59.94Hz/60Hz)

#### Input Audio Type

- : 32K/44.1K/48K/88.2K/96K/176.2K/192K Hz
- : 16 bit/20 bit/24 bit Linear PCM

### ■ Wireless Mirroring section

#### Mode

- : Sink

#### Copyright protection

- : HDCP2.2

#### Touch Control

- : UIBC

### ■ Wi-Fi section

#### IEEE Standard

- : 802.11 a/b/g/n/ac

#### Frequency Range

- : Dual Band (2.4GHz/5GHz)

#### Channels

- : Auto(1-11ch)/Auto(149,153,157,161ch)

#### Transfer rates (MAX)

- : 11a: 54 Mbps / 11b: 11 Mbps / 11g: 54 Mbps /
- : 11n: 300 Mbps / 11ac: 867 Mbps

#### Output Power

##### 2.4 GHz/SISO

- : 11b: 12 dBm ± 2 dB / 11g: 4 dBm ± 2 dB /
- : 11n (20MHz): 2 dBm ± 2 dB

##### 5 GHz/SISO

- : 11a: 6 dBm ± 2 dB /
- : 11n (20 MHz)/11ac (20 MHz): 6 dBm ± 2 dB /
- : 11n (40 MHz)/11ac (40 MHz): 5 dBm ± 2 dB /
- : 11ac (80 MHz): 5 dBm ± 2 dB

##### 5 GHz/MIMO

- : 11n (20 MHz)/11ac (20 MHz): 9 dBm ± 2 dB /
- : 11n (40 MHz)/11ac (40 MHz): 8 dBm ± 2 dB /
- : 11ac (80 MHz): 8 dBm ± 2 dB

### ■ Bluetooth section

#### Technology

- : Bluetooth Ver.5.0

#### Frequency

- : 2.402 – 2.480 GHz

#### RF Output Power (E.I.R.P.)

- : +4 dBm (MAX), Power Class 2

#### Maximum Communication range

- : Line of sight approx. 10m (32.8 ft)

#### Audio Codec

- : LDAC/SBC/AAC

#### Profile (Multi Profile support)

- HFP (V1.7) (Hands Free Profile)
- SPP (Serial Port Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (V1.6) (Audio/Video Remote Control Profile)
- PBAP (Phonebook Access Profile)



## Appendix

### ■ Digital FM tuner section

Frequency Range (step)

: 87.9 MHz – 107.9 MHz (200 kHz)

Frequency Response ( $\pm 3.0$  dB)

: 20 Hz – 20 kHz

S/N Ratio

: 80 dB (STEREO)

### ■ Digital AM tuner section

Frequency Range (step)

: 530 kHz – 1700 kHz (10 kHz)

Frequency Response ( $\pm 3.0$  dB)

: 40 Hz – 15 kHz

S/N Ratio (dB)

: 80 dB (STEREO)

### ■ FM tuner section

Frequency Range (step)

: 87.9 MHz – 107.9 MHz (200 kHz)

Usable Sensitivity (S/N : 30 dB)

: 7.3 dBf (0.7  $\mu$ V/75  $\Omega$ )

Frequency Response ( $\pm 3.0$  dB)

: 30 Hz – 15 kHz

S/N Ratio (dB)

: 70 dB (MONO)

Selectivity ( $\pm 400$  kHz)

: 80 dB

Stereo Separation

: 45 dB (1 kHz)

### ■ AM tuner section

Frequency Range (step)

: 530 kHz – 1700 kHz (10 kHz)

Usable Sensitivity

: 30 dB $\mu$  (31  $\mu$ V)

### ■ Video section

Color System of External Video Input

: NTSC

External Video Input Level (RCA jacks)

: 1 V<sub>p-p</sub>/75  $\Omega$

External Audio Max Input Level (mini jack)

: 2 V/25 k $\Omega$

Video Output Level (RCA jacks)

: 1 V<sub>p-p</sub>/75  $\Omega$

Audio Output Level (mini jack)

: 0.9 V/10 k $\Omega$

### ■ Audio section

Maximum Power (Front & Rear)

: 50 W  $\times$  4

Typical Power Output (Front & Rear)

Full Bandwidth Power (at less than 1% THD)

: 22 W  $\times$  4

Output frequency band

: 20 – 88,000 Hz

Preout Level (V)

: 5 V/10 k $\Omega$

Preout Impedance

:  $\leq$  300  $\Omega$

Speaker Impedance

: 4 – 8  $\Omega$

Graphics equalizer

Band: 13 Band

Frequency (BAND1 – 13)

: 62.5/100/160/250/400/630/1k/1.6k/2.5k/4k/6.3k/  
10k/16k Hz

Gain

: -9/-8/-7/-6/-5/-4/-3/-2/-1/0/1/2/3/4/5/6/7/8/9 dB

2-way X'Over

High pass filter

Frequency: Through, 30/40/50/60/70/80/90/100/  
120/150/180/220/250 Hz

Slope: -6/-12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

Low pass filter

Frequency: 30/40/50/60/70/80/90/100/120/150/  
180/220/250 Hz, Through

Slope: -6/-12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

**3-way X'Over****High pass filter**

Frequency: 250/300/1k/1.6k/2.5k/4k/5k/6.3k/8k/  
10k/12.5k Hz

Slope: -12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

**Band pass filter**

Frequency: Through, 50/60/70/80/90/100/120/150/  
180/220/250/300 Hz  
250/300/1k/1.6k/2.5k/4k/5k/6.3k/8k Hz,  
Through

Slope: -12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

**Low pass filter**

Frequency: 30/40/50/60/70/80/90/100/120/150 Hz,  
Through

Slope: -12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

**■ General****Operating Voltage**

: 12V DC car battery

**Installation Dimensions (W × H × D)**

: 178 × 100 × 155 mm

7 × 3-15/16 × 6-1/8 inch

**Weight**

: 3.25 kg (7.28 lbs)

**NOTE**

- Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.

**Specifications are subject to change  
without prior notice.**

## About this Unit

### ■ Important Notice on Software

#### ■ Software License on This Product

The software embedded in this product comprises a number of independent software components, each of which is copyrighted by JVCKENWOOD Corporation or by a third party.

This product uses software components that are based on an End-User License Agreement (hereinafter called "EULA") stipulated by JVCKENWOOD Corporation and by third parties.

The EULA dictates the availability of the source codes of free-software components as a prerequisite to distributing them in executable form under the terms of the GNU General Public License or the Lesser General Public License (hereinafter called "GPL/LGPL"). To get information about the software components that are subject to the terms of the GPL/LGPL, please visit the following Website:

Website URL <https://www3.jvckenwood.com/english/download/gpl/>

Queries concerning the contents of the source code or the like will not be accepted.

Please note that software components based on a EULA that is not subject to the terms of the GPL/LGPL or those that have been developed or created by JVCKENWOOD Corporation will be excluded from the scope of source code disclosure.

Because licenses to use software components distributed under the GPL/LGPL are offered to the customers for free of charge, no warranty is granted to the customers, whether explicitly or implicitly, to the extent of the applicable laws.

Unless otherwise stipulated by the applicable laws or agreed upon in writing, the copyright holders or those who are entitled to modify and redistribute the software components are not held responsible for any and all damages resulting from their use or from inability to use them. For more information about the terms of use of the software components, required items of compliance and so on, please refer to the GPL/LGPL.

Customers wishing themselves to use a software component that is subject to the GPL/LGPL embedded in this product are encouraged to read the terms of the corresponding license before use. Because each individual license is prescribed by a third party other than JVCKENWOOD Corporation, the original (English) of the license is presented.

### ■ EULA

#### ■ Software License Agreement

JVCKENWOOD Corporation (hereinafter called "Licensor") holds either the copyright to the embedded software or the right to sublicense it. This agreement establishes the conditions under which the customer uses this "Licensed Software."

The customer shall agree to the terms of this license agreement before proceeding to use Licensed Software.

This agreement is deemed to have taken effect when the customer (hereinafter called "User") has used a product implementation of Licensed Software.

The Licensed Software may contain software Licensor has been licensed to use by third parties directly or indirectly. Some third parties may have terms of use prescribed for their customers, apart from this Software License Agreement. This agreement does not apply to such software. Be sure to consult "Important Notice on Software" as presented separately.

##### Article 1 (General)

Licensor grants to User a non-exclusive, non-assignable right of use Licensed Software within the country where the User purchases the Product (hereinafter the "Country") (except for the exception provided for in Paragraph 1, Article 3).

##### Article 2 (Right of Use)

1. The rise of use granted under this agreement is the right to use Licensed Software in this product.
2. User may not duplicate, copy, modify, add to, translate or otherwise alter, or loan licensed Software and the associated literature in whole or in part.
3. Use of Licensed Software is limited to a private extent, and Licensed Software may not be distributed, licensed or sublicensed for any purposes whatsoever, including commercial use.
4. User shall use Licensed Software as per the instruction manual or instructions given in the help file and may not use or duplicate data in violations of the regulations of the Copyright Law or other governing laws by using Licensed Software in whole or in part.

##### Article 3 (Terms of License)

1. In assigning this product, User may not retain the original copy of the embedded Licensed Software (including associated literature, updates and upgrades) and any duplicates and associated literature with regard to the license to use Licensed Software. User may transfer Licensed Software only to the condition of binding the assignee to abide by the terms of this Software License Agreement.
2. User may not reverse-engineer, disassemble, decompile or otherwise analyze the source code of Licensed Software.

**Article 4 (Rights to Licensed Software)**

All rights to Licensed Software and the associated literature, including copyrights, shall reside with Licensor or the original right holder who has granted the Right of Use and right to sublicense to Licensor (hereinafter referred to as "Original Right Holder"), and User does not have any rights other than Right of Use granted hereunder with regard to Licensed Software and the associated literature.

**Article 5 (Exemption Granted to Licensor)**

1. Licensor and Original Right Holder do not assume any responsibility for damages caused to User or third parties resulting from the exercise by User of the license granted hereunder, unless otherwise provided by any law to the contrary.
2. Licensor does not warrant Licensed Software to be merchantable, compatible and fit for specific purposes.

**Article 6 (Responsibility for Third Parties)**

If disputes over the infringement of third parties' intellectual property rights, such as copyrights and patent rights, arise out of the use of Licensed Software by User, User shall resolve these disputes at User's own expenses while keep Licensor and Original Right Holder harmless.

**Article 7 (Secrecy Obligation)**

User shall keep confidential Licensed Software provided hereunder, information contained in the associated literature or the like and those provisions of this agreement not yet in public knowledge and may not disclose or leak these to third parties without prior written consent from Licensor.

**Article 8 (Cancellation of the Agreement)**

Licensor reserves the right to cancel this agreement forthwith and claim compensation from User for the damages caused by such cancellation when User:

- (1) Breaches any of the provisions of this agreement, or
- (2) Has received a petition for seizure, provisional seizure, provisional disposition or any other kind of compulsory execution.

**Article 9 (Destruction of Licensed Software)**

If this agreement is terminated under the provision of the foregoing paragraph, User shall destroy Licensed Software, along with all associated literature and its duplicates, within two (2) weeks from the date of termination.

**Article 10 (Copyright Protection)**

1. Copyrights and all other intellectual property rights relating to Licensed Software shall reside with Licensor and Original Right Holder and in no circumstances with User.
2. User shall abide by the laws relating to copyrights and intellectual property rights in using Licensed Software.

**Article 11 (Export Control)**

1. Licensed Software and the associated literature or the like may not be exported to places outside the Country (including transmission outside the Country over the Internet or the like).
2. User agrees that Licensed Software is subject to export controls imposed by the Country and the United States of America.
3. User agrees to comply with all the international and domestic laws that apply to this software (U.S. Export Administration Regulations and regulations established by the U.S., the Country and their governmental agencies regarding usage by end users and export destinations).

**Article 12 (Miscellaneous)**

1. Even if this agreement is invalidated in part by law, all other provisions shall remain in effect.
2. Licensor and User shall consult each other in good faith to resolve any matters not provided for in this agreement or questions arising from the interpretation of this agreement.
3. Licensor and User agree that this agreement is governed by the law of Japan and that all disputes involving claims and obligations that may arise out of this agreement will be settled by arbitration at the Tokyo District Court as the court of first instance.

## ■ Copyrights

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by JVCKENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- DSD, LDAC and LDAC logo are trademarks of Sony Corporation.
- Hi-Res Audio logo and Hi-Res Audio Wireless logo are used under license from Japan Audio Society.



- Windows Media is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.  
This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.
- This software is based in part on the work of the independent JPEG Group.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPhone, iPod, iPod touch, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- Apple, Siri, Apple CarPlay, Apple Music and Apple CarPlay logo are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.
- HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see <https://dts.com/patents>. HD Radio and the HD, HD Radio, and "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.
- Google, Android, Google Play and Android Auto are trademarks of Google LLC.  
To use Android Auto on your car display, you'll need an Android Auto compatible vehicle or aftermarket stereo, an Android phone running Android 5.0 or higher, and the Android Auto app.

- Wi-Fi® is a registered trademark of Wi-Fi Alliance®.
- The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
- This product includes FontAvenue® fonts licenced by NEC Corporation. FontAvenue is a registered trademark of NEC Corporation.



- This product includes "Ubiquitous QuickBoot™" technology developed by Ubiquitous Corp. Ubiquitous QuickBoot™ is a trademark of Ubiquitous Corp. Copyright© 2017 Ubiquitous Corp. All rights reserved.



- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (j) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (j) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTPS://WWW.MPEGLA.COM](https://www.mpegla.com)
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (j) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (j) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTPS://WWW.MPEGLA.COM](https://www.mpegla.com)
- THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER

USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTPS://WWW.MPEGLA.COM](https://www.mpegla.com)

- libFLAC

Copyright (C) 2000-2009 Josh Coalson  
Copyright (C) 2011-2013 Xiph.Org Foundation  
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libvorbis

Copyright (c) 2002-2008 Xiph.org Foundation  
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libogg

Copyright (c) 2002, Xiph.org Foundation  
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

**■ FCC CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE**

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

**■ ISED CAUTION**

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

**▲ CAUTION**

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

**Supplier's Declaration of Conformity**

Trade Name: JVC  
Products: MONITOR WITH RECEIVER  
Model Name: KW-Z1000W  
Responsible Party: JVCKENWOOD USA CORPORATION  
2201 East Dominguez Street,  
Long Beach, CA 90810, U.S.A.  
PHONE: 310 639-9000

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

**■ CALIFORNIA, USA**

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply.

See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

■ Información acerca de la eliminación de equipos eléctricos y electrónicos al final de la vida útil (aplicable a los países que hayan adoptado sistemas independientes de recogida de residuos)



Los productos con el símbolo de un contenedor con ruedas tachado no podrán ser desechados como residuos domésticos.

Los equipos eléctricos y electrónicos al final de la vida útil, deberán ser reciclados en instalaciones que puedan dar el tratamiento adecuado a estos productos y a sus subproductos residuales correspondientes. Póngase en contacto con su administración local para obtener información sobre el punto de recogida más cercano. Un tratamiento correcto del reciclaje y la eliminación de residuos ayuda a conservar los recursos y evita al mismo tiempo efectos perjudiciales en la salud y el medio ambiente.

■ Informação sobre a eliminação de pilhas

Este produto não deve ser eliminado como lixo doméstico geral. Devolva a pilha usada ao revendedor ou entidade autorizada para que a mesma seja devolvida ao fabricante ou importador.

A reciclagem e a eliminação de lixo de maneira apropriada ajudarão a conservar os recursos naturais ao mesmo tempo que prevenirão os efeitos prejudiciais à nossa saúde e ao meio ambiente.

■ Para cumplimiento de la IFT:

“La operación de este equipo esta sujeta a las siguientes dos condiciones:

(1) es posible que este equipo o dispositivo no cause interferencia perjudicial y

(2) este equipo o dispositivo debe aceptar cualquier interferencia,

incluyendo la que pueda causar su operación no deseada.”



**JVC**



# KW-Z1000W

MONITOR WITH RECEIVER

## Quick Start Guide

MONITEUR AVEC RÉCEPTEUR

## Guide de démarrage rapide

MONITOR CON RECEPTOR

## Guía de inicio rápido

JVCKENWOOD Corporation

- Updated information (the latest Instruction Manual, system updates, new functions, etc.) is available from <<https://www.jvc.net/cs/car/>>.
- Les informations les plus récentes (dernier mode d'emploi, mises à jour du système, nouvelles fonctions, etc.) sont disponibles sur <<https://www.jvc.net/cs/car/>>.
- Encontrará la información actualizada (el Manual de instrucciones más reciente, las actualizaciones del sistema, las nuevas funciones, etc.) en <<https://www.jvc.net/cs/car/>>.

Made for

iPhone | iPod



Works with  
Apple CarPlay

android  
auto



Hi-Res Audio logo and Hi-Res Audio Wireless logo are used under license from Japan Audio Society.



**Radio**<sup>®</sup>

This HD Radio receiver enables:

HD2/HD3

Bookmark

Digital Sound

Program Info

Artist Experience

Emergency Alerts

## Important Notice on Software

### Software License on This Product

The software embedded in this product comprises a number of independent software components, each of which is copyrighted by JVCKENWOOD Corporation or by a third party. This product uses software components that are based on an End-User License Agreement (hereinafter called "EULA") stipulated by JVCKENWOOD Corporation and by third parties. The EULA dictates the availability of the source codes of free-software components as a prerequisite to distributing them in executable form under the terms of the GNU General Public License or the Lesser General Public License (hereinafter called "GPL/LGPL"). To get information about the software components that are subject to the terms of the GPL/LGPL, please visit the following Website:

Website URL <https://www3.jvckenwood.com/english/download/gpl/>

Queries concerning the contents of the source code or the like will not be accepted.

Please note that software components based on a EULA that is not subject to the terms of the GPL/LGPL or those that have been developed or created by JVCKENWOOD Corporation will be excluded from the scope of source code disclosure.

Because licenses to use software components distributed under the GPL/LGPL are offered to the customers for free of charge, no warranty is granted to the customers, whether explicitly or implicitly, to the extent of the applicable laws. Unless otherwise stipulated by the applicable laws or agreed upon in writing, the copyright holders or those who are entitled to modify and redistribute the software components are not held responsible for any and all damages resulting from their use or from inability to use them. For more information about the terms of use of the software components, required items of compliance and so on, please refer to the GPL/LGPL.

Customers wishing themselves to use a software component that is subject to the GPL/LGPL embedded in this product are encouraged to read the terms of the corresponding license before use. Because each individual license is prescribed by a third party other than

JVCKENWOOD Corporation, the original (English) of the license is presented.

## EULA

### Software License Agreement

JVCKENWOOD Corporation (hereinafter called "Licensor") holds either the copyright to the embedded software or the right to sublicense it. This agreement establishes the conditions under which the customer uses this "Licensed Software." The customer shall agree to the terms of this license agreement before proceeding to use Licensed Software.

This agreement is deemed to have taken effect when the customer (hereinafter called "User") has used a product implementation of Licensed Software.

The Licensed Software may contain software Licensor has been licensed to use by third parties directly or indirectly. Some third parties may have terms of use prescribed for their customers, apart from this Software License Agreement. This agreement does not apply to such software. Be sure to consult "Important Notice on Software" as presented separately.

#### Article 1 (General)

Licensor grants to User a non-exclusive, non-assignable right of use Licensed Software within the country where the User purchases the Product (hereinafter the "Country") (except for the exception provided for in Paragraph 1, Article 3).

#### Article 2 (Right of Use)

1. The rise of use granted under this agreement is the right to use Licensed Software in this product.
2. User may not duplicate, copy, modify, add to, translate or otherwise alter, or loan licensed Software and the associated literature in whole or in part.
3. Use of Licensed Software is limited to a private extent, and Licensed Software may not be distributed, licensed or sublicensed for any purposes whatsoever, including commercial use.
4. User shall use Licensed Software as per the instruction manual or instructions given in the help file and may not use or duplicate data in violations of the regulations of the Copyright Law or other governing laws by using Licensed Software in whole or in part.

### **Article 3 (Terms of License)**

1. In assigning this product, User may not retain the original copy of the embedded Licensed Software (including associated literature, updates and upgrades) and any duplicates and associated literature with regard to the license to use Licensed Software. User may transfer Licensed Software only to the condition of binding the assignee to abide by the terms of this Software License Agreement.
2. User may not reverse-engineer, disassemble, decompile or otherwise analyze the source code of Licensed Software.

### **Article 4 (Rights to Licensed Software)**

All rights to Licensed Software and the associated literature, including copyrights, shall reside with Licensor or the original right holder who has granted the Right of Use and right to sublicense to Licensor (hereinafter referred to as "Original Right Holder"), and User does not have any rights other than Right of Use granted hereunder with regard to Licensed Software and the associated literature.

### **Article 5 (Exemption Granted to Licensor)**

1. Licensor and Original Right Holder do not assume any responsibility for damages caused to User or third parties resulting from the exercise by User of the license granted hereunder, unless otherwise provided by any law to the contrary.
2. Licensor does not warrant Licensed Software to be merchantable, compatible and fit for specific purposes.

### **Article 6 (Responsibility for Third Parties)**

If disputes over the infringement of third parties' intellectual property rights, such as copyrights and patent rights, arise out of the use of Licensed Software by User, User shall resolve these disputes at User's own expenses while keep Licensor and Original Right Holder harmless.

### **Article 7 (Secrecy Obligation)**

User shall keep confidential Licensed Software provided hereunder, information contained in the associated literature or the like and those provisions of this agreement not yet in public knowledge and may not disclose or leak these to third parties without prior written consent from Licensor.

### **Article 8 (Cancellation of the Agreement)**

Licensor reserves the right to cancel this agreement forthwith and claim compensation from User for the damages caused by such cancellation when User:

- (1) Breaches any of the provisions of this agreement, or
- (2) Has received a petition for seizure, provisional seizure, provisional disposition or any other kind of compulsory execution.

### **Article 9 (Destruction of Licensed Software)**

If this agreement is terminated under the provision of the foregoing paragraph, User shall destroy Licensed Software, along with all associated literature and its duplicates, within two (2) weeks from the date of termination.

### **Article 10 (Copyright Protection)**

1. Copyrights and all other intellectual property rights relating to Licensed Software shall reside with Licensor and Original Right Holder and in no circumstances with User.
2. User shall abide by the laws relating to copyrights and intellectual property rights in using Licensed Software.

### **Article 11 (Export Control)**

1. Licensed Software and the associated literature or the like may not be exported to places outside the Country (including transmission outside the Country over the Internet or the like).
2. User agrees that Licensed Software is subject to export controls imposed by the Country and the United States of America.
3. User agrees to comply with all the international and domestic laws that apply to this software (U.S. Export Administration Regulations and regulations established by the U.S., the Country and their governmental agencies regarding usage by end users and export destinations).

### **Article 12 (Miscellaneous)**

1. Even if this agreement is invalidated in part by law, all other provisions shall remain in effect.
2. Licensor and User shall consult each other in good faith to resolve any matters not provided for in this agreement or questions arising from the interpretation of this agreement.
3. Licensor and User agree that this agreement is governed by the law of Japan and that all disputes involving claims and obligations that may arise out of this agreement will be settled by arbitration at the Tokyo District Court as the court of first instance.

# Contents

<b>Before Use</b> .....	<b>4</b>
About the Quick start guide .....	4
How to read this manual .....	4
Precautions .....	4
<b>Basic Operations</b> .....	<b>6</b>
Functions of the Buttons on the Front Panel....	6
Turning on the Unit.....	6
Initial Settings .....	7
Adjusting the volume .....	9
Touch screen operations.....	9
Popup menu.....	10
HOME screen descriptions .....	11
Source selection screen description.....	12
Source control screen descriptions.....	14
List screen.....	14
<b>USB/iPod</b> .....	<b>15</b>
Connecting a USB device.....	15
Connect iPod/iPhone .....	15
USB/iPod Basic Operation .....	16
<b>HD Radio™ Tuner</b> .....	<b>16</b>
HD Radio Tuner Basic Operation .....	16
Memory Operation .....	17
<b>Bluetooth Control</b> .....	<b>18</b>
Register the Bluetooth device.....	18
Using the Hands-Free Unit .....	19
<b>Controlling Audio</b> .....	<b>21</b>
<b>Connection/Installation</b> .....	<b>22</b>
Before Installation .....	22
Installing the unit.....	25
<b>Appendix</b> .....	<b>33</b>
Note for specifications.....	33

# Before Use

## About the Quick start guide

- This Quick Start Guide describes basic functions of this unit. For functions not described in this Guide, refer to the Instruction Manual on the following website:  
<https://www.jvc.net/cs/car/>



- The Instruction manual is subject to change for modification of specifications and so forth. Be sure to download the latest edition of the Instruction manual for reference.

## How to read this manual

- The screens and panels shown in this manual are examples used to provide a clear explanation of operations. For this reason, they may be different from the actual screens or panels, or some display patterns may be different from the actual ones.
- **Display language:** English is used for the purpose of explanation. You can select a display language from the **SETUP** menu. See **System Setup (P.68)** in the Instruction Manual.

## Precautions

### ▲ WARNINGS

#### ■ To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metallic tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- If you experience problems during installation, consult your JVC dealer.

#### ■ Precautions on using this unit

- When you purchase optional accessories, check with your JVC dealer to make sure that they work with your model and in your area.

- You can select a language to display menus, audio file tags, etc. See **System Setup (P.68)** in the Instruction Manual.
- The Radio Data System or Radio Broadcast Data System feature won't work in areas where the service is not supported by any broadcasting station.

### **Protecting the monitor**

- To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with a sharp tip.

### **Cleaning the unit**

- If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe it with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.

#### **NOTE**

- Applying spray cleaner directly to the unit may damage its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase the screened print.

### **Acquiring GPS signal**

The first time you turn on this unit, you must wait while the system acquires satellite signals for the first time. This process could take up to several minutes. Make sure your vehicle is outdoors in an open area away from tall buildings and trees for fastest acquisition.

After the system acquires satellites for the first time, it will acquire satellites quickly each time thereafter.

### **About GLONASS**

This unit uses Global Navigation Satellite System (GLONASS) in addition to GPS.

Combining GPS and GLONASS can refine positioning accuracy than using GPS only.


### **Caution for Smartphone Users**

Simultaneously running multiple applications on your smartphone while screen sharing places heavy demand on the microprocessor of the phone, potentially affecting communication and performance.

For best results while pairing with your JVC receiver, please be sure to close any unused applications.

# Basic Operations

## Functions of the Buttons on the Front Panel

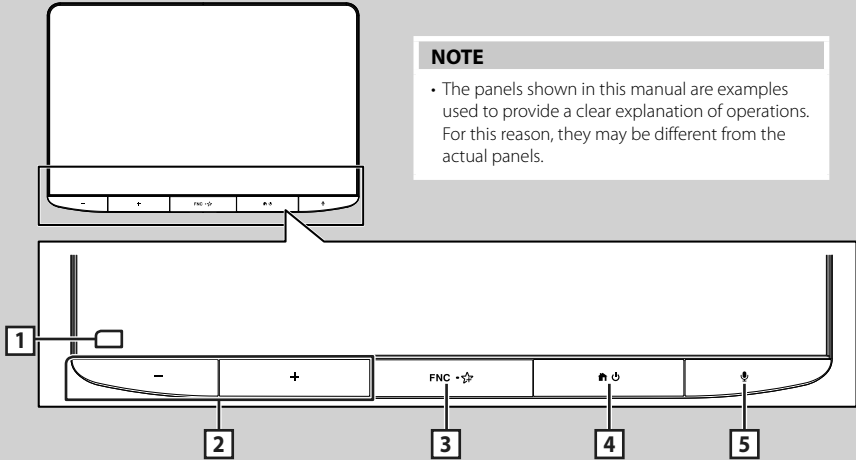


**NOTE**

• The panels shown in this manual are examples used to provide a clear explanation of operations. For this reason, they may be different from the actual panels.

Number	Name	Motion
1	Remote Sensor	• Receives the remote control signal.
2	-, + (Volume)	• Adjusts the volume. The volume will go up to 15 when you keep pressing +. (P.9)
3	FNC/★	• Displays the popup menu screen. • Pressing and holding, displays the screen you have set in the Favorite Customize screen. (P.13)
4	Home/Power	• Displays the HOME screen (P.11). • When the power is off, turns the power on. • Pressing and holding, turns the power off.
5	Microphone	• Switches the voice recognition function on/off. • When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, pressing and holding displays Bluetooth pairing waiting dialog.

## Turning on the Unit

1 Press the Home/Power button.

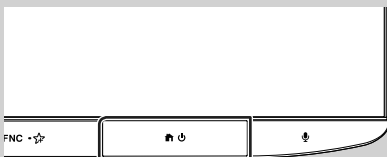

➤ The unit is turned on.

**NOTE**

• If it is your first time to turn the unit on after installation, it will be necessary to perform Initial SETUP (P.7).

● To turn off the unit:

1 Press and hold the Home/Power button.


➤ The unit is turned off.

## Initial Settings

### Initial SETUP


Perform this setup when you use this unit first time.

#### 1 Set each item as follows.

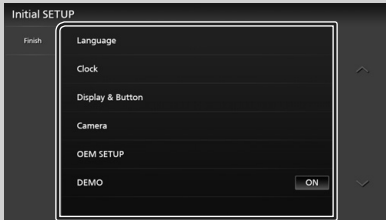

##### ■ Language

Select the language used for the control screen and setting items. Default is "American English(en)".

- ① Touch **Language**.
- ② Touch **Language Select**.
- ③ Select the desired language.
- ④ Touch .

For details, see **System Setup (P.68)** in the Instruction Manual.

##### ■ Clock

Sets the synchronization of the clock and adjusts it.

For details, see **Calendar/clock settings (P.8)**.

##### ■ Display & Button

Set the button illumination color.

- ① Touch **Display & Button**.
- ② Touch **Button Illumination Color**.
- ③ Select the desired color.
- ④ Touch .

For details, see **Display & Button Setup (P.65)** in the Instruction Manual.

##### ■ Camera

Set the parameters for the camera.

- ① Touch **Camera**.
- ② Set each item and touch .

For details, see **Camera Setup (P.47)** in the Instruction Manual.


##### ■ OEM SETUP

This function requires a commercial adaptor. Consult your JVC dealer for details.

##### ■ DEMO

Set the demonstration mode. Default is "ON".

#### 2 Touch **Finish**.

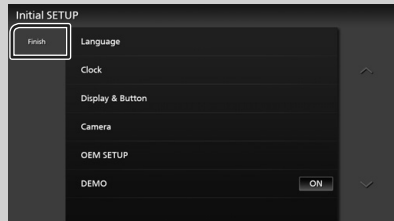

##### NOTE

- These settings can be made from the SETUP menu. See **Setup (P.63)** in the Instruction Manual.

### Security Code Setup

You can set up a security code to protect your receiver system against theft.


When the Security Code function is activated, the code cannot be changed and the function cannot be deactivated. Note that the Security Code can be set with a 4 to 8 digit number of your choice.

##### Preparation

- Set **DEMO** to **OFF** in the System setting menu. See **System Setup (P.68)** in the Instruction Manual.

#### 1 Press the button.

#### 2 Touch .

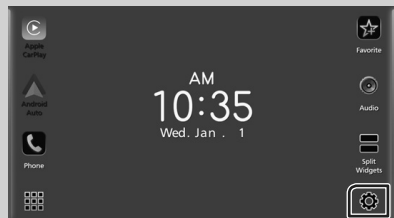

#### 3 Touch **SETUP**.

- SETUP Menu screen appears.



**4** Touch **System**.



➤ System setting menu appears.

**5** Touch **Security Code Set** in the system setting menu.

➤ Security Code Set screen appears.

**6** Enter a security code with 4 to 8 digits and touch **Enter**.



**7** Enter the same code again and touch **Enter**.  
Now, your security code is registered.

**NOTE**

- Touch **BS** to delete the last entry.
- If you enter a different security code, the procedure returns to step 6 (for first code entry).
- If you have disconnected the Receiver from the battery, enter the correct security code as that you have entered in step 6 and touch **Enter**. You can use your receiver.

**To change the security code:**

**1** Touch **Security Code Change** on the Security screen.

➤ Security Code Set screen appears.

**2** Enter the current registered security code and touch **Enter**.

**3** Enter a new security code with 4 to 8 digit number and touch **Enter**.

**4** Enter the same code again and touch **Enter**.  
The new security code is registered.

**To clear the security code:**

**1** Touch **Security Code Cancellation** on the Security screen.

➤ Security Code Set screen appears.

**2** Enter the current registered security code and touch **Enter**.

The security code is cleared.

**Calendar/clock settings**

**1** Press the **Home/Power** button.

**2** Touch **Settings**.

**3** Touch **SETUP**.

➤ SETUP Menu screen appears.

**4** Touch **System**.

➤ System setting menu appears.

**5** Set each item as follows.

Scroll the page to show hidden items.



**■ Time Format**

Select the time display format.  
**12-Hour** (Default)/**24-Hour**

**■ Clock**

**GPS-SYNC** (Default): Synchronizes the clock time with the GPS.

**Manual**: Set the clock manually.

**■ Time Zone**

Select the time zone.

**■ Clock Adjust**

If you select **Manual** for Clock, adjust the date and time manually. **(P.9)**

**NOTE**

- Please set the date and time. If they are not set, some functions may not work.

● **Adjust the date and time manually**

**1** Touch **Clock Adjust** in the System setting menu.

**2** Adjust the date, then adjust the time.



**3** Touch **Set**.

## Adjusting the volume

You can adjust the volume (0 to 40). Press **+** to increase, and press **-** to decrease. Holding **+** increases the volume continuously to level 15.




## Touch screen operations

To perform operations on the screen, you need to touch, touch and hold, flick or swipe to select an item, display a setting menu screen or change pages.


● **Touch**

Touch the screen gently to select an item on the screen.

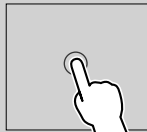

● **Touch and hold**

Touch the screen and keep your finger in place until the display changes or a message is displayed.

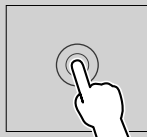


● **Flick**

Slide your finger quickly to the left or right on the screen to change the page. You can scroll a list screen by flicking up/down on the screen.



● **Swipe**


Slide your finger up or down on the screen to scroll the screen.

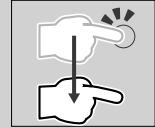

### Gesture Touch Control:

You can also control playback by moving your finger on the touch panel as follows (for some sources, the gesture touch control function is not available).

- Sliding the finger upward/downward: Equivalent to the operation of pressing **+** / **-** (Media). Tuner Preset broadcast stations are switched.
- Sliding the finger leftward/rightward: Equivalent to the operation of pressing **◀◀** / **▶▶**.
- Moving your finger clockwise or counter-clockwise: Increases/decreases the volume.

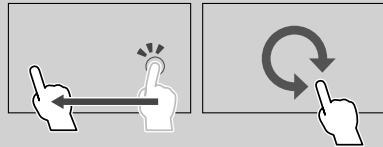

On the HOME screen, you can control the widget by sliding two fingers. **(P.11)**


## Popup menu

- 1 Press the **FNC** /  button.







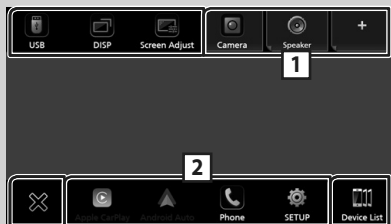



► Popup menu appears.

- 2 Touch to display the popup menu.






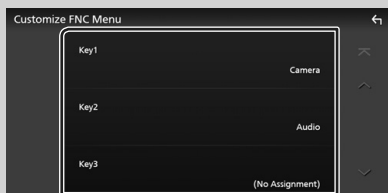
The contents of the menu are as follows.

	<ul style="list-style-type: none"> <li>• Displays the control screen of current source. Icon feature differs depending on the source. This icon is for USB source.</li> </ul>
	<ul style="list-style-type: none"> <li>• Switches between screens. The screen to be switched to depends on the <b>DISP Key</b> setting in the Key Assignment setting menu. See <b>Key Assignment Setup (P.69)</b> in the Instruction Manual.</li> <li>• Touch and hold to turns the screen off.</li> </ul>
	<ul style="list-style-type: none"> <li>• Displays the Screen Adjustment screen.</li> </ul>
	<ul style="list-style-type: none"> <li>• Close the popup menu.</li> </ul>
	<ul style="list-style-type: none"> <li>• Displays the Device List screen.</li> </ul>
	<ul style="list-style-type: none"> <li>• Displays the SETUP Menu screen.</li> </ul>
<b>1</b>	<ul style="list-style-type: none"> <li>• Function key1 to 3: The current screen changes to the one you have set. The function key1 and 2 are set to <b>Camera</b> and <b>Speaker</b> function as default. For the function setting, refer to <b>Customize popup menu functions (P.10)</b>.                             <ul style="list-style-type: none"> <li>– : Displays the view camera screen.</li> <li>– : Displays the Audio screen. (<b>P.21</b>)</li> </ul> </li> <li>• Touch and hold to display the Customize FNC Menu screen.</li> </ul>

- 2 • Short-cut source icons: The source changes to the one you have set with a short-cut. For the short-cut setting, refer to **Customize Short-cut source icons (P.13)**.

## Customize popup menu functions

- 1 Press the  /  button.
- 2 Touch .
- 3 Touch **SETUP**.
- 4 Touch **Key Assignment**.
- 5 Touch **Customize FNC Menu**.
- 6 Select the function key you want to customize.



► The function list screen appears.


- 7 Select a function.



- 8 Touch **Close**.

## HOME screen descriptions


Most functions can be performed from the HOME screen.

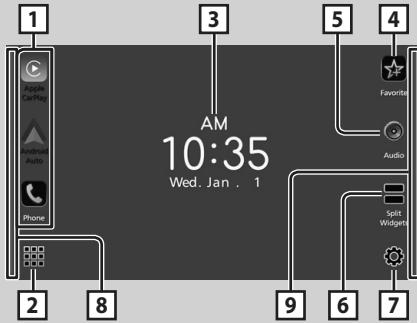

- |   |                                                                                                                                                                                                                                |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | • Short-cut playback source icons (P.13)                                                                                                                                                                                       |
| 2 | • Displays the source selection screen. (P.12)                                                                                                                                                                                 |
| 3 | • Widget<br>– You can change the display to big or split widgets mode by sliding 2 fingers upward/downward.                                                                                                                    |
| 4 | • Displays the screen you have set in the Favorite Customize screen. (P.13)                                                                                                                                                    |
| 5 | • Displays the Audio screen. (P.21)                                                                                                                                                                                            |
| 6 | • Switches between the big and the split widgets mode. (P.11)                                                                                                                                                                  |
| 7 | • Displays the SETUP screen.                                                                                                                                                                                                   |
| 8 | • Swipe your finger from left hand side to right hand side on the screen to display the widget selection menu. (P.11)                                                                                                          |
| 9 | • Swipe your finger from right hand side to left hand side on the screen to display the setting menu for some functions. For details, see <b>Display the setting menu for some functions (P.11)</b> in the Instruction Manual. |

## Display the HOME screen

- 1 Press the button.

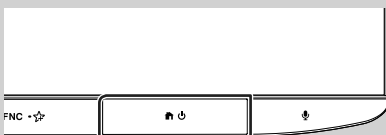

- HOME screen appears.

## Widget

### Big widget



### Split widgets




#### ● To change the widget style

Touch the widget area. You can change the displayed information or design.

#### ● To change the widget

Slide two fingers leftward/rightward.

When the split widgets mode is selected, you should put the fingers on each of the windows before slide.

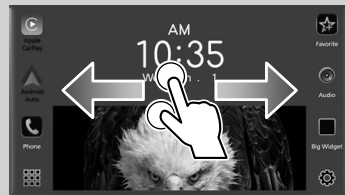

#### ● To select the widget


Swipe your finger from the left edge on the display to right hand side to display the widget selection menu.

Touch to return to the HOME screen.

## Basic Operations

### ● To change the widget format


Slide two fingers upward/downward to switch between the big widget mode and the split widgets mode.

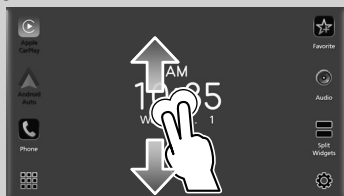

## Source selection screen description

You can display icons of all playback sources and options on the source selection screen.

To change pages, flick your finger leftward/rightward on the screen.

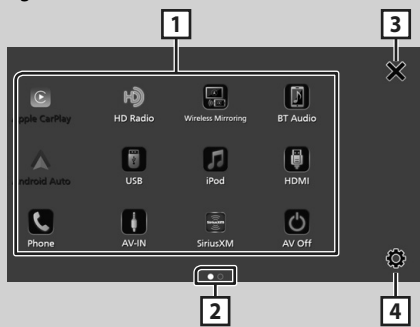

- |   |                                                                                                  |
|---|--------------------------------------------------------------------------------------------------|
| 1 | • Changes playback sources. For playback sources, see <b>Select the playback source (P.12)</b> . |
| 2 | • Page indication                                                                                |
| 3 | • Returns to the previous screen.                                                                |
| 4 | • Displays the SETUP screen.                                                                     |

## Select the playback source

- 1 Press the / button.
  - ▶ HOME screen appears.

- 2 Touch .

From the screen, you can select the following sources and functions.



	• Switches to the Apple CarPlay screen from the connected iPhone.
	• Switches to the Android Auto screen from the connected Android smartphone.
	• Displays the Hands-Free screen. <b>(P.19)</b> When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, displays Bluetooth pairing waiting dialog. <sup>*1</sup>
	• Switches to the HD Radio broadcast. <b>(P.16)</b>
	• Switches to the SiriusXM® satellite radio broadcast.
	• Plays a Bluetooth audio player.
	• Plays an iPod/iPhone. <b>(P.16)</b>
	• Plays files on a USB device. <b>(P.16)</b>
	• Switches to an external component connected to the AV Audio input and the Video input terminal. <sup>*2 *3</sup>
	• Displays the Wireless Mirroring screen.
	• Turns off the AV source. <b>(P.13)</b>


<sup>\*1</sup> When connecting as Apple CarPlay or Android Auto, it works as a phone provided in Apple CarPlay or Android Auto. If Apple CarPlay or Android Auto are connected during talking by the Bluetooth device or iDatalink phone, the current call will be continued.

<sup>\*2</sup> You can use the **AV-IN** source when a cable from a visual source except a camera is connected to the Video input terminal, and a cable is connected to the AV Audio input terminal. **(P.30)**

<sup>\*3</sup> Set "VIDEO IN" to "None" in Camera Assignment Settings. **(P.33)**



## To turn off the AV source

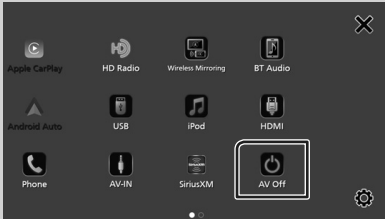- 1 Press the  button.  
➤ HOME screen appears.
- 2 Touch .
- 3 Touch **AV Off**.





## Customize Short-cut source icons


You can arrange the positions of the source icons as you like.

- 1 Press the  button.  
➤ HOME screen appears.
- 2 Touch .
- 3 Touch and hold the icon which you want to move in the customizing mode.
- 4 Drag the icon to the desired position.



## Customize Favorite key

- 1 Press the  button.
- 2 Touch .
- 3 Touch **SETUP**.
- 4 Touch **Key Assignment**.
- 5 Touch **Favorite Customize**.
- 6 Select a favorite function.

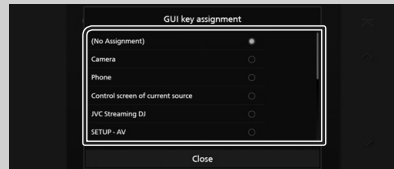

- 7 Touch **Close**.

## Source control screen descriptions

There are some functions which can be performed from most screens.



1 Displays the source selection screen. (P.12)

2 Displays the SETUP Menu screen.

### 3 Short-cut source icons

The source changes to the one you have set with a short-cut. For the short-cut setting, refer to **Customize Short-cut source icons (P.13)**.

### 4 TEL

Connected Bluetooth device information.

### 5 Indicator items

Displays the current source condition and so on.

## List screen

There are some common function keys in the list screens of most sources.

### Display the list screen

1 Touch .  
 > The list screen appears.



1 Displays the list type selection window.

2 **Play etc.**  
 Keys with various functions are displayed here.

- **Play** : Plays all tracks in the folder containing the current track.
- **A-Z** : Jumps to the letter you entered (alphabetical search).
- **Top** **Up** : Moves to the upper hierarchy level.

3 **Text scroll**  
 Scrolls the displayed text.

### 4 **Page scroll**

You can change pages to display more items by touching .


- : Displays the top or bottom page.

5 **Return**  
 Returns to the previous screen.



# USB/iPod

## Connecting a USB device

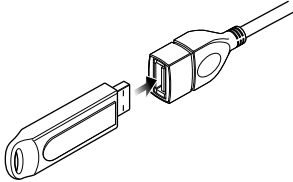- 1 Connect the USB device with the USB cable. (P.31)



### Disconnect the USB device

- 1 Press the  /  button.
- 2 Touch a source other than **USB**.
- 3 Detach the USB device.

### Usable USB device

You can use a mass-storage-class USB device with this unit.

The word "USB device" appearing in this manual indicates a flash memory device.

## Connect iPod/iPhone

### Preparation

- With an iPhone compatible with Apple CarPlay, turn off Apple CarPlay by operating the iPhone at functional setup before connecting iPhone. For details of the setup method, contact the manufacturer of the terminal.
- Only one iPod/iPhone can be connected.

### Wired connection

#### Preparation

- Connect an iPod/iPhone with the KS-U62 (optional accessory) while Apple CarPlay is not connected.

- 1 Connect the iPod/iPhone using the KS-U62. (P.31)

- To disconnect the iPod/iPhone connected with the cable:

- 1 Detach the iPod/iPhone.

### Bluetooth connection

Pair the iPhone through Bluetooth.

#### Preparation

- To connect an iPhone via Bluetooth, register it as a Bluetooth device and do the profile setting for the connection beforehand. See **Switch the connected device (P.53)** in the Instruction Manual and **Register the Bluetooth device (P.18)**.
- Connect an iPhone via Bluetooth while Apple CarPlay and an iPod/iPhone are not connected via USB.

### Connectable iPod/iPhone

The following models can be connected to this unit.

Made for

- iPhone XS Max
- iPhone XR
- iPhone X
- iPhone 8 Plus
- iPhone 8
- iPhone 7 Plus
- iPhone 7
- iPhone SE
- iPhone 6s Plus
- iPhone 6s
- iPhone 6s
- iPod touch (6th generation)



## USB/iPod Basic Operation

Most functions can be controlled from the source control screen and playback screen.

- 1 Press the **HOME** button.
  - HOME screen appears.
- 2 Touch **USB**.
- 3 Touch **USB or iPod**. (P.12)

Control screen



### 1 CODEC

• When a high-resolution source is played, its format information is displayed.

### 2 Operation keys

- **Q** : Searches track/file. For details on search operation.
- **◀▶** : Searches the previous/next track/file.  
Touch and hold to fast forward or fast backward.
- **▶||** : Plays or pauses.
- **🔊** : Touch to attenuate/restore the sound.
- **🔄** : Repeats the current track/folder. Each time you touch the key, repeat modes are switched in the following sequence:  
File repeat ( **🔁** ), Folder repeat ( **📁** ), Repeat all ( **🔄** )
- **🎲** : Randomly plays all tracks in the current folder. Each time you touch the key, random modes are switched in the following sequence:  
File random ( **🎲** ), Random off ( **🔇** )

### 3 Content list

- Touch the left side of the screen to display the Content list. Touch again to close the list.
- Displays the playing list. When you touch a track/file name on the list, playback will start.

## HD Radio™ Tuner

### HD Radio Tuner Basic Operation

To listen to the HD Radio source, touch **HD Radio** icon on the source selection screen. (P.12)

#### NOTE

- HD Radio broadcasting is for North American sales area only.

Control screen




### 1 Operation keys

- **◀▶** : Tunes in a station. The method of switching frequencies can be changed (see **3** Seek mode/Band keys).
- **CH▼ CH▲** : Selects a channel.
- **Q** : Display the Channel List screen.
- **📖** : Display a list of registered bookmarks.
- **🔊** : Touch to attenuate/restore the sound.

### 2 Function panel

Touch the right side of the screen to display the function panel. Touch again to close the panel.

- **10key Direct** : Display the direct station/channel search screen.
- **SETUP** (FM only): Displays the TUNER SETUP screen.
- **AME** : Presets stations automatically. (P.17)
- **RCV** : Change the HD Radio reception mode.  
**Auto** : Switch between digital and analog audio automatically.  
**Digital** : Select this to tune to digital audio only.  
**Analog** : Select this to tune to analog audio only.
- **PTY** (FM only): Searches for a program by program type.


-  : Stores the information about the song being received.
- **Emergency Alerts** : Turn on or off the alert message.
- **Alert Message Log** : Displays the alert message received.

### 3 Seek mode/Band keys

- Touch to switch seek mode in the following sequence: **AUTO1**, **AUTO2**, **MANUAL**.
  - **AUTO1**: Tunes in a station with good reception automatically.
  - **AUTO2**: Tunes in the memorized stations one after another.
  - **MANUAL**: Switches to the next frequency manually.
- Switches bands (between FM and AM).

### 4 Information display

Displays the information on the current station: Frequency and Channel


Touching  allows you to switch between Content A, Content B and Content C.

Content A: Station name, Song Title, Artist Name

Content B: Station Message, Radio Text

Content C: PTY Genre, Album Name

### 5 Preset list

- Touching  allows you to change the display size.
- Recalls the memorized station or channel.
- When touched for 2 seconds, stores the currently being received station or channel in the memory.


### 6 Indicator display

While receiving an HD Radio station, it lights with orange when the audio is digital and lights with gray when it is analog. While receiving an analog station, it is off.

## Memory Operation

### Auto memory

You can store stations with good reception in the memory automatically.


- 1 Touch desired band key.
- 2 Touch  on the right side of the screen. Touch **AME**.
- 3 Touch **Yes**.
  - Auto memory starts.

### Manual memory

You can store the currently being received station or channel in the memory.

- 1 Select the station or channel you wish to store in the memory.
- 2 Touch **FM#** (#:1-15) or **AM#** (#:1-5) in which you want to store the station or channel for 2 seconds until a beep sounds.

### Preset select

- 1 Touch  on the left side of the screen. Select a station or channel from the list.

# Bluetooth Control

## Register the Bluetooth device

It is necessary to register the Bluetooth audio player or smartphone/cell-phone in this unit before using the Bluetooth function.


1 Press the button.

2 Touch .

3 Touch **SETUP**.

➤ SETUP Menu screen appears.

4 Touch **Connections & AV**.

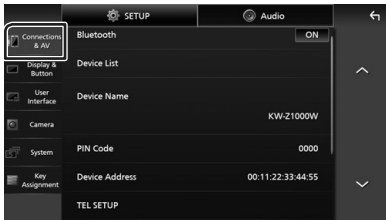

5 Touch **Device List**.

6 Select a device type.

■ **Bluetooth**

To connect as Bluetooth audio source.

■ **Apple CarPlay**

To connect as Apple CarPlay source.

■ **Android Auto**

To connect as Android Auto source.

7 Touch .

➤ Bluetooth pairing waiting dialog appears.



### NOTE


- If an Apple CarPlay device is currently connected, the Apple CarPlay device will be disconnected.
- When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, pressing and holding the button displays Bluetooth pairing waiting dialog.

8 Search for the unit (“KW-Z1000W”) from your smartphone/cell-phone.

Complete steps 8 to 10 within 30 seconds.


9 Operate your smartphone/cell-phone according to the displayed messages.

● Confirm the request both on the smartphone/cell-phone.

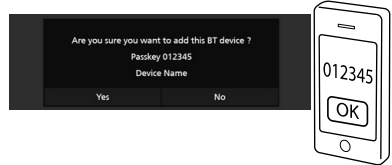

● Input the PIN Code in your smartphone/cell-phone.

 PIN Code is set to “0000” as the default.



10 Touch **Yes**.

When data transmission and connection have completed, the Bluetooth connection icon appears on the screen.

### NOTE

- When registering the iPhone that is available for Apple CarPlay wirelessly, a confirmation message appears. Touch **Yes** to display the Apple CarPlay screen for wireless connection.


## Using the Hands-Free Unit

You can use the telephone function by connecting the Bluetooth telephone to this unit.

### NOTE

- While Apple CarPlay or Android Auto is connected, the Bluetooth Hands-Free function and two Bluetooth devices connections cannot be used. Only the Apple CarPlay or Android Auto Hands-Free function can be used.

### Make a call

1 Press the  button.  
➤ HOME screen appears.

2 Touch .





3 Touch **Phone**. (P.12)  
➤ Hands-Free screen appears.

### NOTE

- If your smartphone/cell-phone supports PBAP, you can display the phonebook and call lists onto the touch panel screen when the smartphone/cell-phone is connected.
  - Phonebook: up to 1000 entries
  - Up to 50 entries including dialed calls, received calls, and missed calls

4 Select a dialing method.



- : Call using call records
- : Call using the phonebook
- : Call using the preset number
- : Call by entering a phone number

● **Select the smartphone/cell-phone to use**  
When you connect two smartphones/cell-phones

1) Touch   to select the phone you want to use.

## Call using call records

1 Touch .

2 Select the phone number from the list.



## Call using the phonebook


1 Touch .

2 Touch  **A-Z**.


3 Select the initial.

- Characters with no corresponding name will not appear.
- A first character with an accent character such as "ü" can be searched for with a non-accent character "u". A character with an accent character in a sentence cannot be searched for.

4 Select the person you want to call from the list.

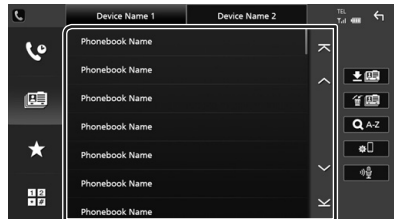

5 Select the phone number from the list.

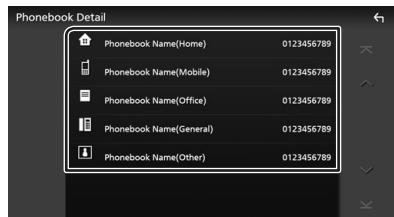



**NOTE**

- You can sort the phone numbers in the list by last name or first name. For details, see **Hands-Free Setup (P.62)** in the Instruction Manual.
- When Russian or Hebrew is selected in "Language select" (**P.68**) in the Instruction Manual, you can switch between English keyboard and the selected language keyboard.
- You can search with 3 initial letters on the English keyboard and 1 initial letter on the Russian / Hebrew keyboard.



**Call using the preset number**

- 1 Touch .
- 2 Touch the name or phone number.

**Call by entering a phone number**

- 1 Touch .
- 2 Enter a phone number with number keys.
- 3 Touch .

**Receive a call**

- 1 Touch  to answer a phone call or  to reject an incoming call.



**NOTE**

- When shifting the gear to the reverse (R) position and monitoring the picture from the rear view camera, this screen does not appear even if a call comes in.
- The portrait registered in the phonebook is displayed while making/receiving calls and during a call.
- If you edit the phonebook on the connected device side after downloading the phonebook, the portrait may not be displayed depending on the edited content. It is recommended that you download the phonebook whenever you edit it.
- The image quality of a displayed portrait may depend on a connected device.

**To end call**

- 1 While talking, touch .

**Operations during a call**



● **Adjust the volume of your voice**


- 1) Touch **Speech Quality**.
- 2) Touch ◀ or ▶ for **Microphone Level**.

● **Adjust the receiver volume**

Press the - or + button.



● **Mute your voice**

Touch  to mute or not to mute your voice.

● **Output the dial tone**


Touch **DTMF** to display the tone input screen. You can send tones by touching desired keys on the screen.


● **Switching between speaking voice output destinations**

Touching  /  each time switches speaking voice output destinations between the smartphone/cell-phone and the speaker.

# Controlling Audio


You can adjust various settings such as audio balance or subwoofer level.

- 1 Press the  button.
- 2 Touch .
- 3 Touch **Audio**.

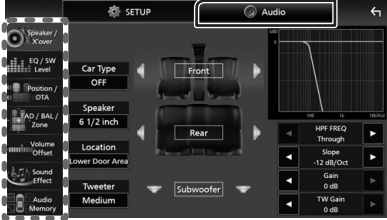

## Controlling General Audio

- 1 Touch **FAD / BAL / Zone**.
- 2 Set each parameter as follows.

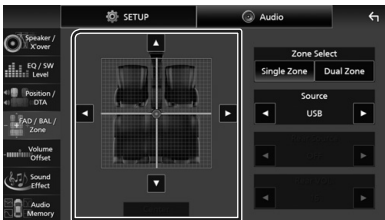

◀ and ▶ adjust the left and right volume balance.

▲ and ▼ adjust the front and rear volume balance.


### ■ Center

Clear the adjustment.

## Equalizer Control

You can adjust equalizer by selecting the optimized setting for each category.

- 1 Touch **EQ / SW Level**.
- 2 Touch the screen and set the Graphic Equalizer as desired.

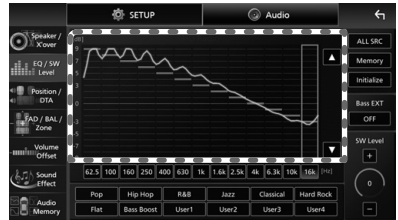

### ■ Gain level (area in dotted frame)

Adjust the gain level by touching each frequency bar.

You can select a frequency bar and adjust its level by ▲, ▼.

### ■ ALL SRC

Apply the adjusted equalizer curve to all sources. Touch **ALL SRC** and then touch **OK** on the confirmation screen.

### ■ Memory

Saves the adjusted equalizer curve as "User1" to "User4".

### ■ Initialize

Initialize (flatten) the current EQ curve.

### ■ Bass EXT (Bass Extend Settings)

When turned on, the frequencies lower than 62.5 Hz is set to the same gain level (62.5 Hz).

### ■ SW Level

Adjust the subwoofer volume. This setting is not available when Subwoofer is set to "None".

### ■ Pop / Hip Hop / R&B / Jazz / Classical / Hard Rock / Flat / Bass Boost / User1 / User2 / User3 / User4

Recall the preset EQ curve.

# Connection/Installation

This section is for the professional installer. For safety's sake, leave wiring and mounting to professionals. Consult the car audio dealer.

## Before Installation

Before installation of this unit, please note the following precautions.

### ▲ WARNINGS

- If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse.

### ▲ CAUTION


- Install this unit in the console of your vehicle. Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.

### NOTE

- Mounting and wiring this product requires skills and experience. For best safety, leave the mounting and wiring work to professionals.
- Do not install the unit if it becomes an obstacle to driver performance.
- Adjust the panel position not to become an obstacle to driver performance.
- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- If the power is not turned ON ("There is an error in the speaker wiring. Please check the


connections." is displayed), the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.

- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, such as with battery wires, the battery may be drained.
- If the console has a lid, the lid will not be closed even when the unit is installed correctly.
- If the fuse blows, first make sure the wires are not touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the ⊖ wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the ⊕ connector of the left speaker to a front output terminal, do not connect the ⊖ connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Mount the unit so that the mounting angle is 30° or less.
- This unit has the cooling fan to decrease the internal temperature. Do not mount the unit in a place where the cooling fan of the unit is blocked. Blocking these openings will inhibit the cooling of the internal temperature and result in malfunction.

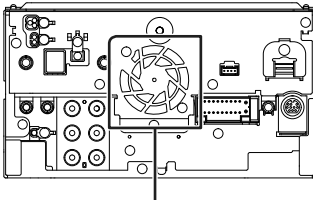

Cooling fan


- Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scars, damage, or failure may result.
- Reception may drop if there are metal objects near the Bluetooth/Wi-Fi antenna.

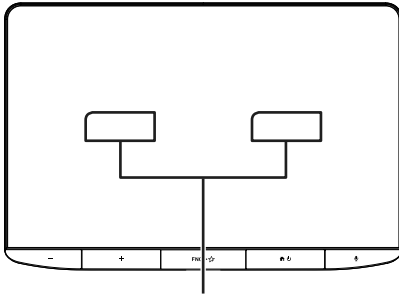

Bluetooth/Wi-Fi antenna unit

● **Forward and Lateral Fields of Vision**

- To determine driver's forward and lateral fields of vision under normal conditions, place a pole (directly visible from the front or visible through the car rear-view mirror) as shown.

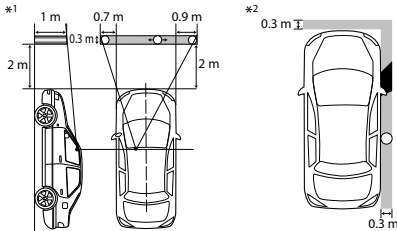

- : Pole (height: 1m, diameter: 0.3m)
- : Field of vision from steering position
- : Exempted area (pole size is subject to regulation)

- For right hand drive vehicles, standards are reversed.

\*1 The pole must be visible from the driver's position as direct forward field of vision.

 

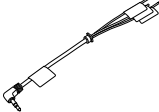 
\*2 The pole must be directly visible or indirectly visible through the mirror, etc. from the driver's position.

■ **Supplied accessories for installation**

①		x1
②		x1
③		x1
④		x6
⑤		x6
⑥		x1
⑦		x1
⑧		x1
⑨		x2
⑩		x1
⑪		x6



## Connection/Installation

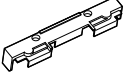⑫		x1
⑬	 (Ø3 x 6 mm) (Black)	x2
⑭		x1

### Installation procedure




- 1) To prevent a short circuit, remove the key from the ignition and disconnect the ⊖ terminal of the battery.
- 2) Remove the vehicle parts for installing the unit and connecting wires to terminal.
- 3) Make the proper input and output wire connections for each unit.
- 4) Connect the speaker wires of the wiring harness.
- 5) Connect wiring harness wires in the following order; ground, battery, ignition.
- 6) Determine the height of the display unit and position of the slider. See **Distance between the display unit and the main unit (P.25)**.
- 7) Connect the wiring harness connector to the unit.
- 8) Install the main unit to the vehicle.
- 9) Reinstall the vehicle parts.
- 10) Install the display unit.
- 11) Reconnect the ⊖ terminal of the battery.
- 12) Perform the Initial Setup.  
See **Initial SETUP (P.7)**.

## Installing the unit

### Confirm the installing position of the display unit







#### ● Vehicles cannot be installed

It may be possible to install if it can avoid the following by adjustment for slider position and display height.

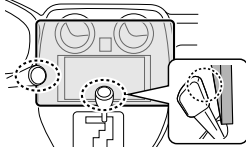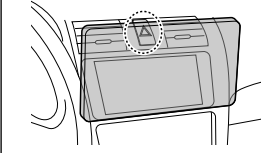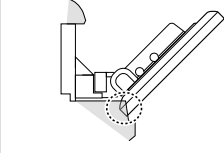Lever operations are interfered such as shift lever, wiper lever, winker lever when install the unit.	A hazard switch is hidden from a driver seat.	The display unit hits a panel on the vehicle.
		

#### ● Distance between the display unit and the main unit

    Adjust slider position and display height so that it does not interfere with display movement.

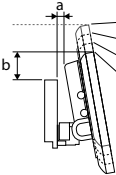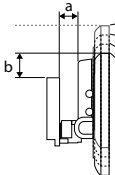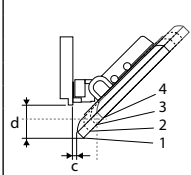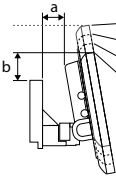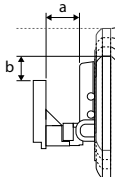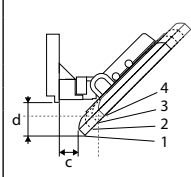Slider position	Display angle				Display height			
	-10°	0°	45°		1	2	3	4
Back position				-10°	a 10			
				b	38.1	50.9	63.8	76.5
	0°	a 26.7						
		b	34.7	47.7	60.7	73.7		
	45°	c 5.7 14.4 24.1 33.4						
		d	45.8	36.6	27.4	18.2		
Forward position				-10°	a 30.1			
				b	38.1	50.9	63.8	76.5
	0°	a 46.7						
		b	34.7	47.7	60.7	73.7		
	45°	c 25.7 34.9 44.1 53.3						
		d	45.8	36.6	27.4	18.2		






Unit: mm

### Examples

     Cluster panel on the vehicle

Slider in back position

Slider in forward position




- C'=50mm;  
Slider position: Forward position  
Display height: Set only "4"

- C'=30mm;  
Slider position: Back position  
Display height: Set only "4"


Slider position: Forward position  
Display height: Set "2"~"4"

### Positioning the slider in forward


1 Remove the four screws from the bottom of the main unit.

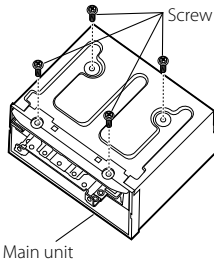


2 Remove the two cover for back position, and then remove the two hexagon head screws from the bracket for back position.

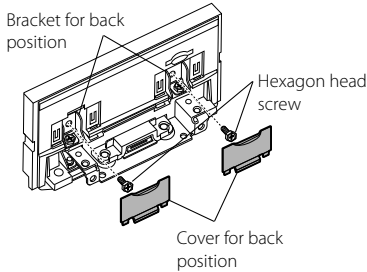


3 Pull the slider block forward and remove the two hexagon head screws to remove the bracket for back position.

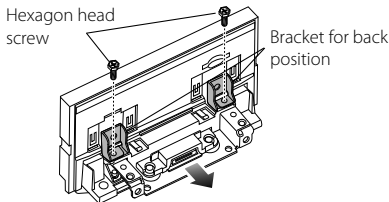


4 Install the bracket for forward position (accessory ⑩) each side so that its projections are aligned with the slots on the main unit.

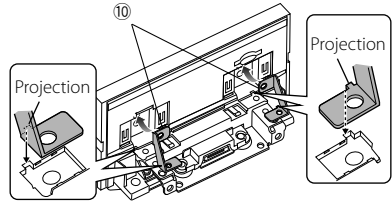


5 Fix the bracket for forward position to the slider block with the two hexagon head screws. Push the slider block until it stops and then fix the bracket for forward position to the main unit with the two hexagon head screws.

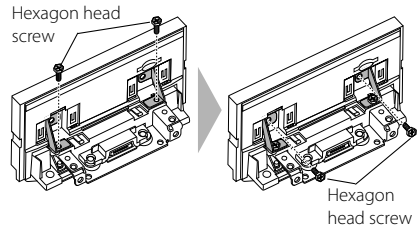

6 Reinstall the four screws to the bottom of the main unit.

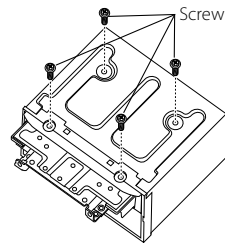


7 Install the cover for forward position (accessory ⑨) to two locations, as shown.

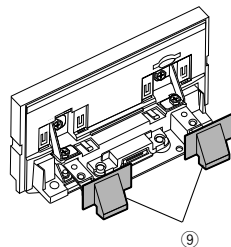


## ■ Adjusting the display height

- 1 Remove the four flat head screws from both sides.

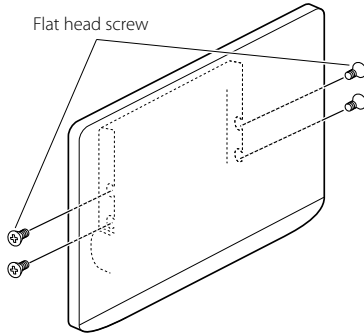

- 2 Adjust the display height according to the screw hole position. Default is "1".

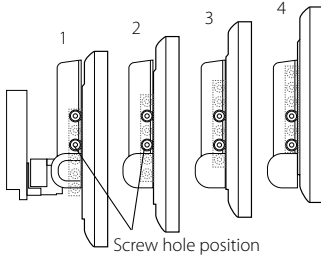

- 3 Reinstall the four flat head screws on both sides and fix the display.

### NOTE


- Fix with flat head screws correctly. After installing the display unit (accessory ⑧) to the main unit, tilt the display forward until it stops and confirm that the display unit (accessory ⑧) does not hit vehicle parts. If the display unit hits vehicle parts, adjust the display height again.

## ■ GPS antenna

GPS antenna is installed inside of the car. It should be installed as horizontally as possible to allow easy reception of the GPS satellite signals.

To mount the GPS antenna inside your vehicle:

- 1) Clean your dashboard or other surface.
- 2) Remove the separator of the metal plate (accessory ⑦).
- 3) Press the metal plate (accessory ⑦) down firmly on your dashboard or other mounting surface. You can bend the metal plate (accessory ⑦) to conform to a curved surface, if necessary.
- 4) Remove the separator of the GPS antenna (accessory ⑥), and stick the antenna to the metal plate (accessory ⑦).

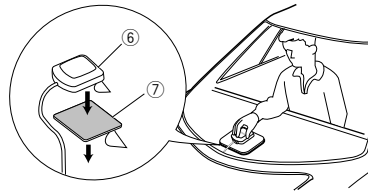

### NOTE


- Use the supplied GPS antenna. Using the GPS antenna other than the supplied one may cause a drop in positioning accuracy.
- Depending on the type of car, reception of the GPS satellite signals might not be possible with an inside installation.
- Please install this GPS antenna in an area away from any antennas that are used with CB radios or satellite televisions.
- The GPS antenna should be installed at a position that is spaced at least 12 inch (30 cm) from smartphone/cell-phone or other transmitting antennas. Signals from the GPS satellite may be interfered with by these types of communication.
- Painting the GPS antenna with (metallic) paint may cause a drop in performance.

## ■ Microphone unit

- 1) Check the installation position of the microphone (accessory ③).
- 2) Clean the installation surface.
- 3) Remove the separator of the microphone (accessory ③), and stick the microphone to the place shown below.
- 4) Wire the microphone cable up to the unit with it secured at several positions using tape or other desired method.

## Connection/Installation

- Adjust the direction of the microphone (accessory ③) to the driver.

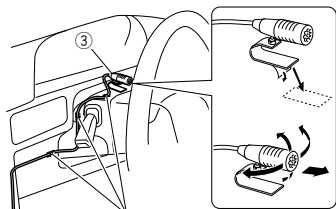


Fix a cable with a commercial item of tape.

## ■ Installing the main unit


### NOTE

- Determine the slider position before installing the main unit. (P.26) The slider position cannot be changed after installing to the vehicle.
- Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (eg, the sound may skip).


- Remove parts that interfere with installing such as a panel on the vehicle.
- Install the car bracket to the main unit.

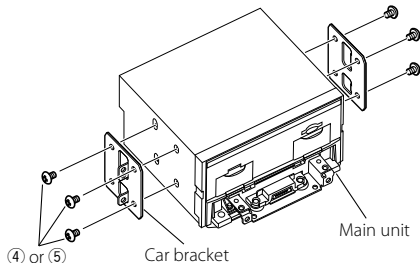

- Connect the wiring harness wires and peripheral equipment.
- Install the main unit to the vehicle.
- Reinstall the removed parts such as a panel on the vehicle.

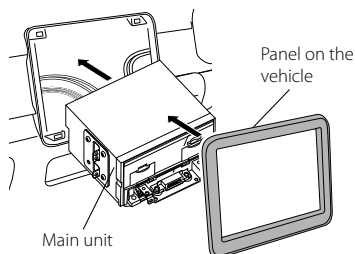


- Install the display unit (accessory ⑧) to the main unit.

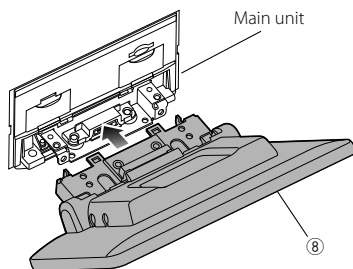


### NOTE

- If the display unit hits a panel on the vehicle, adjust the display height by referring to **Adjusting the display height (P.27)**.

- Fix the display unit with six hexagon head screws (accessory ①).

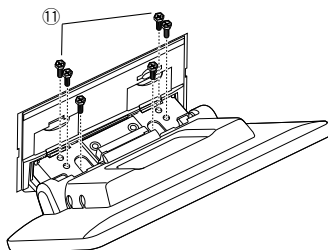

- Attach the protective cover (accessory ⑫) to coupling part, and then fix it with two binding head screws (accessory ⑬).

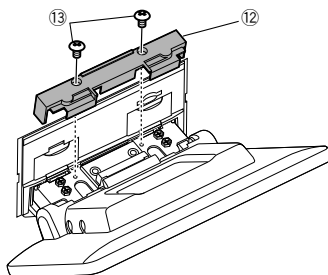


### NOTE


- If the protective cover (accessory ⑫) is not attached, this unit will not turn on. Even if the unit is turned on, the power may be turned off halfway. Be sure to attach the protective cover (accessory ⑫).

- Raise the display manually.


## Connecting wires to terminals

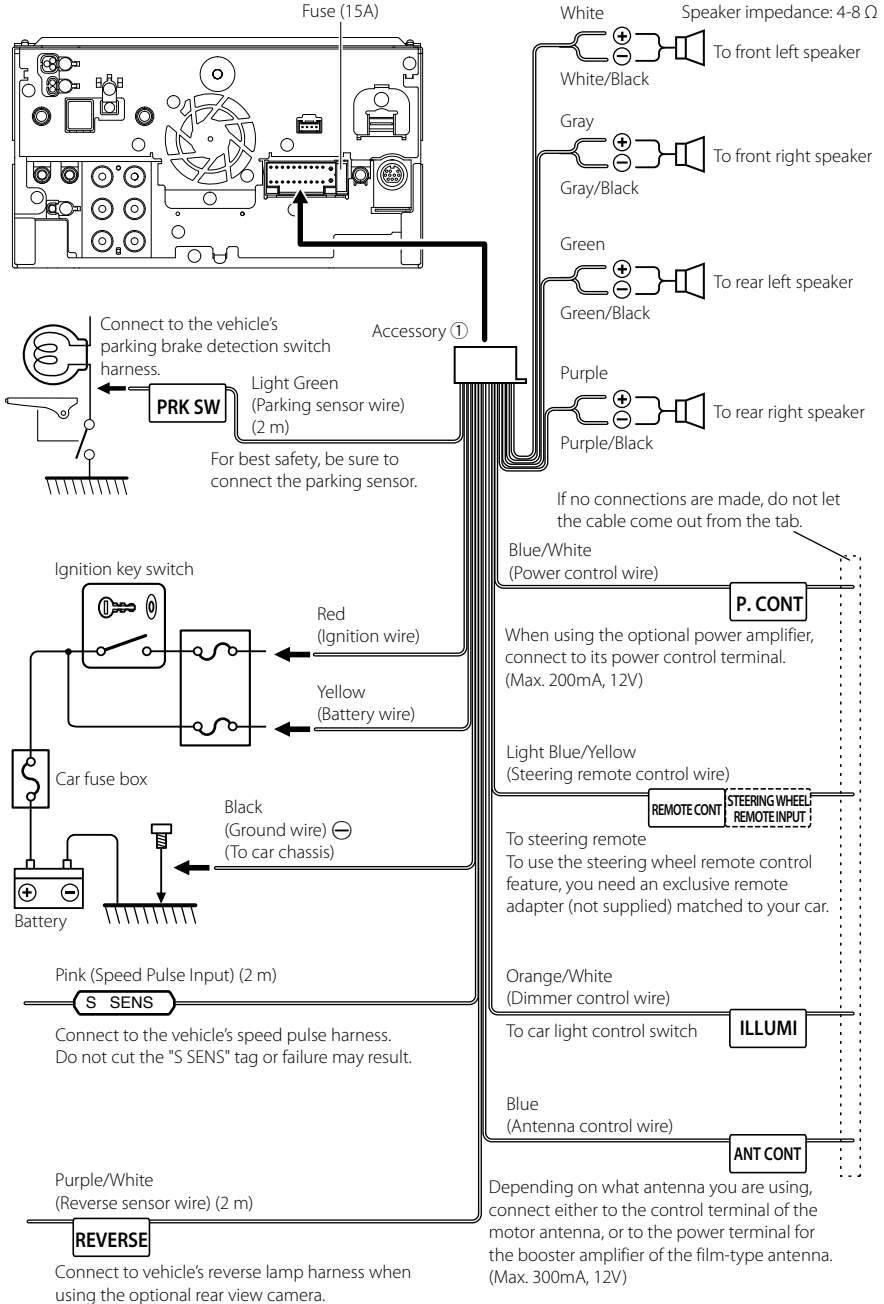

### 3-way speaker system setup

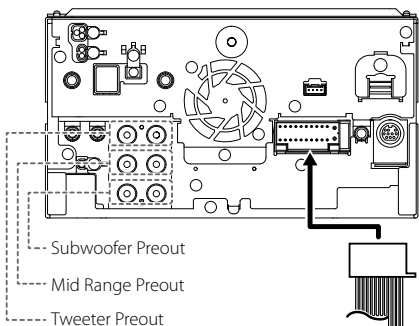


When connecting to an external amplifier, connect its ground wire to the car's chassis to avoid damaging the unit.

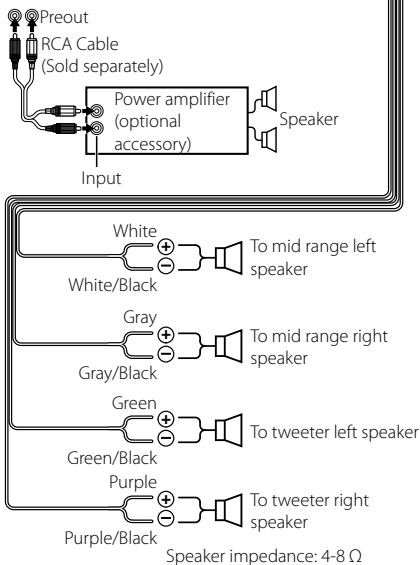



**NOTE**

- For speaker system setup, see **3-way speaker system setup (P.71)** in the Instruction Manual.
- For speaker setup and crossover setup, see **Speaker / X'over setup (P.72)** in the Instruction Manual.
- For how to connect speaker wires to terminals other than speaker terminals and Preout terminals, see **Connecting the system and external components (P.30)** and **Connecting wires to terminals (P.29)**.

### Connecting the system and external components

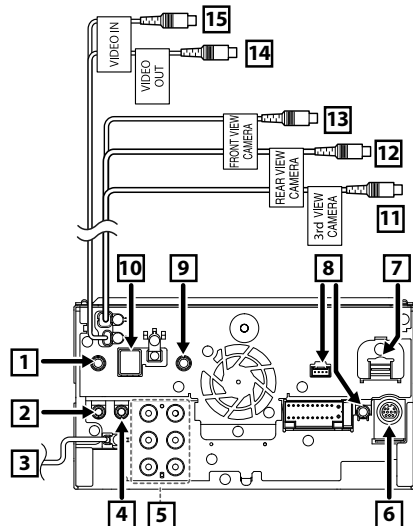


- |   |                                                                                                                                                                                      |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Accessory ⑭:Steering remote harness<br>Connect to vehicle's steering remote harness.<br>Contact your JVC dealer for details.                                                         |
| 2 | Accessory ③: Bluetooth Microphone                                                                                                                                                    |
| 3 | FM/AM antenna input                                                                                                                                                                  |
| 4 | AV Audio output (ø3.5 mini jack)                                                                                                                                                     |
| 5 | When connecting to an external amplifier,<br>connect its ground wire to the car's chassis to<br>avoid damaging the unit.                                                             |
| 6 | SiriusXM Connect Vehicle Tuner connector<br>For more information on how to install the<br>SiriusXM Connect Vehicle tuner, consult the<br>installation guide included with the tuner. |

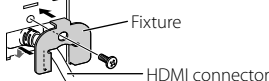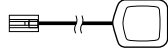  7	<p>HDMI input Use HDMI cable (commercially available). When you connect the cable to HDMI terminal, remove the fixture. After connecting the cable, put the fixture again.</p>  <p>Fixture HDMI connector</p>
8	iDatalink connector
9	AV Audio input (ø3.5 mini jack)
10	<p>Accessory ⑥: GPS Antenna Use the supplied GPS antenna. Using the GPS antenna other than the supplied one may cause a drop in positioning accuracy.</p> 
11	<p>3rd view camera input (Yellow) For more information, see <b>To set up the camera assignment settings (P.33)</b>.</p>
12	Rear view camera input (Yellow)
13	<p>Front view camera input (Yellow) *1 For more information, see <b>To set up the camera assignment settings (P.33)</b>.</p>
14	Video output (Yellow)
15	Video input (Yellow)

\*1 Side (Left or Right) view camera can also be connected to 9 or 13.

### Connecting a USB device

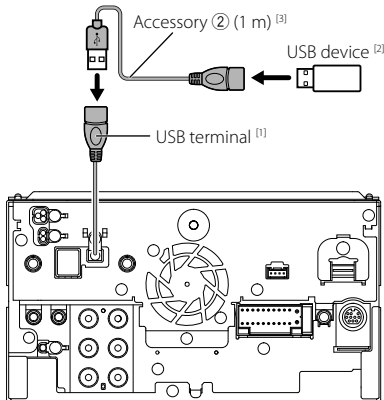


<sup>[1]</sup> USB maximum power supply current :  
DC 5 V  $\approx$  1.5 A

<sup>[2]</sup> Sold separately

<sup>[3]</sup> See **Securing the USB extension cable (P.31)**.


### Securing the USB extension cable

Secure the USB extension cable with insulating tape or the like so that its connectors are not disconnected.

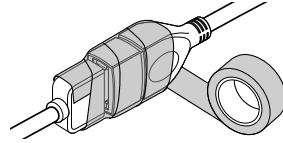

### Connecting an iPod/iPhone

#### Lightning connector

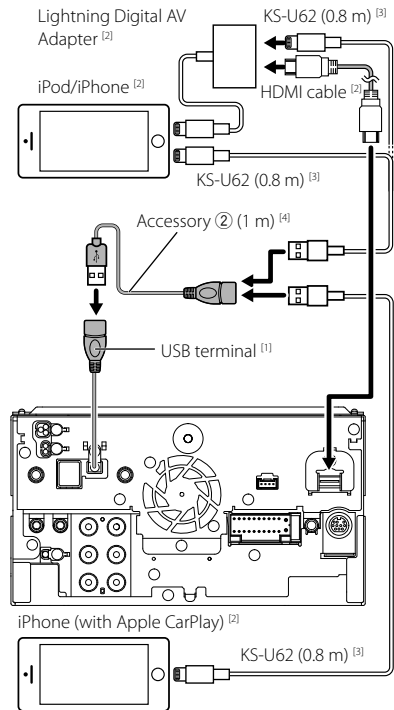

<sup>[1]</sup> USB maximum power supply current :  
DC 5 V  $\approx$  1.5 A

<sup>[2]</sup> Sold separately

<sup>[3]</sup> Optional accessory


<sup>[4]</sup> See **Securing the USB extension cable (P.31)**.



## Connection/Installation

### Connecting an Android smartphone

Android smartphone  
(with Android Auto)<sup>[2]</sup>

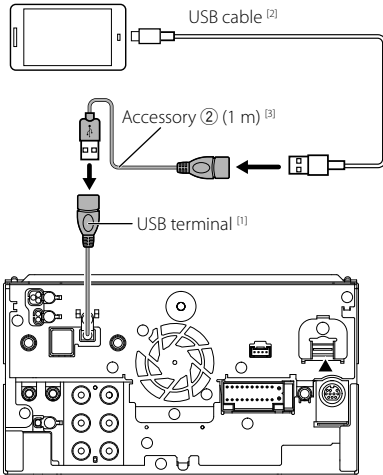


<sup>[1]</sup> USB maximum power supply current :  
DC 5 V  $\overline{\text{---}}$  1.5 A

<sup>[2]</sup> Sold separately

<sup>[3]</sup> See **Securing the USB extension cable (P.31)**.

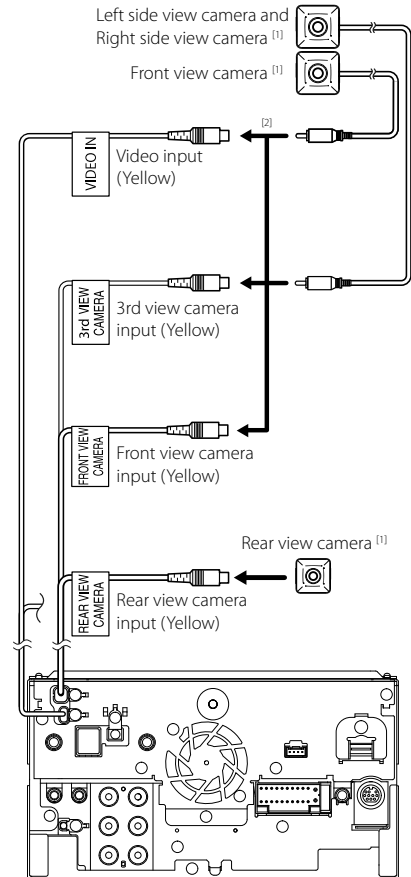

### Connecting the camera




<sup>[1]</sup> Sold separately

<sup>[2]</sup> See **To set up the camera assignment settings (P.33)**.

## ■ To set up the camera assignment settings

- 1 Press the  button.  
 > HOME screen appears.
- 2 Touch .
- 3 Touch **SETUP**.  
 > SETUP Menu screen appears.
- 4 Touch **Camera**.  
 > Camera setting menu appears.
- 5 Touch **Camera Assignment Settings**.
- 6 Select the item to set up.
  - **FRONT VIEW CAMERA**  
 Set the camera assignment from view camera connected to Front view camera input terminal.
  - **3rd VIEW CAMERA**  
 Set the camera assignment from view camera connected to 3rd view camera input terminal.
  - **VIDEO-IN**  
 Set the camera assignment from view camera connected to Video input terminal.

## 7 Select the view camera to set up.

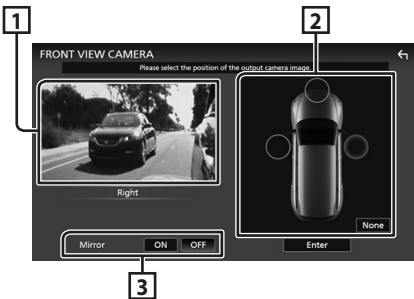

- 1 Picture from view camera
- 2 Camera position
- 3 Mirroring settings

## 8 Touch **Enter**.

# Appendix

## Note for specifications

### ■ Bluetooth section

- Frequency : 2.402 – 2.480 GHz
- RF Output Power (E.I.R.P.) : +4 dBm (MAX), Power Class 2

### ■ General

- Operating Voltage : 12 V DC car battery
- Speaker Impedance : 4 – 8 Ω

## ■ Copyrights

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by JVCKENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- DSD, LDAC and LDAC logo are trademarks of Sony Corporation.
- Hi-Res Audio logo and Hi-Res Audio Wireless logo are used under license from Japan Audio Society.



- Windows Media is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.  
This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.
- This software is based in part on the work of the independent JPEG Group.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPhone, iPod, iPod touch, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- Apple, Siri, Apple CarPlay, Apple Music and Apple CarPlay logo are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.
- HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see <https://dts.com/patents>. HD Radio and the HD, HD Radio, and "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.
- Google, Android, Google Play and Android Auto are trademarks of Google LLC.  
To use Android Auto on your car display, you'll need an Android Auto compatible vehicle or aftermarket stereo, an Android phone running Android 5.0 or higher, and the Android Auto app.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

- The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
- This product includes FontAvenue® fonts licenced by NEC Corporation. FontAvenue is a registered trademark of NEC Corporation.



- This product includes "Ubiquitous QuickBoot™" technology developed by Ubiquitous Corp. Ubiquitous QuickBoot™ is a trademark of Ubiquitous Corp. Copyright© 2017 Ubiquitous Corp. All rights reserved.  
■ ■ ■ ■ ■  
Ubiquitous
- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (j) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (j) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE <HTTPS://WWW.MPEGLA.COM>
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (j) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (j) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE <HTTPS://WWW.MPEGLA.COM>
- THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE <HTTPS://WWW.MPEGLA.COM>

- libFLAC

Copyright (C) 2000-2009 Josh Coalson  
 Copyright (C) 2011-2013 Xiph.Org Foundation  
 Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libvorbis

Copyright (c) 2002-2008 Xiph.org Foundation  
 Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY

DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libogg

Copyright (c) 2002, Xiph.org Foundation  
 Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## ■ FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

## ■ ISED CAUTION

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

## ▲ CAUTION

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

## ■ Attention de l'ISED

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage.
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## ▲ ATTENTION

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles des radioélectriques (RF) de la FCC lignes directrices d'exposition et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISED. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.

### Supplier's Declaration of Conformity

Trade Name: JVC  
Products: MONITOR WITH RECEIVER  
Model Name: KW-Z1000W  
Responsible Party: JVCKENWOOD USA  
CORPORATION  
2201 East Dominguez Street,  
Long Beach, CA 90810, U.S.A.  
PHONE: 310 639-9000

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

### ■ CALIFORNIA, USA

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply.

See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

### ■ Información acerca de la eliminación de equipos eléctricos y electrónicos al final de la vida útil (aplicable a los países que hayan adoptado sistemas independientes de recogida de residuos)



Los productos con el símbolo de un contenedor con ruedas tachado no podrán ser desechados como residuos domésticos.

Los equipos eléctricos y electrónicos al final de la vida útil, deberán ser reciclados en instalaciones que puedan dar el tratamiento adecuado a estos productos y a sus subproductos residuales correspondientes. Póngase en contacto con su administración local para obtener información sobre el punto de recogida más cercano. Un tratamiento correcto del reciclaje y la eliminación de residuos ayuda a conservar los recursos y evita al mismo tiempo efectos perjudiciales en la salud y el medio ambiente.

### ■ Informação sobre a eliminação de pilhas

Este produto não deve ser eliminado como lixo doméstico geral. Devolva a pilha usada ao revendedor ou entidade autorizada para que a mesma seja devolvida ao fabricante ou importador.

A reciclagem e a eliminação de lixo de maneira apropriada ajudarão a conservar os recursos naturais ao mesmo tempo que prevenirão os efeitos prejudiciais à nossa saúde e ao meio ambiente.

### ■ Para cumplimiento de la IFT:

“La operación de este equipo esta sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia,

incluyendo la que pueda causar su operación no deseada.”

**JVC**

## TO OUR VALUED CUSTOMER

THANK YOU FOR PURCHASING THIS JVC PRODUCT.  
WE WANT TO HELP YOU ACHIEVE A PERFECT EXPERIENCE.

**NEED HELP ON HOW TO HOOK UP?  
NEED ASSISTANCE ON HOW TO OPERATE?  
NEED TO LOCATE A JVC SERVICE CENTER?  
LIKE TO PURCHASE ACCESSORIES?**

**JVC IS HERE TO HELP!**  
**TOLL FREE: 1 (800)252-5722**  
**<http://www.us.jvckenwood.com>**

Remember to retain your Bill of Sale for Warranty Service.  
**Do not attempt to service the product yourself**

### Caution

To prevent electrical shock, do not open the cabinet.  
There are no user serviceable parts inside.  
Please refer to qualified service personnel for repairs.

### PRODUCT REGISTRATION

We suggest that you register your product since it will enable us to contact you directly if it is ever necessary to correct a safety related condition in your product. You can register at <http://www.us.jvckenwood.com>  
Please note that failure to register does not diminish any of your rights during the warranty period.

# JVC

## LIMITED WARRANTY

ONLY FOR PRODUCT PURCHASED IN U.S.A.

JVCKENWOOD USA Corporation warrants this product and all parts thereof, except as set forth below **ONLY TO THE ORIGINAL RETAIL PURCHASER** to be **FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP** from the date of original purchase for the period shown below. ("The Warranty Period")

**PARTS 2 YRS / LABOR 2 YRS : Car audio ARSENAL series**

**PARTS 1 YR / LABOR 1 YR : All other car audio products**

**THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN THE COMMONWEALTH OF PUERTO RICO.**

### WHAT WE WILL DO:

If this product is found to be defective within the warranty period, JVC will repair or replace defective parts with new or rebuilt equivalents at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products may be brought to a JVC authorized service center on a carry-in basis.

### WHAT YOU MUST DO FOR WARRANTY SERVICE:

Please do not return your product to the retailer. Instead, return your product to the JVC authorized service center nearest you. If shipping the product to the service center, please be sure to package it carefully, preferably in the original packaging, and include a brief description of the problem(s) and a copy of the proof of purchase to verify purchase date. Please call 1-800-252-5722 to locate the nearest JVC authorized service center. Service locations can also be obtained from our website <http://www.us.jvckenwood.com>.

If you have any questions concerning your JVC Product, please contact our Customer Care Center at 800-252-5722

### WHAT IS NOT COVERED:

This limited warranty provided by JVC does not cover:

1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model or serial number has been altered, tampered with, defaced or removed;
2. Initial installation, installation and removal from cabinets or mounting systems.
3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
4. Damage that occurs in shipment, due to act of God, and cosmetic damage;
5. Signal reception problems and failures due to line power surge;
6. User Removal Memory Devices/Video Pick-up Tubes/CCD Image Sensors are covered for 90 days from the date of purchase;
7. Accessories;
8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase);
9. Products used for commercial purposes, including, but not limited to rental.
10. Loss of data resultant from malfunction of hard drive or other data storage device;

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. JVC SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE, OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### JVCKENWOOD USA Corporation

PO Box 22745, 2201 East Dominguez Street, Long Beach, CA90801-5745  
<http://www.us.jvckenwood.com>

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAIL OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

### For customer use:

Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No.:

Serial No.:

Purchase date:

Name of dealer:



**JVC****WARRANTY**

Warranty applies only to PRODUCT distributed in Canada by JVCKENWOOD CANADA INC.

JVCKENWOOD CANADA INC. (hereafter called "JVC") gives the following express warranty for each new JVC product distributed in Canada by JVC and sold by an authorized JVC dealer. JVC warrants that this JVC product is free, under normal use and maintenance, from any defects in material and workmanship subject to the following terms and conditions:

1. To Obtain Warranty Service:
  - (a) JVC product requiring service must be presented together with proof of purchase.
  - (b) The JVC product must be brought in for service to an authorized JVC Service Centre.
2. Limitation:
 

This Warranty shall not apply to:

  - (a) Repair or replacement of any cabinets, batteries, plates, connection cords, antennas, dust covers, knobs, speaker grills, speaker cones, projection screens, projection screen savers, and all accessories.
  - (b) Any defects caused or repairs required as a result of misuse, abusive operation, negligence, improper use and/or insufficient care.
  - (c) Any defect caused or repairs required as a result of not following the instructions in the operation manual.
  - (d) Any JVC product tampered with, adjusted or repaired by any party other than JVC or authorized JVC Service Centre personnel.
  - (e) Any JVC products on which the serial number has been defaced, modified or removed.
  - (f) Maintenance, cleaning or periodic check-up
  - (g) Conversion to foreign or domestic voltage or frequency.
  - (h) Any JVC product without the Canadian Electrical Safety Regulations ID.
  - (i) Any JVC products used for commercial or institutional, rental, or display purposes.  
Parts ..... 1 year (except video head - 90 days)  
Labour ... 90 days
  - (j) Any JVC product which has been resold and no longer owned by the original purchaser.
  - (k) Product purchased from "outside Canada", "bankruptcy" or "liquidator".
  - (l) Any defects caused by fire, flood, lightning, power surge, or other events beyond the control of JVC.
- (m) FOR AUTO PRODUCTS  
Warranty does not cover elimination of car static or electrical interferences, cleaning of head, adjustments, or labour cost for the removal or reinstallation of the unit for repair.

3. Standards:
 

If any defects should be found in a JVC product within the applicable terms, necessary repairs shall be made at no cost to the purchaser for parts or labour when JVC acknowledges that such defects are due to faulty material or workmanship.
4. Exclusion of All Other Express Warranties:
 

This warranty constitutes the entire express warranty given by JVC for JVC products and no dealer or service centre personnel or his, its or their agent or employee is, or are authorized to extend or enlarge this warranty on behalf of JVC.
5. Disclaimer of Consequential Damage:
 

To the extent the law permits JVC disclaims any responsibility for loss of time or use of its product, transportation costs, or any other indirect, incidental or consequential damage or inconvenience.

**WARRANTY TERM (VALID FROM THE DATE OF PURCHASE)**

Product	Parts (Years)	Labour (Years)
Projection TV In-Home Service Colour TV In-Home (25" and above) D-ILA Rear Projection In-Home Service LCD TV In-Home Service (25" and above)	1	1
* In-Home service to be provided where available. Where it is not available, the purchaser must assume the responsibility and expense for the proper packing, shipment and all costs associated with the delivery of the equipment to and from the closest JVC Authorized Service Centre.		
Receivers and Home Speakers purchased separately. Front Projection and Car Audio "ARSENAL" Series	2	2
AC Adapters, Remote controls, Headphones, Microphones and Projector lamps	90 days	90 days
Wood Cone Speakers	5	5
All Other Categories	1	1

**JVCKENWOOD CANADA INC.**

6070 Kestrel Road, Mississauga, Ontario, L5T 1S8 Canada  
 TEL: (905) 670-3381 FAX: (905)670-7244 Service toll free #: 1-800-964-2650  
<http://www.jvc.ca> E-mail: [service@jvc.ca](mailto:service@jvc.ca)

**Product Registration**

We suggest that you register your product since it will enable us to contact you directly if it is ever necessary to correct a safety related condition in your product. You can register at <http://www.jvc.ca/www/Support/Warranty.aspx>

**For customer use:**

Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No.: \_\_\_\_\_ Serial No.: \_\_\_\_\_  
 Purchase date: \_\_\_\_\_ Name of dealer: \_\_\_\_\_

**GARANTIE**

La garantie s'applique seulement aux PRODUITS distribués au Canada par JVCKENWOOD CANADA INC.

JVCKENWOOD CANADA INC. (ci-après appelé "JVC") énonce la garantie expresse suivante pour tout nouveau produit JVC distribué au Canada par JVC et vendu par un détaillant JVC autorisé. JVC vous garantit que ce produit est déchargé, sous utilisation et entretien normal, de tout défaut matériel et de fabrication sous réserve des modalités et conditions suivantes:

1. Pour obtenir un service de garantie:
  - (a) Les produits JVC nécessitant un service doit être présentée avec la preuve d'achat.
  - (b) Le produit JVC doit être apporté pour service chez un centre de service JVC autorisé.
2. Restrictions:
 

Cette garantie ne s'applique pas aux:

  - (a) Réparation ou remplacement de tout cabinet, batteries, panneau avant, cordons de raccord, antennes, housses de protection, boutons, couvercles de hautparleur, cônes de hautparleur, écrans de projection, protecteurs d'écran de projection et tous les accessoires.
  - (b) Tous défauts occasionnés ou réparations requises suite à une utilisation abusive, mauvaise, négligente et/ou une utilisation incorrecte.
  - (c) Tous défauts occasionnés ou réparations requises suite à l'omission de suivre les recommandations du manuel d'instruction.
  - (d) Tout produit JVC altéré, ajusté ou réparé par tout autre entreprise que JVC ou un centre de service d'entretien ou de service autorisé JVC.
  - (e) Tout produit JVC dont le numéro de série a été altéré, modifié ou enlevé.
  - (f) L'entretien, les vérifications périodiques et nettoyage.
  - (g) La conversion à une fréquence ou une tension étrangère ou domestique.
  - (h) Tout produit JVC n'ayant pas le signe d'identification qui conforme aux normes électriques Canadiennes (CSA).
  - (i) Pour tout produit utilisé à des fins commerciales, institutionnelles, de location ou utilisé à des fins d'étalage.  
Pièces ..... 1 An (Excepté les têtes vidéo- 90 jours)  
Main d'oeuvre ... 90 Jours
  - (j) Tout produit JVC ayant été revendu et qui n'est plus la propriété de l'acheteur original.
  - (k) Produit acheté à "l'extérieur du Canada", provenant d'une "faillite" ou d'un "liquidateur".
  - (l) Tout dommage causé par le feu, une inondation, un éclair, une surtension ou tout autre événement hors du contrôle de JVC.
- (m) POUR LES PRODUITS D'AUTOMOBILE  
La garantie ne couvre pas l'élimination d'interférences statiques ou électriques de la voiture, le nettoyage de tête, les ajustements et les coûts de main d'œuvre associés à l'enlèvement ou à la réinstallation de l'unité pour réparation.
3. Critères:
 

Si un produit JVC s'avérait défectueux, selon les conditions applicables, les réparations nécessaires seront effectués sans coûts additionnels à l'acheteur pour les pièces et la main d'œuvre lorsque JVC reconnaît que de tels défauts sont causés par une défectuosité de matériel ou de fabrication.
4. Exclusion de toutes autres garanties expresses :  
Cette garantie constitue l'entière garantie expresse donnée par JVC pour les produits JVC. Nul représentant ou employé d'un détaillant ou d'un service d'entretien n'est autorisé à prolonger cette garantie au nom de JVC.
5. Dénégation des dommages indirects:  
Dans la mesure permise par la loi, JVC nie toute responsabilité pour perte de temps ou d'usage de ses produits, des coûts de transport ou tout autre dommage ou inconvénient indirect, accidentel et conséquent.

**CONDITIONS DE GARANTIE (VALABLE À PARTIR DE LA DATE D'ACHAT)**

Produit	Pieces (Années)	Main-D'oeuvre (Années)
Écrans de projection Service à Domicile Écrans de TV Couleur Service à Domicile (25" et plus) TV projection arrière D-ILA Service à Domicile Écrans de LCD Service à Domicile (25" et plus)	1	1
* Service à domicile fourni par un détaillant disponible. S'il n'y a pas de service JVC disponible à proximité, l'acheteur doit assumer la responsabilité et les coûts pour un emballage adéquat, l'expédition, ainsi que tous les coûts associés à la livraison de l'équipement chez et depuis le détaillant JVC autorisé le plus près pour un service d'entretien.		
Récepteurs et Hauts-Parleurs achetés séparément, Projecteur Avant et Audio d'Auto de Série "ARSENAL"	2	2
Adaptateurs AC, Télécommande, Casque D'écoute, Microphones et Lampe de Projecteur	90 Jours	90 Jours
Enceinte à Cône en Bois	5	5
Toutes les autres catégories	1	1

**JVCKENWOOD CANADA INC.**

6070 Kestrel Road, Mississauga, Ontario, L5T 1S8 Canada  
 TEL: (905) 670-3381 FAX: (905)670-7244 Service toll free #: 1-800-964-2650  
<http://www.jvc.ca> E-mail: [service@jvc.ca](mailto:service@jvc.ca)

**Enregistrement du produit**

Nous vous conseillons d'enregistrer votre produit, car il nous permettra de vous contacter directement si jamais elle est nécessaire pour corriger un problème lié à la sécurité de votre produit. Vous pouvez vous inscrire à <http://www.jvc.ca/www/Support/Warranty.aspx>

**Pour l'utilisation des clients:**

Entrez ci-dessous le numéro de modèle et le numéro de série qui se trouve soit à l'arrière, en bas ou sur le côté de l'armoire. Conservez ces informations pour référence future.

No. de modèle: \_\_\_\_\_ No. de série: \_\_\_\_\_  
 Date d'achat: \_\_\_\_\_ Nom du revendeur: \_\_\_\_\_